

## SafeNet Luna Network HSM 7.1

### LUNACM COMMAND REFERENCE GUIDE



## Document Information

<b>Product Version</b>	7.1
<b>Document Part Number</b>	007-013576-003
<b>Release Date</b>	13 December 2019

## Revision History

<b>Revision</b>	<b>Date</b>	<b>Reason</b>
Rev. A	13 December 2019	Initial release.

## Trademarks, Copyrights, and Third-Party Software

Copyright 2001-2019 Thales. All rights reserved. Thales and the Thales logo are trademarks and service marks of Thales and/or its subsidiaries and are registered in certain countries. All other trademarks and service marks, whether registered or not in specific countries, are the property of their respective owners.

**Table 1: Third-party software used in this product**

<b>Software</b>	<b>License and copyright</b>
editline	This product incorporates editline licensed under Apache v2.0 Open Software. Copyright 1992, 1993 Simmule Turner and Rich Salz. All rights reserved. You can obtain the full text of the Apache v2.0 Open Software license at the following URL: <a href="https://www.apache.org/licenses/LICENSE-2.0">https://www.apache.org/licenses/LICENSE-2.0</a>
libFDT	Dual License Choice of BSD or GPL-2.0 Copyright (C) 2006 David Gibson, IBM Corporation.
libsodium	ISC License (ISCL) Copyright (C) 2013-2016
Linux Kernel	GPL-2.0
OpenSSH	This product uses a derived version of OpenSSH Copyright 1995 Tatu Ylonen , Espoo, Finland. All rights reserved . Copyright 1995, 1996 by David Mazieres . Copyright 1983, 1990, 1992, 1993, 1995 The Regents of the University of California. All rights reserved You can obtain the full text of the OpenSSH license at the following URL: <a href="https://www.openbsd.org/policy.html">https://www.openbsd.org/policy.html</a>

Software	License and copyright
OpenSSL	SSLeay License Copyright (C) 1995-1998 Eric Young (eay@cryptsoft.com) OpenSSL license Copyright (C) 1998-2002 The OpenSSL Project
Software implementation of SHA2	Proprietary license Copyright (C) 2002, Dr Brian Gladman, Worcester, UK.
Software implementation of AES	Proprietary license Copyright (C) 2001, Dr Brian Gladman <brg@gladman.uk.net>, Worcester, UK.

## Disclaimer

All information herein is either public information or is the property of and owned solely by Thales and/or its subsidiaries who shall have and keep the sole right to file patent applications or any other kind of intellectual property protection in connection with such information.

Nothing herein shall be construed as implying or granting to you any rights, by license, grant or otherwise, under any intellectual and/or industrial property rights of or concerning any of Thales's information.

This document can be used for informational, non-commercial, internal, and personal use only provided that:

- > The copyright notice, the confidentiality and proprietary legend and this full warning notice appear in all copies.
- > This document shall not be posted on any publicly accessible network computer or broadcast in any media, and no modification of any part of this document shall be made.

Use for any other purpose is expressly prohibited and may result in severe civil and criminal liabilities.

The information contained in this document is provided "AS IS" without any warranty of any kind. Unless otherwise expressly agreed in writing, Thales makes no warranty as to the value or accuracy of information contained herein.

The document could include technical inaccuracies or typographical errors. Changes are periodically added to the information herein. Furthermore, Thales reserves the right to make any change or improvement in the specifications data, information, and the like described herein, at any time.

Thales hereby disclaims all warranties and conditions with regard to the information contained herein, including all implied warranties of merchantability, fitness for a particular purpose, title and non-infringement. In no event shall Thales be liable, whether in contract, tort or otherwise, for any indirect, special or consequential damages or any damages whatsoever including but not limited to damages resulting from loss of use, data, profits, revenues, or customers, arising out of or in connection with the use or performance of information contained in this document.

Thales does not and shall not warrant that this product will be resistant to all possible attacks and shall not incur, and disclaims, any liability in this respect. Even if each product is compliant with current security standards in force on the date of their design, security mechanisms' resistance necessarily evolves according to the state of the art in security and notably under the emergence of new attacks. Under no circumstances, shall Thales be held liable for any third party actions and in particular in case of any successful attack against systems or equipment incorporating Thales products. Thales disclaims any liability with respect to security for

direct, indirect, incidental or consequential damages that result from any use of its products. It is further stressed that independent testing and verification by the person using the product is particularly encouraged, especially in any application in which defective, incorrect or insecure functioning could result in damage to persons or property, denial of service, or loss of privacy.

All intellectual property is protected by copyright. All trademarks and product names used or referred to are the copyright of their respective owners. No part of this document may be reproduced, stored in a retrieval system or transmitted in any form or by any means, electronic, mechanical, chemical, photocopy, recording or otherwise without the prior written permission of Thales Group.

## **Regulatory Compliance**

This product complies with the following regulatory regulations. To ensure compliancy, ensure that you install the products as specified in the installation instructions and use only Thales-supplied or approved accessories.

---

### **USA, FCC**

This equipment has been tested and found to comply with the limits for a “Class B” digital device, pursuant to part 15 of the FCC rules.

---

### **Canada**

This class B digital apparatus meets all requirements of the Canadian interference-causing equipment regulations.

---

### **Europe**

This product is in conformity with the protection requirements of EC Council Directive 2014/30/EU. This product satisfies the CLASS B limits of EN55032.

# CONTENTS

Preface: About the LunaCM Command Reference Guide .....	8
Customer Release Notes .....	8
Audience .....	8
Document Conventions .....	9
Notes .....	9
Cautions .....	9
Warnings .....	9
Command Syntax and Typeface Conventions .....	9
Support Contacts .....	10
Chapter 1: Using LunaCM .....	11
Accessing LunaCM .....	11
Scripted Use .....	12
LunaCM Features .....	13
Case Insensitivity .....	13
Quotation Marks .....	14
Operation .....	14
Chapter 2: LunaCM Commands .....	15
appid .....	17
appid close .....	18
appid info .....	19
appid open .....	20
appid set .....	21
clientconfig .....	22
clientconfig deleteserver .....	23
clientconfig deploy .....	24
clientconfig listservers .....	26
clientconfig restart .....	27
clientconfig verify .....	28
file display .....	29
hagroup .....	30
hagroup addmember .....	32
hagroup addstandby .....	34
hagroup creategroup .....	35
hagroup deletegroup .....	37
hagroup halog .....	38
hagroup haonly .....	40
hagroup interval .....	41
hagroup listgroups .....	42
hagroup recover .....	43

---

hagroup recoverymode .....	44
hagroup removemember .....	45
hagroup removestandby .....	46
hagroup retry .....	47
hagroup synchronize .....	48
partition .....	49
partition addsize .....	51
partition archive .....	53
partition archive backup .....	55
partition archive contents .....	59
partition archive delete .....	61
partition archive list .....	63
partition archive restore .....	65
partition changepolicy .....	67
partition clear .....	68
partition clone .....	69
partition contents .....	71
partition init .....	72
partition restoresim3file .....	74
partition setlegacydomain .....	75
partition showinfo .....	77
partition showmechanism .....	78
partition showpolicies .....	80
ped .....	84
ped connect .....	85
ped disconnect .....	87
ped get .....	88
ped set .....	89
ped show .....	90
remotebackup start .....	91
role .....	92
role changepw .....	93
role createchallenge .....	95
role deactivate .....	96
role init .....	97
role list .....	98
role login .....	99
role logout .....	101
role recoveryinit .....	102
role recoverylogin .....	103
role resetpw .....	104
role setdomain .....	105
role show .....	106
slot .....	107
slot configset .....	108
slot configshow .....	110
slot list .....	111

---

slot partitionlist .....	113
slot set .....	114
slot showempty .....	115
stc .....	116
stc disable .....	118
stc enable .....	119
stc identitycreate .....	120
stc identitydelete .....	121
stc identityexport .....	122
stc identityshow .....	123
stc partitionderegister .....	124
stc partitionregister .....	125
stc status .....	126
stc tokeninit .....	127
stc tokenlist .....	129
stcconfig .....	130
stcconfig activationtimeoutset .....	132
stcconfig activationtimeoutshow .....	133
stcconfig cipherdisable .....	134
stcconfig cipherenable .....	135
stcconfig ciphershow .....	136
stcconfig clientderegister .....	137
stcconfig clientlist .....	138
stcconfig clientregister .....	139
stcconfig hmacdisable .....	140
stcconfig hmacenable .....	141
stcconfig hmacshow .....	142
stcconfig partitionidexport .....	143
stcconfig partitionidshow .....	144
stcconfig rekeythresholdset .....	145
stcconfig rekeythresholdshow .....	146

# PREFACE:

## About the LunaCM Command Reference Guide

This document describes how to access and use the LunaCM command line tool, with detailed syntax descriptions and examples for each available command. It contains the following chapters:

- > ["Using LunaCM" on page 11](#)
- > ["LunaCM Commands" on page 15](#)

This preface also includes the following information about this document:

- > ["Customer Release Notes" below](#)
- > ["Audience" below](#)
- > ["Document Conventions" on the next page](#)
- > ["Support Contacts" on page 10](#)

For information regarding the document status and revision history, see ["Document Information" on page 2](#)

## Customer Release Notes

---

The customer release notes (CRN) provide important information about this release that is not included in the customer documentation. Read the CRN to fully understand the capabilities, limitations, and known issues for this release. You can view or download the latest version of the CRN from the Technical Support Customer Portal at <https://supportportal.gemalto.com>.

## Audience

---

This document is intended for personnel responsible for maintaining your organization's security infrastructure. This includes SafeNet Luna HSM users and security officers, key manager administrators, and network administrators.

All products manufactured and distributed by Thales Group are designed to be installed, operated, and maintained by personnel who have the knowledge, training, and qualifications required to safely perform the tasks assigned to them. The information, processes, and procedures contained in this document are intended for use by trained and qualified personnel only.

It is assumed that the users of this document are proficient with security concepts.



## Document Conventions

This document uses standard conventions for describing the user interface and for alerting you to important information.

### Notes

Notes are used to alert you to important or helpful information. They use the following format:

**NOTE** Take note. Contains important or helpful information.

### Cautions

Cautions are used to alert you to important information that may help prevent unexpected results or data loss. They use the following format:

**CAUTION!** Exercise caution. Contains important information that may help prevent unexpected results or data loss.

### Warnings

Warnings are used to alert you to the potential for catastrophic data loss or personal injury. They use the following format:

**\*\*WARNING\*\*** Be extremely careful and obey all safety and security measures. In this situation you might do something that could result in catastrophic data loss or personal injury.

## Command Syntax and Typeface Conventions

Format	Convention
<b>bold</b>	<p>The bold attribute is used to indicate the following:</p> <ul style="list-style-type: none"> <li>&gt; Command-line commands and options (Type <b>dir /p</b>.)</li> <li>&gt; Button names (Click <b>Save As</b>.)</li> <li>&gt; Check box and radio button names (Select the <b>Print Duplex</b> check box.)</li> <li>&gt; Dialog box titles (On the <b>Protect Document</b> dialog box, click <b>Yes</b>.)</li> <li>&gt; Field names (<b>User Name</b>: Enter the name of the user.)</li> <li>&gt; Menu names (On the <b>File</b> menu, click <b>Save</b>.) (Click <b>Menu &gt; Go To &gt; Folders</b>.)</li> <li>&gt; User input (In the <b>Date</b> box, type <b>April 1</b>.)</li> </ul>
<i>italics</i>	<p>In type, the italic attribute is used for emphasis or to indicate a related document. (See the <i>Installation Guide</i> for more information.)</p>

Format	Convention
<variable>	In command descriptions, angle brackets represent variables. You must substitute a value for command line arguments that are enclosed in angle brackets.
[ <b>optional</b> ] [<optional>]	Represent optional <b>keywords</b> or <variables> in a command line description. Optionally enter the keyword or <variable> that is enclosed in square brackets, if it is necessary or desirable to complete the task.
{ <b>a b c</b> } {<a> <b> <c>}	Represent required alternate <b>keywords</b> or <variables> in a command line description. You must choose one command line argument enclosed within the braces. Choices are separated by vertical (OR) bars.
[ <b>a b c</b> ] [<a> <b> <c>]	Represent optional alternate keywords or variables in a command line description. Choose one command line argument enclosed within the braces, if desired. Choices are separated by vertical (OR) bars.

## Support Contacts

If you encounter a problem while installing, registering, or operating this product, please refer to the documentation before contacting support. If you cannot resolve the issue, contact your supplier or [Thales Customer Support](#).

Thales Customer Support operates 24 hours a day, 7 days a week. Your level of access to this service is governed by the support plan arrangements made between Thales and your organization. Please consult this support plan for further information about your entitlements, including the hours when telephone support is available to you.

### Customer Support Portal

The Customer Support Portal, at <https://supportportal.thalesgroup.com>, is where you can find solutions for most common problems. The Customer Support Portal is a comprehensive, fully searchable database of support resources, including software and firmware downloads, release notes listing known problems and workarounds, a knowledge base, FAQs, product documentation, technical notes, and more. You can also use the portal to create and manage support cases.

**NOTE** You require an account to access the Customer Support Portal. To create a new account, go to the portal and click on the **REGISTER** link.

### Telephone

The support portal also lists telephone numbers for voice contact ([Contact Us](#)).

# CHAPTER 1:

## Using LunaCM

**NOTE** This is a general-purpose tool intended for use across SafeNet HSM versions. It may reference mechanisms and features that are not available on all SafeNet products.

This chapter describes how to access and use the LunaCM utility. It contains the following topics:

- > ["Accessing LunaCM" below](#)
- > ["LunaCM Features" on page 13](#)

## Accessing LunaCM

The LunaCM utility (LunaCM) is the client-side administrative command interface for SafeNet HSMs.

From a client/host computer, LunaCM can interact with, and perform operations on any, or all, of the following:

- > Internally installed SafeNet Luna PCIe HSMs (HSM card)
- > Locally USB-connected SafeNet Luna USB HSMs
- > Remotely located SafeNet Luna Network HSM application partitions, made available by a NTLS or STC network link between the distant HSM appliance and partition(s) and the local client computer.

### To access LunaCM:

1. Open a Command Prompt or console window.
2. Go to the SafeNet Luna HSM Client software directory and start the LunaCM utility:

<b>Windows</b>	<pre>C:\&gt; cd c:\Program Files\SafeNet\LunaClient C:\Program Files\SafeNet\LunaClient\&gt; lunacm</pre>
<b>Linux/AIX</b>	<pre>&gt; cd /usr/safenet/lunaclient/bin &gt; ./lunacm</pre>
<b>Solaris</b>	<pre>&gt; cd /opt/safenet/lunaclient/bin &gt; ./lunacm</pre>

Some preliminary status information is displayed, followed by the `lunacm:>` command-line prompt.

3. You can now issue any LunaCM utility command to manage your SafeNet HSM. For a summary, type "help" and press **Enter**.

**NOTE** For SafeNet Luna PCIe HSM and SafeNet Luna USB HSM, LunaCM is used to administer both the HSM as HSM SO, and the application partition. For SafeNet Luna Network HSM, LunaCM is used to manage application partitions (assuming an NTLS or STC link between your SafeNet Luna HSM Client computer and the SafeNet Luna Network HSM appliance). LunaCM is not used to perform HSM-wide administration by the HSM SO on SafeNet Luna Network HSM - for that you must log into a LunaSH session via SSH.

LunaCM depends on the availability of HSM partitions in order to be useful. If no application partition has been created, then only the HSM SO (administrative) partition is available, against which to run commands.

If the `Chrystoki.conf / Crystoki.ini` configuration file [Presentation] setting "ShowAdminTokens=" is set to no, then the HSM administrative partition/slot is also unavailable, and LunaCM is not usable. If you know you have a working SafeNet Luna PCIe HSM or SafeNet Luna USB HSM attached to your Client computer and LunaCM shows no usable commands, then verify in your `Chrystoki.conf` or `Crystoki.ini` file that "ShowAdminTokens" is not set to no.

## Scripted Use

This document generally describes LunaCM being used via its own persistent interface or shell, where the tool is launched and remains open for administrative users to issue commands at their convenience. However, for headless operation and other administrative scenarios, it is possible to launch LunaCM from a Windows or UNIX/Linux command prompt to execute a single command and immediately close. Similarly, it is possible to invoke LunaCM by referring it to a file that contains a list of commands to execute. Some command-line launch-time flags are provided.

**lunacm** [-c <command>] [-q <command>] [-s <slot id> <command>] [-e <script filename>] [-f <script filename>]

Option	Description
<b>Non-repeating, single-instance commands</b>	
. <command>	If no option is specified, LunaCM launches its full, persistent shell interface.
-c <command>	This option displays the banner and runs a single instance of a LunaCM command, and then returns to the operating system command prompt.
-q <command>	This option runs a single instance of a LunaCM command, and then returns to the operating system command prompt. The banner is suppressed.
-s <slot number> <command>	This option runs a single instance of a LunaCM command against the specified slot, and then returns to the operating system command prompt. The banner is suppressed.
<b>Scripting options</b>	
-e <script filename>	Launch LunaCM with this option followed by the name of a file containing a list of LunaCM commands, with one command per line. This option halts when the first error is encountered. Use this option when debugging your scripts.

Option	Description
<b>-f</b> <script filename>	Launch LunaCM with this option followed by the name of a file containing a list of LunaCM commands, with one command per line. This option continues after any command that results in an error (as long as the command concludes by returning control).

**NOTE** When preparing a script file, any commands with a **-force** option should include that option to suppress prompts (like "Type 'proceed'...") that could halt the progression of scripted commands. If a command requires inputs (like passwords, domains, etc), those parameters must be provided as part of the command.

## LunaCM Features

- > Command history is supported, using up/down arrows, **Home**, **End**, **Page Up**, **Page Down**.
- > Non-ambiguous command shortnames are supported. You must type the exact shortname that is listed in the syntax help, or else type the full command with no abbreviations. Additionally, for syntax help, the alias **?** is available.
- > Commands and options are case-insensitive.
- > Limited scripting is possible.

However, handling of return codes is not fully supported at this time. The utility is not a full-featured shell, so features like command-completion or parsing of partial commands are not supported.

## Case Insensitivity

Commands and options entered by the user are not sensitive to case. If a user accidentally leaves the Caps-Lock key on, or by habit capitalizes some commands or options, they should not have to re-enter or edit the command line.

Command parameters, however, are passed to command executables with the same case as entered on the command line. Command executables must deal with case issues as appropriate for the command.

For example, you can type:

```
lunacm:> partition login -password mYpa55word!
```

or

```
lunacm:> partition LOGIN -PASSWorD mYpa55word!
```

and successfully login to your Partition. Note that the command and sub-commands can be any combination of uppercase and lowercase letters. The command parser interprets it correctly. However, the password string itself is passed on to the access-control handler, which is very particular about lettercase. Therefore, an item like a password must be typed letter-perfect with the appropriate case applied.

**NOTE** For Trusted Path Authenticated HSM, do not type the password - you are directed to the Luna PED, which prompts for the required PED key.

## Quotation Marks

---

It might happen that a command parameter consists of two or more parts, separated by spaces. This can be misconstrued by the command parser as two (or more) additional parameters. To ensure that a multi-part parameter is parsed as a single entity, enclose it in quotation marks " ".

## Operation

---

LunaCM's cache can become unsynchronized if you access an HSM in more than one application session and make administrative changes.

For example, you might attempt a role login against a connected SafeNet Luna Network HSM application partition, in a lunacm instance that had been open for a while, and you (or someone else) had just made a partition policy change in lunash, such as changing max bad login attempts from default 10 down to (say) 3. The policy change comes into effect immediately, though any other open sessions might be unaware of the change. A failed attempt in the open lunacm instance might state that you still had nine unsuccessful attempts remaining, when in fact you had only two, because the lunacm instance was not up-to-date with the change made via lunash.

Relaunching lunacm, or using "clientconfig restart" updates the cache and fixes the mismatch.

# CHAPTER 2:

## LunaCM Commands

This chapter describes the commands available in LunaCM. The commands are described in alphabetical order and provide:

- > A brief description of the command function
- > The command syntax and parameter descriptions
- > Usage examples

LunaCM opens with a slot list, showing brief descriptions of the HSM administrative or application partitions that are visible to the library, in the order that they are detected. Those include:

- > SafeNet Luna Network HSM application partitions (if any), network-connected to the host computer via NTLS or STC channels
- > SafeNet Luna PCIe HSMs (if any) installed within the host computer
- > SafeNet Luna USB HSMs (if any) connected via USB to the host computer

By default, LunaCM shows the lowest-numbered slot first. Local HSMs (SafeNet Luna PCIe HSM or SafeNet Luna USB HSM) might have an HSM administrative slot (for the HSM SO) or an application partition slot, or both, so LunaCM leaves gaps in the slot numbering to allow for the possible slots on a given HSM.

**NOTE** Login state of a slot is preserved until explicitly ended (such as with "logout" or "deactivate" or closing the application). Therefore, login state persists when you switch slots in LunaCM. If you were logged into the partition in slot 1, then set current slot to slot 2, then came back to slot 1, the login state for the partition in slot 1 would still be in force, with no need to reinstate it.

The following table provides links to the top-level commands in the hierarchy. Select a link to display the command syntax or to navigate to the sub-command you need. Some of these commands act on the current-slot partition; some have a **-slot** option to direct their action to another partition/slot.

Command	Shortcut	Description
<b>appid</b>	<b>a</b>	Manage Application Ids. See <a href="#">"appid" on page 17</a> .
<b>clientconfig</b>	<b>ccfg</b>	Client configuration. See <a href="#">"clientconfig" on page 22</a> .
<b>file</b>	<b>f</b>	File commands. See <a href="#">"file display" on page 29</a> .
<b>hagroup</b>	<b>ha</b>	High Availability Group commands. See <a href="#">"hagroup" on page 30</a> .
<b>partition</b>	<b>par</b>	Partition commands. See <a href="#">"partition" on page 49</a> .

Command	Shortcut	Description
<b>ped</b>	<b>p</b>	Remote PED commands. See <a href="#">"ped" on page 84</a> .
<b>remotebackup</b>	<b>rb</b>	Manage Remote Backup server. See <a href="#">"remotebackup start" on page 91</a> .
<b>role</b>	<b>ro</b>	Role management commands. See <a href="#">"role" on page 92</a> .
<b>slot</b>	<b>s</b>	Slot management commands. See <a href="#">"slot" on page 107</a> .
<b>stc</b>	<b>stc</b>	Secure Trusted Channel commands. See <a href="#">"stc" on page 116</a> .
<b>stconfig</b>	<b>stcc</b>	Secure Trusted Channel configuration commands. See <a href="#">"stconfig" on page 130</a> .



## appid

Access the **appid**-level commands to manage application IDs on the HSM. For a description of application IDs, see ["Application IDs" on page 1](#) in the *SDK Reference Guide*.

### Syntax

#### appid

**close**  
**info**  
**open**  
**set**

Option	Shortcut	Description
<b>close</b>	<b>c</b>	Close a previously set access ID. See <a href="#">"appid close" on the next page</a>
<b>info</b>	<b>i</b>	Display information for the access IDs. See <a href="#">"appid info" on page 19</a>
<b>open</b>	<b>o</b>	Open a previously set access ID. See <a href="#">"appid open" on page 20</a>
<b>set</b>	<b>s</b>	Set an access ID. See <a href="#">"appid set" on page 21</a>

## appid close

Close an application access ID on the HSM to prevent your applications from using it to access the HSM. Application IDs are assigned as a way of sharing login state among multiple processes. AppIDs require two 4-byte/32-bit unsigned integers, one designated "major" and the other designated "minor". For a full description of application IDs, see ["Application IDs" on page 1](#) in the *SDK Reference Guide*.

**NOTE** If you are concerned that an unauthorized process might be able to take over a login state, then you can use large, difficult-to-guess numbers for the major and minor appids. If this is not a concern, or for use in a development lab, you can use any arbitrary, conveniently small integers.

### Syntax

**appid close -major <value> -minor <value>**

Option	Shortcut	Description
<b>-major &lt;value&gt;</b>	<b>-ma</b>	The major appid.
<b>-minor &lt;value&gt;</b>	<b>-mi</b>	The minor appid.

### Example

```
lunacm:> appid close -major 1 -minor 40
```

```
Command Result : No Error
```

## appid info

---

Display the currently set application IDs. This list includes all set application IDs, regardless of whether they are open or closed. For a full description of application IDs, see "[Application IDs](#)" on [page 1](#) in the *SDK Reference Guide*.

### Syntax

#### **appid info**

### Example

```
lunacm:>appid info
    Using user defined Application ID:

    Application ID Major: 307
    Application ID Minor: 207

Command Result : No Error
```

## appid open

Open an application access ID on the HSM to allow your applications to use it to access the HSM. Application IDs are assigned as a way of sharing login state among multiple processes. AppIDs require two 4-byte/32-bit unsigned integers, one designated "major" and the other designated "minor". For a full description of application IDs, see ["Application IDs" on page 1](#) in the *SDK Reference Guide*.

**NOTE** If you are concerned that an unauthorized process might be able to take over a login state, then you can use large, difficult-to-guess numbers for the major and minor appids. If this is not a concern, or for use in a development lab, you can use any arbitrary, conveniently small integers.

### Syntax

**appid open -major <value> -minor <value>**

Parameter	Shortcut	Description
<b>-major</b> <value>	<b>-ma</b>	The major appid.
<b>-minor</b> <value>	<b>-mi</b>	The minor appid.

### Example

```
lunacm:> appid open -major 1 -minor 40
```

```
Command Result : No Error
```

## appid set

Set an application access ID on the HSM. Application IDs are assigned as a way of sharing login state among multiple processes. AppIDs require two 4-byte/32-bit unsigned integers, one designated "major" and the other designated "minor". After setting an appid, you must open it using **appid open** to allow your applications to use it to access the HSM. Once you set an appid you can open and close it, as required, to allow or deny application access to the HSM using the appid. For a full description of application IDs, see "[Application IDs](#)" on page 1 in the *SDK Reference Guide*.

**NOTE** If you are concerned that an unauthorized process might be able to take over a login state, then you can use large, difficult-to-guess numbers for the major and minor appids. If this is not a concern, or for use in a development lab, you can use any arbitrary, conveniently small integers.

### Syntax

**appid set -major <value> -minor <value>**

Option	Shortcut	Description
<b>-major &lt;value&gt;</b>	<b>-ma</b>	The major appid.
<b>-minor &lt;value&gt;</b>	<b>-mi</b>	The minor appid.

### Example

```
lunacm:> appid set -major 1 -minor 40
```

```
Command Result : No Error
```

## clientconfig

Access the clientconfig-level commands to configure your client.

### Syntax

#### clientconfig

**deleteserver**  
**deploy**  
**listservers**  
**restart**  
**verify**

Option	Shortcut	Description
<b>deleteserver</b>	<b>d</b>	Delete a SafeNet Luna Network HSM server. See " <a href="#">clientconfig deleteserver</a> " on the next page.
<b>deploy</b>	<b>dp</b>	Create a network Trust Link (NTL) between the client and the SafeNet Luna Network HSM in one step. See " <a href="#">clientconfig deploy</a> " on page 24.
<b>listservers</b>	<b>ls</b>	List the SafeNet Luna Network HSM appliances that are registered to the client. See " <a href="#">clientconfig listservers</a> " on page 26.
<b>restart</b>	<b>rest</b>	Restart LunaCM. See " <a href="#">clientconfig restart</a> " on page 27.
<b>verify</b>	<b>v</b>	Verify the SafeNet Luna Network HSM slots/partitions that are visible to the client. See " <a href="#">clientconfig verify</a> " on page 28.

## clientconfig deleteserver

---

Delete a SafeNet Luna Network HSM server from the client.

### Syntax

**clientconfig deleteserver -server** <server\_name>

Parameter	Shortcut	Description
<b>-server</b> <server_name>	<b>-n</b>	The name of the server to be deleted.

### Example

```
lunacm:> clientconfig deleteserver -server 192.20.11.78
```

Server 192.20.11.78 successfully removed from server list.

Command Result : No Error

## clientconfig deploy

Creates a Network Trust Link between the client and a SafeNet Luna Network HSM appliance. This command creates a client Private Key and Certificate, and uses **scp** or **pscp** to transfer the client and server certificates to each other.

**NOTE** If **scp** or **pscp** is blocked by a firewall, this command will fail and the certificates must be transferred by other secure means and registered manually.

### Syntax

**clientconfig deploy -server <server\_IP> -client <client\_IP> -partition <partition\_name> [-password <password>] [-user <username>] [-regen] [-verbose] [-force]**

Option	Shortcut	Description
<b>-client</b> <client_IP>	<b>-c</b>	The client hostname or IP.
<b>-force</b>	<b>-f</b>	Force the action without prompting for confirmation.
<b>-partition</b> <partition_name>	<b>-par</b>	The name of the partition to be assigned to the client. This partition must be created in advance using LunaSH.
<b>-password</b> <password>	<b>-pw</b>	The appliance administrator's password. If this option is not included, you will be prompted for the password. Passwords entered at the prompt are hidden.
<b>-regen</b>	<b>-rg</b>	Including this option will regenerate and replace the client certificate. This may disrupt connections to other SafeNet Luna Network HSM servers.
<b>-server</b> <server_IP>	<b>-n</b>	The server hostname or IP.
<b>-verbose</b>	<b>-v</b>	Show more detailed logs during the procedure.
<b>-user</b> <username>	<b>-ur</b>	The appliance administrator's username. <b>Default:</b> admin

### Example

```
lunacm:> clientconfig deploy -server 192.20.11.78 -client 192.20.11.129 -partition par1
Please wait...
```

```
Using username "admin".
```

```
Please enter appliance admin role user's password:
```

```
Last login: Wed Feb 22 10:06:59 2017 from 192.20.11.129
```

```
Luna SA 7.0.0 Command Line Shell - Copyright (c) 2001-2017 SafeNet, Inc. All rights reserved.
```



Private Key created and written to: C:\Program  
Files\SafeNet\LunaClient\cert\client\192.20.11.129Key.pem  
Certificate created and written to: C:\Program  
Files\SafeNet\LunaClient\cert\client\192.20.11.129.pem

New server 192.20.11.78 successfully added to server list.

The following Luna SA Slots/Partitions were found:

Slot	Serial #	Label
====	=====	=====
0	1238700701510	par0
1	154438865312	

Command Result : No Error

---

## clientconfig listservers

---

List the SafeNet Luna Network HSM appliances that are registered to the client.

### Syntax

**clientconfig listservers**

### Example

```
lunacm:> clientconfig listservers
```

Server ID	Server	Channel	HTL Required
0	192.20.11.40	STC	no
1	192.20.11.78	NTLS	no

Command Result : No Error

## clientconfig restart

Restart LunaCM. This command refreshes the LunaCM display to show any changes, such as new STC links.

### Syntax

**clientconfig restart [-force]**

Option	Shortcut	Description
<b>-force</b>	<b>-f</b>	Force the action without prompting for confirmation.

### Example

```
lunacm:> clientconfig restart
```

```
You are about to restart this application.
All current login sessions and remote PED connections will be terminated.
Are you sure you wish to continue?
```

```
Type 'proceed' to continue, or 'quit' to quit now -> proceed
```

```
Command Result : No Error
```

```
LunaCM v7.0.0. Copyright (c) 2006-2017 SafeNet, Inc.
```

```
Available HSMs:
```

```
Slot Id ->          0
Label ->           par0
Serial Number ->   1238700701510
Model ->          LunaSA
Firmware Version -> 7.0.1
Configuration ->  Luna User Partition With SO (PED) Signing With Cloning Mode
Slot Description -> Net Token Slot
```

```
Slot Id ->          1
Label ->           par1
Serial Number ->   154438865312
Model ->          LunaSA 7.0.0
Firmware Version -> 7.0.1
Configuration ->  Luna User Partition With SO (PW) Signing With Cloning Mode
Slot Description -> Net Token Slot
```

```
Current Slot Id: 0
```

## clientconfig verify

---

Generates a list of SafeNet Luna Network HSM slots/partitions that are visible to the client.

### Syntax

**clientconfig verify**

### Example

```
lunacm:> clientconfig verify
```

The following Luna SA Slots/Partitions were found:

Slot	Serial #	Label
====	=====	=====
0	1238700701510	JHpar0
1	154438865312	JHpar1

Command Result : No Error

## file display

Display the contents of a backup file.

### Syntax

**file display -filename <filename>**

Option	Shortcut	Description
<b>-filename &lt;filename&gt;</b>	<b>-f</b>	Specify the name of the backup file to display. Enter this keyword followed by the name of an existing backup file.

### Example

```
lunacm:> file display -filename somepartfile
```

```
File Name:          somepartfile
File Version:      0
SIM Form:          CKA_SIM_PORTABLE_NO_AUTHORIZATION
Object Count:     3
Source Serial Number: 321312 (0x4e720)
```

```
Object: 1
Attribute Count: 23
CKA_CLASS: CKO_SECRET_KEY
CKA_TOKEN: True
CKA_PRIVATE: True
CKA_LABEL:
47 65 6E 65 72 61 74 65 64 20 44 45 53 33 20 4B
65 79
CKA_KEY_TYPE: CKK_DES3
CKA_SENSITIVE: True
CKA_ENCRYPT: True
CKA_DECRYPT: True
CKA_WRAP: True
CKA_UNWRAP: True
CKA_SIGN: True
CKA_VERIFY: True
CKA_DERIVE: True
CKA_LOCAL: True
CKA_MODIFIABLE: True
CKA_EXTRACTABLE: True
CKA_ALWAYS_SENSITIVE: True
CKA_NEVER_EXTRACTABLE: False
CKA_CCM_PRIVATE: False
CKA_FINGERPRINT_SHA1:
E2 EB 1B 86 58 BB 6C EF 07 87 4C 59 D4 06 73 7D
5E 4D 3A 65
```

## hagroup

Access the **hagroup**-level commands. The **hagroup** commands are used to manage and administer HA (high availability) groups of SafeNet Luna HSMs for redundancy and load balancing.

### Syntax

#### hagroup

**addmember**  
**addstandby**  
**creategroup**  
**deletegroup**  
**halog**  
**haonly**  
**interval**  
**listgroups**  
**recover**  
**recoverymode**  
**removemember**  
**removestandby**  
**retry**  
**synchronize**

Option	Shortcut	Description
<b>addmember</b>	<b>am</b>	Add a member to an HA group. See <a href="#">"hagroup addmember" on page 32</a> .
<b>addstandby</b>	<b>as</b>	Convert an HA group member to a standby member. See <a href="#">"hagroup addstandby" on page 34</a> .
<b>creategroup</b>	<b>c</b>	Create an HA group. See <a href="#">"hagroup creategroup" on page 35</a> .
<b>deletegroup</b>	<b>d</b>	Delete an HA group . See <a href="#">"hagroup deletegroup" on page 37</a> .
<b>halog</b>	<b>hl</b>	Configure the HA log file. See <a href="#">"hagroup halog" on page 38</a> .
<b>haonly</b>	<b>ho</b>	Enable "HA Only" mode. See <a href="#">"hagroup haonly" on page 40</a> .
<b>interval</b>	<b>i</b>	Set the HA recover retry interval. See <a href="#">"hagroup interval" on page 41</a> .
<b>listgroups</b>	<b>l</b>	List the currently-configured HA groups. See <a href="#">"hagroup listgroups" on page 42</a> .
<b>recover</b>	<b>re</b>	Recover a failed HA member. See <a href="#">"hagroup recover" on page 43</a> .

Option	Shortcut	Description
<b>recoverymode</b>	<b>m</b>	Set HA recovery mode to "activeBasic" or "activeEnhanced". See <a href="#">"hagroup recoverymode" on page 44</a> .
<b>removemember</b>	<b>rm</b>	Remove a member from an HA group. See <a href="#">"hagroup removemember" on page 45</a> .
<b>removestandby</b>	<b>rs</b>	Convert a standby member to an active member of the HA group. See <a href="#">"hagroup removestandby" on page 46</a> .
<b>retry</b>	<b>rt</b>	Set the HA recover retry count. See <a href="#">"hagroup retry" on page 47</a> .
<b>synchronize</b>	<b>s</b>	Synchronize an HA group. See <a href="#">"hagroup synchronize" on page 48</a> .

## hagroup addmember

Add a member to an HA group. Use the **-slot** option or the **-serialNumber** option to specify which HSM to add to the group.

All password-authenticated HA group members must have the same password.

All PED-authenticated HA group members must have a challenge created, and activation turned on, and all challenges must be the same.

If you intend to add a standby member to the group, you must first use this command to add the member to the group, then use the LunaCM **hagroup addstandby** command to convert the member to standby status.

### Syntax

#### hagroup addmember

```
-serialnumber <serialnum> -group <label> -password <password>
-slot <slotnumber> -group <label> -password <password>
```

Option	Shortcut	Description
<b>-serialnumber</b> <serialnum>	<b>-se</b>	Serial number of the member to add. This parameter is mandatory if <b>-slot</b> is not used. the serial number that identifies the HSM being added to the HA group.
<b>-slot</b> <slotnumber>	<b>-sl</b>	Slot number of the member to add- [mandatory if <b>-serialnumber</b> not used] a slot number to identify the HSM being added to the HA group.
<b>-group</b> <label>	<b>-g</b>	Label for the group being joined - [mandatory] a label for the HA group being created.
<b>-password</b> <password>	<b>-p</b>	Password for the HSM to add - [mandatory if Password-authenticated/ignored if PED] The password or challenge secret shared by group members. If an HSM is intended to join an existing HA group, that HSM's password or challenge secret must be changed to match the password or secret used by the group, before the new member is added.

### Example

```
lunacm:> hagroup addmember -serialnumber 1238700701515 -group myHAGroup
```

```
Enter the password: *****
Member 1238700701515 successfully added to group myHAGroup. New group
configuration is:
```

```
HA Group Label: myHAGroup
HA Group Number: 1154438865288
HA Group Slot ID: 5
Synchronization: enabled
Group Members: 154438865288, 1238700701515
```



```
Needs sync: yes
Standby Members: <none>
```

Slot #	Member S/N	Member Label	Status
=====	=====	=====	=====
0	154438865288	sa78-2	alive
1	1238700701515	sa40-2	alive

Please use the command "ha synchronize" when you are ready to replicate data between all members of the HA group. (If you have additional members to add, you may wish to wait until you have added them before synchronizing to save time by avoiding multiple synchronizations.)

```
Command Result : No Error
```

## hagroup addstandby

Make an existing member of the HA group a standby member. Use the **-serialnumber** option to specify which HSM to make a standby member. You must add a member before you can make it a standby member.

### Syntax

**hagroup addstandby -serialnumber** <serialnum> **-group** <label>

Option	Shortcut	Description
<b>-serialnumber</b> <serialnum>	<b>-s</b>	Serial number of the member being made standby.
<b>-group</b> <label>	<b>-g</b>	Label or serial number for the existing member's group.

### Example

```
lunacm:> hagroup addstandby -serialnumber 1238700701515 -group myHAGroup
```

The member 1238700701515 was successfully added to the standby list for the HA Group myHAGroup.

Command Result : No Error

## hagroup creategroup

Create an HA group. Use the **-slot** or **-serialnumber** options to specify the primary member for the group. All password-authenticated HA group members must have the same password. All PED-authenticated HA group members must have a challenge created, and activation turned on, and all challenges must be the same.

### Syntax

#### hagroup creategroup

```
-serialnumber <serialnum> -label <label> -password <password>
-slot <slotnumber> -label <label> -password <password>
```

Option	Shortcut	Description
<b>-serialnumber</b> <serialnum>	<b>-se</b>	Serial number of primary member - [mandatory if <b>-slotnumber</b> not used] the serial number that identifies the primary member of the HA group.
<b>-slot</b> <slotnumber>	<b>-sl</b>	Slot number of primary member - [mandatory if <b>-serialnumber</b> not used] a slot number to identify the primary member of the HA group.
<b>-label</b> <label>	<b>-l</b>	Label for the new group - [mandatory] a label for the HA group being created.
<b>-password</b> <password>	<b>-p</b>	Password for the primary member. The password is the text password and is mandatory for password-authenticated HSMs, or is the challenge secret for PED-authenticated HSMs, shared by group members.

### Example

```
lunacm:> hagroup creategroup -serialnumber 154438865288 -label myHAGroup
```

```
Enter the password: *****
```

```
Warning: There are objects currently on the new member.
Do you wish to propagate these objects within the HA
group, or remove them?
```

```
Type 'copy' to keep and propagate the existing
objects, 'remove' to remove them before continuing,
or 'quit' to stop adding this new group member.
> copy
```

```
New group with label "myHAGroup" created with group number 1154438865288.
Group configuration is:
```

```
HA Group Label: myHAGroup
HA Group Number: 1154438865288
HA Group Slot ID: Not Available
Synchronization: enabled
```

```

Group Members: 154438865288
Needs sync: no
Standby Members: <none>

```

Slot #	Member S/N	Member Label	Status
=====	=====	=====	=====
0	154438865288	sa78-2	alive

Command Result : No Error

LunaCM v7.0.0-932. Copyright (c) 2006-2017 SafeNet.

Available HSMs:

```

Slot Id -> 0
Label -> sa78-2
Serial Number -> 154438865288
Model -> LunaSA 7.0.0
Firmware Version -> 7.0.1
Configuration -> Luna User Partition With SO (PW) Signing With Cloning Mode
Slot Description -> Net Token Slot

```

```

Slot Id -> 1
Label -> sa40-2
Serial Number -> 1238700701515
Model -> LunaSA 7.0.0
Firmware Version -> 7.0.1
Configuration -> Luna User Partition With SO (PW) Signing With Cloning Mode
Slot Description -> Net Token Slot

```

```

Slot Id -> 5
HSM Label -> myHAGroup
HSM Serial Number -> 1154438865288
HSM Model -> LunaVirtual
HSM Firmware Version -> 7.0.1
HSM Configuration -> Luna Virtual HSM (PW) Signing With Cloning Mode
HSM Status -> N/A - HA Group

```

Current Slot Id: 0

## hagroup deletigroup

Delete an HA group. Use the **-label** option to specify the group to be deleted.

### Syntax

**hagroup deletigroup -label <label>**

Option	Short	Description
<b>-label &lt;label&gt;</b>	<b>-l</b>	Label or serial number for the group being deleted - [mandatory]

### Example

```
lunacm:> hagroup deletigroup -label myHAGroup
```

```
    The HA group myHAGroup was successfully deleted.
```

```
Command Result : No Error
```

## hagroup halog

Configure the HA log.

### Syntax

**hagroup halog** {-disable | -enable | -maxlength <max\_file\_length> | -path <filepath> | -show}

Option	Shortcut	Description
<b>-disable</b>	<b>-d</b>	Disable HA logging.
<b>-enable</b>	<b>-e</b>	Enable HA logging.
<b>-maxlength</b> <max_file_length>	<b>-m</b>	Set the maximum length for the HA log file. The default and minimum size is 262144 bytes.
<b>-path</b> <filepath>	<b>-p</b>	Set the location for the HA log file. You must enclose the path specification in quotes if it contains spaces.
<b>-show</b>	<b>-s</b>	Display the HA log configuration

### Example

```
lunacm:> hagroup halog -maxlength 500000
```

```
    HA Log maximum file size was successfully set to 500000.
```

```
Command Result : No Error
```

```
lunacm:> hagroup halog -path "c:\Program Files\SafeNet\LunaClient\halog"
```

```
    HA Log path successfully set to c:\Program Files\SafeNet\LunaClient\halog.
```

```
Command Result : No Error
```

```
lunacm:> hagroup halog -enable
```

```
    HA Log was successfully enabled.
```

```
Command Result : No Error
```

```
lunacm:> hagroup halog -show
```

```
    HA Log: enabled
    Log File: c:\Program Files\SafeNet\LunaClient\halog\haErrorLog.txt
    Max File Length: 500000 bytes
```

Command Result : No Error

```
lunacm:> hagroup halog -disable
```

```
    HA Log was successfully disabled.
```

Command Result : No Error

## hagroup haonly

Enable, disable, or display the HA-only mode configuration for the group.

**NOTE** This command acts on your applications, either allowing (default) or disallowing (**hagroup haonly -enable**) the application to see individual HSM partition slots or just the HA group virtual slot, respectively. The command has no effect on administrative tools like LunaCM, where a **slot list** returns all slots, both actual and virtual.

### Syntax

**hagroup haonly** {-enable | -disable | -show}

Option	Shortcut	Description
<b>-enable</b>	<b>-e</b>	Enable HA Only mode for the current group.
<b>-disable</b>	<b>-d</b>	Disable HA Only mode for the current group.
<b>-show</b>	<b>-s</b>	Show the status of HA Only mode for the current group.

### Example

```
lunacm:> hagroup haonly -enable
```

```
    "HA Only" has been enabled.
```

```
Command Result : No Error
```

```
lunacm:> hagroup haonly -show
```

```
    This system is configured to show only HA slots.  (HA Only is enabled)
```

```
Command Result : No Error
```



## hagroup interval

Modify the HA Recover retry interval.

For HA recovery attempts:

- > The default retry interval is 60 seconds.
- > The default number of retries is 0, which means that automatic recovery is disabled.
- > The HA configuration section in the **Chrystoki.conf/crystoki.ini** file is created and populated when either the interval or the number of retries is specified in the LunaCM commands ["hagroup retry" on page 47](#) and ["hagroup interval" above](#).

### Syntax

**hagroup interval -interval <seconds>**

Option	Shortcut	Description
<b>-interval &lt;seconds&gt;</b>	<b>-i</b>	Sets the number of seconds between attempts to recover a failed HA group member. <b>Default:</b> 60 seconds <b>Range:</b> 60 to 1200 seconds

### Example

```
lunacm:> hagroup interval -interval 120
```

```
HA Auto Recovery Interval has been set to 120 seconds.
```

```
Command Result : No Error
```

## hagroup listgroups

List all configured HA groups and all of their members, and show their synchronization status.

### Syntax

#### hagroup listgroups

### Example If No HA Group

```
lunacm:>hagroup listgroups
```

```

    HA auto recovery: disabled
    HA recovery mode: activeBasic
Maximum auto recovery retry: 0
Auto recovery poll interval: 60 seconds
    HA logging: disabled
    Only Show HA Slots: no
```

Command Result : No Error

### Example for HA Group

```
lunacm:> hagroup listgroups
```

If you would like to see synchronization data for group myHAGroup, please enter the password for the group members. Sync info not available in HA Only mode.

Enter the password: \*\*\*\*\*

```

    HA auto recovery: disabled
    HA recovery mode: activeBasic
Maximum auto recovery retry: 0
Auto recovery poll interval: 60 seconds
    HA logging: disabled
    Only Show HA Slots: no
```

```

    HA Group Label: myHAGroup
    HA Group Number: 1154438865288
    HA Group Slot ID: 7
    Synchronization: enabled
    Group Members: 154438865288, 1238700701515, 154438865289, 1238700701516
    Needs sync: yes
    Standby Members: 1238700701516
```

Slot #	Member S/N	Member Label	Status
0	154438865288	sa78-2	alive
2	1238700701515	sa40-2	alive
1	154438865289	sa78-3	alive
3	1238700701516	sa40-3	alive

Command Result : No Error

## hagroup recover

Recover any failed members of an HA group. Use the **-group** option to specify which HA group to recover.

### Syntax

**hagroup recover -group <label>**

Option	Shortcut	Description
<b>-group &lt;label&gt;</b>	<b>-g</b>	Specifies the label for the group to recover.

### Example

```
lunacm:> hagroup recover -group myHAGroup
```

```
Signal sent to HA Group "myHAGroup" to recover.
```

```
Command Result : No Error
```

## hagroup recoverymode

Set HA recovery mode to active basic or active enhanced automatic recovery.

### Syntax

**hagroup recoverymode -mode {activeBasic | activeEnhanced}**

Option	Shortcut	Description
<b>-mode</b> <mode>	<b>-m</b>	Specifies method of HA automatic recovery. <b>Valid values:</b> <b>activeBasic</b> - uses a separate Active Recovery Thread to perform background checks of HA member presence and runs synchronization if a member fails/leaves and then returns to availability; attempts to reconnect with the members if all members were simultaneously unavailable. Does not restore existing sessions. Network HSM appliances do not have to restart, login is manual. <b>activeEnhanced</b> - works like activeBasic, but additionally restores all sessions and their login states

### Example

```
lunacm:> hagroup recoveryMode -mode activeBasic
```

```
HA Auto Recovery Mode has been set to activeBasic mode.
```

```
Command Result : No Error
```

## hagroup removemember

Remove an HSM member from an existing HA group. Use the **-slot** option or the **-serialnumber** option to specify which HSM to remove from the group specified by the **-group** option.

### Syntax

#### hagroup removemember

```
-serialnumber <serialnum> -group <label>
-slot <slotnumber> -group <label>
```

Option	Shortcut	Description
<b>-serialNumber</b> <serialnum>	<b>-se</b>	Serial number of the member to remove - [mandatory if <b>-slotnumber</b> not used] the serial number that identifies the member of the HA group.
<b>-slot</b> <slotnumber>	<b>-sl</b>	Slot number of member to remove- [mandatory if <b>-serialnumber</b> not used] a slot number to identify the member of the HA group.
<b>-group</b> <label>	<b>-g</b>	Label for the existing HA group to which the member belongs.

### Example

```
lunacm:> hagroup removemember -serialnumber 1238700701515 -group myHAGroup
Member 1238700701515 successfully removed from group myHAGroup.
```

Command Result : No Error

## hagroup removestandby

Remove standby status from a member of an HA group. Use the **-serialnumber** option to specify which HSM to change from standby back to an active member of the HA group specified by the **-group** option.

### Syntax

**hagroup removestandby -serialnumber** <serialnum> **-group** <label>

Option	Shortcut	Description
<b>-serialnumber</b> <serialnum>	<b>-se</b>	Serial number of HSM to change - the serial number that identifies the standby member to change to active in the named HA group.
<b>-group</b> <label>	<b>-g</b>	Label for the group - a label for the HA group being modified.

### Example

```
lunacm:> hagroup removestandby -serialnumber 1238700701515 -group myHAGroup
```

The member 1238700701515 was successfully removed from the standby list for the HA Group myHAGroup.

Command Result : No Error

## hagroup retry

Modify the HA recovery retry count. The retry count specifies the number of times the system attempts to recover a failed member. The interval between retries is specified by the command ["hagroup interval" on page 41](#).

For HA recovery attempts:

- > The default retry interval is 60 seconds.
- > The default number of retries is 0, which means that automatic recovery is disabled.
- > The HA configuration section in the **Chrystoki.conf/crystoki.ini** file is created and populated when either the interval or the number of retries is specified in the LunaCM commands ["hagroup retry" above](#) and ["hagroup interval" on page 41](#).

### Syntax

**hagroup retry -count** <retries>

Option	Shortcut	Description
<b>-count</b> <retries>	<b>-c</b>	Sets the number of times the HA controller attempts to recover a member that fails. Enter a value of <b>-1</b> to specify unlimited retries. Enter a value of <b>0</b> to disable HA auto-recovery. <b>Default:</b> 0 <b>Range:</b> -1 to 500

### Example

```
lunacm:> hagroup retry -count -1
```

```
HA Auto Recovery Count has been set to -1
```

```
Command Result : No Error
```

## hagroup synchronize

Synchronize an HA group or enable/disable key synchronization for key export applications.

### Syntax

**hagroup synchronize -group** <label\_or\_serialnum> [**-password** <password>] [**-enable** | **-disable**]

Option	Shortcut	Description
<b>-disable</b>	<b>-d</b>	Disable synchronization for this HA group. This option allows you to disable synchronization on HA groups that use HSMs configured for key export (KE) to wrap asymmetric private RSA keys. In this model, you create your symmetric wrapping keys, which are synchronized to each member of the HA group. After synchronizing the symmetric wrapping keys, you disable synchronization and begin creating your asymmetric RSA keys. If one of the HA members fails, the remaining members are still able to generate and wrap asymmetric private RSA keys using the synchronized symmetric wrapping key.
<b>-enable</b>	<b>-e</b>	Enable synchronization for this HA group. Synchronization is enabled by default. You require this setting only if you wish to re-enable synchronization on an HA group where synchronization was previously disabled. For example, to create and synchronize a new symmetric wrapping key.
<b>-group</b> <label_or_serialnum>	<b>-g</b>	Label or serial number for the HA group being synchronized.
<b>-password</b> <password>	<b>-p</b>	Password for the group.

### Example

```
lunacm:> hagroup synchronize -group myHAGroup
```

```
Enter the password: *****
```

```
Synchronization completed.
```

```
Command Result : No Error
```

```
lunacm:> hagroup synchronize -group myHAGroup -disable
```

```
HA synchronization disabled
```

```
No synchronization performed/needed.
```

```
Command Result : No Error
```



## partition

Access the partition-level commands.

### Syntax

This version of the partition command set includes an **init** command for the application partition. These are the commands you see if the current-slot application partition was created using the **-slot** option.

#### partition

**addsize**  
**archive**  
**changepolicy**  
**clear**  
**clone**  
**contents**  
**init**  
**restoresim3**  
**setlegacydomain**  
**showinfo**  
**showmechanism**  
**showpolicies**

Option	Shortcut	Description
<b>addsize</b>	<b>as</b>	Increase the size of a partition by a specific number of bytes. See <a href="#">"partition addsize" on page 51</a> .
<b>archive</b>	<b>ar</b>	> Partition archive management commands. See <a href="#">"partition archive" on page 53</a> .
<b>changepolicy</b>	<b>changepo</b>	Change the Partition Policy value. See <a href="#">"partition changepolicy" on page 67</a> .
<b>clear</b>	<b>clr</b>	Delete all of the user's token objects. See <a href="#">"partition clear" on page 68</a> .
<b>clone</b>	<b>clo</b>	Clone user objects. See <a href="#">"partition clone" on page 69</a> .
<b>contents</b>	<b>con</b>	Show the contents of the user partition. See <a href="#">"partition contents" on page 71</a> .
<b>init</b>	<b>in</b>	Initialize an application partition. See <a href="#">"partition init" on page 72</a> .
<b>restoresim3file</b>	<b>rsim3f</b>	Restore user objects (using SIM3). See <a href="#">"partition restoresim3file" on page 74</a> .

Option	Shortcut	Description
<b>setlegacydomain</b>	<b>sld</b>	Set the legacy domain. <a href="#">"partition setlegacydomain" on page 75.</a>
<b>showinfo</b>	<b>si</b>	Display partition information. See <a href="#">"partition showinfo" on page 77.</a>
<b>showmechanism</b>	<b>showm</b>	Show all available mechanisms. See <a href="#">"partition showmechanism" on page 78.</a>
<b>showpolicies</b>	<b>sp</b>	Get partition policy information. See <a href="#">"partition showpolicies" on page 80.</a>

## partition addsize

Increase the size of a backup partition by a specific number of bytes.

This command is applicable to SafeNet Luna Backup HSM partitions only, and appears in LunaCM only when a Backup HSM is connected. You must be logged in to the Backup HSM as HSM SO to use this command.

### Syntax

**partition addsize -slot <number> -size <bytes> {-partition <name> | -all} [-force]**

Option	Shortcut	Description
<b>-all</b>	<b>-a</b>	Increase the size of all partitions on the slot by a specified number of bytes.
<b>-force</b>	<b>-f</b>	Force the action without prompting for confirmation.
<b>-partition &lt;name&gt;</b>	<b>-par</b>	The name of the affected partition.
<b>-size &lt;bytes&gt;</b>	<b>-si</b>	The storage space (in bytes) to be added to the partition.
<b>-slot &lt;number&gt;</b>	<b>-sl</b>	The slot where the partition is located.

### Example

```
lunacm:>partition archive list -slot 2
```

```
HSM Storage Information for slot 2:
```

```
Total HSM Storage Space: 16252928
Used HSM Storage Space: 606468
Free HSM Storage Space: 15646460
Allowed Partitions: 20
Number Of Partitions: 3
```

```
Partition list for slot 2
```

```
Number of partition: 2
```

```
Name: bk1
Total Storage Size: 200000
Used Storage Size: 0
Free Storage Size: 200000
Number Of Objects: 0
```

```
Name: bk2
Total Storage Size: 200000
Used Storage Size: 0
Free Storage Size: 200000
Number Of Objects: 0
```

```
Command Result : No Error
```

```
lunacm:>hsm login
```

Please attend to the PED.

Command Result : No Error

```
lunacm:>partition addsize -slot 2 -size 999 -partition bk2
```

This command will increase the user partition's storage size.  
Are you sure you wish to continue?

Type 'proceed' to continue, or 'quit' to quit now ->proceed

Command Result : No Error

```
lunacm:>partition archive list -slot 2
```

HSM Storage Information for slot 2:

```
Total HSM Storage Space: 16252928
Used HSM Storage Space: 607467
Free HSM Storage Space: 15645461
Allowed Partitions: 20
Number Of Partitions: 3
```

Partition list for slot 2

Number of partition: 2

```
Name: bk1
Total Storage Size: 200000
Used Storage Size: 0
Free Storage Size: 200000
Number Of Objects: 0
```

```
Name: bk2
Total Storage Size: 200999
Used Storage Size: 0
Free Storage Size: 200999
Number Of Objects: 0
```

Command Result : No Error

## partition archive

Access the partition archive commands.

An archive (backup) device can be one of the following:

- > An HSM in another slot in the current system
- > A backup HSM connected to a remote workstation
- > A USB-attached HSM connected directly to a SafeNet Luna PCIe HSM

### Device configuration

In each scenario, the HSM that is being used as a backup device should be configured as a backup device; the HSM capability **Enable full (non-backup) functionality (9)** is disabled.

If the HSM is not configured as a backup device then you will not be able to create new backup partitions on the HSM. You will only be able to backup/restore to/from any existing partitions.

**NOTE** If the domains of your source and target HSMs do not match or the policy settings do not permit backup, the partition archive backup command fails. No objects are cloned to the target HSM but the command creates an empty backup partition. In this circumstance, you must manually delete the empty backup partition.

### Specifying the backup device

To specify a backup device in another slot in the current system, use the **-s** option and give the actual slot number (for example, **-s 4**).

To specify a backup device in a remote work station, use the **-s** option and include the keyword **remote** (for example, **-s remote**). When specifying a remote device, you must also provide a hostname and port number using the **-hostname** and **-port** options. (The **-hostname** option also accepts an IP address.)

To specify a USB attached backup device directly connected to the HSM in the current slot, use the **-s** option and include the keyword **direct** (for example, **-s direct**). If you know the slot number that contains the USB attached HSM, you can specify that slot number explicitly (for example, **-s 5**).

### Password-authenticated SafeNet Luna Backup HSM

When using a password-authenticated SafeNet Luna Backup HSM, the SO password, partition password, and domain values cannot be specified with the command. This is because the network connection is not secured and the passwords should not be transferred across the network in the clear. If these values are required, they are prompted on the remote workstation console.

### Device initialization

Before a backup HSM can be used, it must be initialized. To initialize a backup HSM, you must set your backup HSM as your current slot and use the **hsm init** command. If your backup HSM is in a remote workstation, then you must initialize it locally at that workstation, or remotely using remote PED if it is supported.

## Appending objects to an existing backup partition

When backing up, the **append** option can be used to add objects to the existing backup partition. If the specified partition does not exist, then this option cannot be used. If the partition does exist and this option is not used, the existing partition is deleted and a new partition is created. If the **append** option is not used and the specified partition does not exist, it is created. If the partition must be created or resized, the SO password for the backup HSM is required.

## Remote backups

To perform remote backup (**-s remote**), a remote backup server must be running on the remote work station. To start a remote backup server, run LunaCM on the remote workstation, select the slot you wish to use as a remote backup HSM, and use the command **remotebackup start**. The remote backup server will accept commands and execute them against the current slot.

## Syntax

### partition archive

**backup**  
**contents**  
**delete**  
**list**  
**restore**

Option	Shortcut	Description
<b>backup</b>	<b>b</b>	Back up objects from the current slot to a backup partition in a backup device in a specified slot. See " <a href="#">partition archive backup</a> " on the next page.
<b>contents</b>	<b>c</b>	List the contents of a backup partition in a backup device in a specified slot. See " <a href="#">partition archive contents</a> " on page 59.
<b>delete</b>	<b>d</b>	Delete the specified backup partition in a backup device in a specified slot. See " <a href="#">partition archive delete</a> " on page 61.
<b>list</b>	<b>l</b>	List the backup partitions on a backup device in a specified slot. See " <a href="#">partition archive list</a> " on page 63.
<b>restore</b>	<b>r</b>	Restore objects from the specified backup partition in a backup device in a specified slot to the current user partition. See " <a href="#">partition archive restore</a> " on page 65.

## partition archive backup

Backup partition objects. Use this command to backup objects from the current user partition to a partition on a backup device. You must be logged in as the Crypto Officer to backup the partition.

**NOTE** If the domains of your source and target HSMs do not match or the policy settings do not permit backup, the partition archive backup command fails. No objects are cloned to the target HSM but the command creates an empty backup partition. In this circumstance, you must manually delete the empty backup partition.

### Cloning is a repeating atomic action

When you call for a cloning operation (such as backup or restore), the source HSM transfers a single object, encrypted with the source domain. The target HSM then decrypts and verifies the received blob.

If the verification is successful, the object is stored at its destination – the domains are a match. If the verification fails, then the blob is discarded and the target HSM reports the failure. Most likely the domain string or the domain PED key, that you used when creating the target partition, did not match the domain of the source HSM partition. The source HSM moves to the next item in the object list and attempts to clone again, until the end of the list is reached.

This means that if you issue a backup command for a source partition containing several objects, but have a mismatch of domains between your source HSM partition and the backup HSM partition, then you will see a separate error message for every object on the source partition as it individually fails verification at the target HSM.

## Syntax

### If backup device is a slot in the current system:

```
partition archive backup -slot <backup_slot> -partition <backup_partition> -password <password> [-sopassword <sopassword>] [-domain <domain> | -defaultdomain] [-append] [-replace] [-debug] [-force]
```

### If backup device is in a remote workstation:

```
partition archive backup -slot remote -hostname <hostname> -port <portnumber> -partition <backup_partition> -password <password> [-sopassword <sopassword>] [-commandtimeout <seconds>] [-domain <domain> | -defaultdomain] [-append] [-replace] [-debug] [-force]
```

### If backup device is a USB-attached HSM:

```
partition archive backup -slot direct -partition <backup_partition> -password <password> [-sopassword <sopassword>] [-domain <domain> | -defaultdomain] [-append] [-replace] [-debug] [-force]
```

Option	Shortcut	Description
<b>-append</b>	<b>-a</b>	Append the objects to the existing partition.
<b>-commandtimeout</b> <seconds>	<b>-ct</b>	The command timeout for network communication. The default timeout is 10 seconds. The maximum timeout is 3600. This option can be used to adjust the timeout value to account for network latency.
<b>-debug</b>	<b>-deb</b>	Turn on additional error information. (optional)
<b>-defaultdomain</b>	<b>-def</b>	Default domain for the specified partition.
<b>-domain</b> <domain>	<b>-do</b>	Domain for the specified partition.
<b>-force</b>	<b>-f</b>	Force action with no prompting.
<b>-hostname</b> <hostname>	<b>-ho</b>	Host name of remote workstation running remote backup server. (required when <b>-s remote</b> is used)
<b>-partition</b> <backup_partition>	<b>-par</b>	Partition on the backup device. (maximum length of 64 characters)
<b>-password</b> <password>	<b>-pas</b>	Password for the specified partition.
<b>-port</b> <portnumber>	<b>-po</b>	Port number for remote backup server on remote workstation. (required when <b>-s remote</b> is used)
<b>-replace</b>	<b>-rep</b>	Allow objects with same OUID on backup device to be deleted and replaced.
<b>-slot</b> <see description>	<b>-s</b>	Target slot containing the backup device. It can be specified by any of the following: <ul style="list-style-type: none"> <li>&gt; &lt;slot number&gt;, if the backup slot is in the current system.</li> <li>&gt; <b>remote -hostname</b> &lt;host name&gt; <b>-port</b> &lt;port number&gt; if the backup device is in a remote work station.</li> <li>&gt; <b>direct</b> to specify a USB-attached backup device. If you know the slot number that contains the USB-attached HSM, you can specify that slot number explicitly (for example, <b>-s 5</b>)</li> </ul>
<b>-sopassword</b> <sopassword>	<b>-sop</b>	SO password for the backup device.

## Example with password in command line

```
lunacm:> partition archive backup -slot 2 -partition sa78backup -domain clientdomain -password newPa$$w0rd -sopassword backupSOpwd
```

Logging in as the SO on slot 2.

Creating partition sa78backup on slot 2.



```
Logging into the container sa78backup on slot 2 as the user.

Creating Domain for the partition sa78backup on slot 2.

Verifying that all objects can be backed up...

6 objects will be backed up.

Backing up objects...
Cloned object 70 to partition sa78backup (new handle 14).
Cloned object 69 to partition sa78backup (new handle 18).
Cloned object 53 to partition sa78backup (new handle 19).
Cloned object 54 to partition sa78backup (new handle 23).
Cloned object 52 to partition sa78backup (new handle 24).
Cloned object 47 to partition sa78backup (new handle 28).

Backup Complete.

6 objects have been backed up to partition sa78backup
on slot 2.
```

Command Result : No Error

## Example with password prompt

```
lunacm:> partition archive backup -slot 2 -partition sa78backup

Option -domain was not specified. It is required.
Enter the domain name: ***
Re-enter the domain name: ***
Option -password was not supplied. It is required.
Enter the user password for the target partition: ***
Re-enter the user password for the target partition: ***
Logging in as the SO on slot 2.
Creating partition sa78backup on slot 2.
Logging into the container sa78backup on slot 2 as the user.
Creating Domain for the partition sa78backup on slot 2.
Verifying that all objects can be backed up...
6 objects will be backed up.
Backing up objects...
Cloned object 70 to partition sa78backup (new handle 14).
Cloned object 69 to partition sa78backup (new handle 18).
Cloned object 53 to partition sa78backup (new handle 19).
Cloned object 54 to partition sa78backup (new handle 23).
Cloned object 52 to partition sa78backup (new handle 24).
Cloned object 47 to partition sa78backup (new handle 28).
Backup Complete.
6 objects have been backed up to partition sa78backup
on slot 2.
Command Result : No Error
```

## Example if password mistyped

```
lunacm:>partition archive backup -slot 21 -partition bkpar3

Option -domain was not specified. It is required.
Enter the domain name: ***
```

```
Re-enter the domain name: ***
Option -password was not supplied. It is required.
Enter the user password for the target partition: ***
Re-enter the user password for the target partition: ***
The passwords are not the same.
Command aborted.
Command Result : 0xb (User Cancelled Operation)
```

## partition archive contents

Display the contents of a specified backup partition on the backup device in the specified slot.

### Syntax

**partition archive contents -slot** <backup\_device> **-partition** <backup\_partition> **-password** <password> **[-commandtimeout** <seconds>] **[-debug**

Option	Shortcut	Description
<b>-commandtimeout</b> <seconds>	<b>-ct</b>	The command timeout for network communication. The default timeout is 10 seconds. The maximum timeout is 3600. This option can be used to adjust the timeout value to account for network latency. (optional)
<b>-debug</b>	<b>-deb</b>	Turn on additional error information. (optional)
<b>-hostname</b> <hostname>	<b>-ho</b>	Host name of remote workstation running remote backup server (required when <b>-s remote</b> is used)
<b>-partition</b> <backup_partition>	<b>-par</b>	Partition on the backup device. (maximum length of 64 characters)
<b>-password</b>	<b>-pas</b>	User password for the specified partition.
<b>-port</b> <portnumber>	<b>-po</b>	Port number for remote backup server on remote workstation (required when <b>-s remote</b> is used)
<b>-slot</b> <backup_device>	<b>-s</b>	Target slot containing the backup device. It can be specified by any of the following: <ul style="list-style-type: none"> <li>&gt; &lt;slot number&gt;, if the backup slot is in the current system.</li> <li>&gt; <b>remote -hostname</b> &lt;host name&gt; <b>-port</b> &lt;port number&gt; if the backup device is in a remote work station.</li> <li>&gt; <b>direct</b> to specify a USB attached backup device. If you know the slot number that contains the USB attached HSM, you can specify that slot number explicitly (for example, <b>-s 5</b>)</li> </ul>

### Example

```
lunacm:> partition archive contents -slot 2 -partition sa78backup
```

```
Option -password was not supplied. It is required.
```

```
Enter the user password for the backup container: *****
```

```
Logging in as the user on slot 2.
```

```
Contents of partition sa78backup on slot 2 :
```

```
Object list:
```

Label: MT RSA 4096-bit Private KeyGen  
Handle: 14  
Object Type: Private Key  
Object UID: 26000000050000071b030100

Label: MT RSA 4096-bit Public KeyGen  
Handle: 18  
Object Type: Public Key  
Object UID: 25000000050000071b030100

Label: MT RSA 4096-bit Private KeyGen  
Handle: 19  
Object Type: Private Key  
Object UID: 24000000050000071b030100

Label: MT RSA 4096-bit Public KeyGen  
Handle: 23  
Object Type: Public Key  
Object UID: 23000000050000071b030100

Label: MT RSA 4096-bit Private KeyGen  
Handle: 24  
Object Type: Private Key  
Object UID: 22000000050000071b030100

Label: MT RSA 4096-bit Public KeyGen  
Handle: 28  
Object Type: Public Key  
Object UID: 21000000050000071b030100

Number of objects: 6

Command Result : No Error

## partition archive delete

Delete the specified partition on the backup device in the specified slot.

### Syntax

#### If backup device is a slot in the current system:

```
partition archive delete -slot <backup_slot> -partition <backup_partition> -password <password> [-debug]
```

#### If backup device is in a remote workstation:

```
partition archive delete -slot remote -hostname <hostname> -port <portnumber> -partition <backup_partition> -password <password> [-commandtimeout <seconds>] [-debug]
```

#### If backup device is a USB-attached device:

```
partition archive delete -slot direct [-slot <backup_slot>] -partition <backup_partition> -password <password> [-debug]
```

Option	Shortcut	Description
<b>-commandtimeout</b> <seconds>	<b>-ct</b>	The command timeout for network communication. The default timeout is 10 seconds. The maximum timeout is 3600. This option can be used to adjust the timeout value to account for network latency. (optional)
<b>-debug</b>	<b>-deb</b>	Turn on additional error information. (optional)
<b>-hostname</b> <hostname>	<b>-ho</b>	Host name of remote workstation running remote backup server. (required when <b>-s remote</b> is used)
<b>-partition</b> <backup_partition>	<b>-par</b>	Partition to delete on the backup device. (maximum length of 64 characters) .
<b>-password</b> <password>	<b>-pas</b>	User password for the specified partition.
<b>-port</b> <portnumber>	<b>-po</b>	Port number for remote backup server on remote workstation. (required when <b>-s remote</b> is used)

Option	Shortcut	Description
<b>-slot</b> <see description>	<b>-s</b>	Target slot containing the backup device. It can be specified by any of the following: <ul style="list-style-type: none"> <li>&gt; &lt;slot number&gt;, if the backup slot is in the current system.</li> <li>&gt; <b>remote -hostname</b> &lt;host name&gt; <b>-port</b> &lt;port number&gt; if the backup device is in a remote work station.</li> <li>&gt; <b>direct</b> to specify a USB attached backup device. If you know the slot number that contains the USB attached HSM, you can specify that slot number explicitly (for example, <b>-s 5</b>)</li> </ul>

## Example

**NOTE** The **partition archive delete** command cannot be issued while the currently selected slot is the SafeNet Luna Backup HSM. Set your lunacm slot to any other slot, to allow **partition archive delete** to work.

```
lunacm:>slot set -slot 1
```

```
Current Slot Id: 1 (Luna User Slot 7.0.1 (PW) Signing With Cloning Mode)
```

```
Command Result : No Error
```

```
lunacm:> partition archive delete -slot 2 -partition sa40backup
```

```
Option -password was not supplied. It is required.
```

```
Enter the SO password for the backup device: *****
```

```
Logging in as the SO on slot 2.
```

```
Partition sa40backup was successfully deleted on slot 2.
```

```
Command Result : No Error
```

## partition archive list

Display a list of the backup partitions on a backup device in a specified slot.

### Syntax

**If backup device is a slot in the current system:**

```
partition archive list -slot <backup_slot> [-debug]
```

**If backup device is in a remote workstation:**

```
partition archive list -slot remote -hostname <hostname> -port <portnumber> [-commandtimeout <seconds>] [-debug]
```

**If backup device is a USB-attached device:**

```
partition archive list -slot direct [-slot <backup_slot>] [-debug]
```

Option	Shortcut	Description
<b>-commandtimeout</b> <seconds>	<b>-ct</b>	The command timeout for network communication. The default timeout is 10 seconds. The maximum timeout is 3600. This option can be used to adjust the timeout value to account for network latency. (optional)
<b>-debug</b>	<b>-de</b>	Turn on additional error information. (optional)
<b>-hostname</b> <hostname>	<b>-ho</b>	Host name of remote workstation running remote backup server. (required when <b>-s remote</b> is used)
<b>-port</b> <portnumber>	<b>-po</b>	Port number for remote backup server on remote workstation. (required when <b>-s remote</b> is used)
<b>-slot</b> <see description>	<b>-s</b>	Target slot containing the backup device. It can be specified by any of the following: <ul style="list-style-type: none"> <li>&gt; &lt;slot number&gt;, if the backup slot is in the current system.</li> <li>&gt; <b>remote -hostname</b> &lt;host name&gt; <b>-port</b> &lt;port number&gt; if the backup device is in a remote work station.</li> <li>&gt; <b>direct</b> to specify a USB attached backup device. If you know the slot number that contains the USB attached HSM, you can specify that slot number explicitly (for example, <b>-s 5</b>)</li> </ul>

### Example

```
lunacm:> partition archive list -slot 2
```

## HSM Storage Information for slot 2:

Total HSM Storage Space: 16252928  
Used HSM Storage Space: 26432  
Free HSM Storage Space: 16226496  
Allowed Partitions: 20  
Number Of Partitions: 2

## Partition list for slot 2

Number of partition: 2

Name: sa78backup  
Total Storage Size: 9480  
Used Storage Size: 9348  
Free Storage Size: 132  
Number Of Objects: 6

Name: sa40backup  
Total Storage Size: 12640  
Used Storage Size: 12464  
Free Storage Size: 176  
Number Of Objects: 8

Command Result : No Error



## partition archive restore

Restore partition objects from a backup. Use this command to restore objects from the specified backup partition, in a backup HSM, in a specified slot, to the current user partition.

### Cloning is a repeating atomic action

When you call for a cloning operation (such as backup or restore), the source HSM transfers a single object, encrypted with the source domain. The target HSM then decrypts and verifies the received blob.

If the verification is successful, the object is stored at its destination – the domains are a match. If the verification fails, then the blob is discarded and the target HSM reports the failure. Most likely the domain string or the domain PED key, that you used when creating the target partition, did not match the domain of the source HSM partition. The source HSM moves to the next item in the object list and attempts to clone again, until the end of the list is reached.

This means that if you issue a backup command for a source partition containing several objects, but have a mismatch of domains between your source HSM partition and the backup HSM partition, then you will see a separate error message for every object on the source partition as it individually fails verification at the target HSM.

## Syntax

### If backup device is a slot in the current system:

```
partition archive restore -slot <backup_slot> -partition <backup_partition> -password <password> [-replace] [-debug]
```

### If backup device is in a remote workstation:

```
partition archive restore -slot remote -hostname <hostname> -port <portnumber> -partition <backup_partition> -password <password> [-commandtimeout <seconds>] [-replace] [-debug]
```

### If backup device is a USB-attached device:

```
partition archive restore -slot direct [-slot <backup_slot>] -partition <backup_partition> -password <password> [-replace] [-debug]
```

Option	Shortcut	Description
<b>-commandtimeout</b> <seconds>	<b>-ct</b>	The command timeout for network communication. The default timeout is 10 seconds. The maximum timeout is 3600. This option can be used to adjust the timeout value to account for network latency. (optional)
<b>-debug</b>	<b>-deb</b>	Turn on additional error information. (optional)

Option	Shortcut	Description
<b>-hostname</b> <hostname>	<b>-ho</b>	Host name of remote workstation running remote backup server. (required when <b>-s remote</b> is used)
<b>-partition</b> <backup_partition>	<b>-par</b>	Partition on the backup device. (maximum length of 64 characters)
<b>-password</b> <password>	<b>-pas</b>	User password for the specified partition.
<b>-port</b> <portnumber>	<b>-po</b>	Port number for remote backup server on remote workstation. (required when <b>-s remote</b> is used)
<b>-slot</b> <see description>	<b>-s</b>	Target slot containing the backup device. It can be specified by any of the following: <ul style="list-style-type: none"> <li>&gt; &lt;slot number&gt;, if the backup slot is in the current system.</li> <li>&gt; <b>remote -hostname</b> &lt;host name&gt; <b>-port</b> &lt;port number&gt; if the backup device is in a remote work station.</li> <li>&gt; <b>direct</b> to specify a USB attached backup device. If you know the slot number that contains the USB attached HSM, you can specify that slot number explicitly (for example, <b>-s 5</b>)</li> </ul>

## Example

```
lunacm:> partition archive restore -slot 6 -password Pa$$w0rd -partition mybackupPar
```

```
Logging in to partition mybackupPar on slot 6 as the user.
```

```
Verifying that all objects can be restored...
```

```
1 object will be restored.
```

```
Restoring objects...
```

```
Cloned object 50 from partition mybackupPar (new handle 39).
```

```
Restore Complete.
```

```
1 objects have been restored from partition mybackupPar on slot 6.
```

```
Command Result : No Error
```

## partition changepolicy

Change a user policy on the partition.

**NOTE** If you are running more than one LunaCM session against the same partition, and change a partition policy in one LunaCM session, the policy change will be reflected in that session only. You must exit and restart the other LunaCM sessions to display the changed policy settings.

### Syntax

**partition changepolicy -policy <policy\_id> [-slot <slot\_number>] [-value <policy\_value>] [-force]**

Parameter	Shortcut	Description
<b>-force</b>	<b>-f</b>	Force action without prompting for confirmation.
<b>-policy &lt;policy_id&gt;</b>	<b>-p</b>	Specifies the ID of the policy you want to change.
<b>-slot &lt;slot_number&gt;</b>	<b>-s</b>	Specifies the slot where the partition is located.
<b>-value &lt;policy_value&gt;</b>	<b>-v</b>	Specifies the new value for the specified policy.

### Example

The output will vary depending on the specific policy being changed and whether or not the change is destructive. Use the command "[partition showpolicies](#)" on [page 80](#) with the **-verbose** option to see which commands are destructive and, if destructive, which direction -- On-to-off, or Off-to-on, or both directions.

## partition clear

Delete all User partition objects. You must be logged in as the user. The partition structure remains in place.

### Syntax

#### partition clear [-force]

Option	Shortcut	Description
<b>-force</b>	<b>-f</b>	Force the action without prompting for confirmation (useful for scripting). The <b>-force</b> option cannot be used on a virtual slot belonging to an HA group.

### Example

```
lunacm:>partition clear
```

```
    You are about to delete all token objects.  
    Are you sure you wish to continue?
```

```
    Type 'proceed' to continue, or 'quit' to quit now ->proceed
```

```
    2 objects were deleted.
```

```
Command Result : No Error
```

## partition clone

Clone User partition objects from the current slot to the specified slot.

### Cloning is a repeating atomic action

When you call for a cloning operation (such as backup or restore), the source HSM transfers a single object, encrypted with the source domain. The target HSM then decrypts and verifies the received blob.

If the verification is successful, the object is stored at its destination – the domains are a match. If the verification fails, then the blob is discarded and the target HSM reports the failure. Most likely the domain string or the domain PED key, that you used when creating the target partition, did not match the domain of the source HSM partition. The source HSM moves to the next item in the object list and attempts to clone again, until the end of the list is reached.

This means that if you issue a backup command for a source partition containing several objects, but have a mismatch of domains between your source HSM partition and the backup HSM partition, then you will see a separate error message for every object on the source partition as it individually fails verification at the target HSM.

## Syntax

**partition clone -objects** <handles> **-password** <password> **-slot** <slot\_number> [**-force**]

Option	Shortcut	Description
<b>-force</b>	<b>-f</b>	Force the action without prompting for confirmation.
<b>-objects</b> <handles>	<b>-o</b>	Specifies the object handles to extract. You can specify the object handles to clone using any of the following methods: <ul style="list-style-type: none"> <li>&gt; a single object handle</li> <li>&gt; zero, to indicate that all objects are to be extracted</li> <li>&gt; a list of handles, separated by commas. For example: <b>-objects 3,4,6</b></li> </ul>
<b>-password</b> <password>	<b>-p</b>	The target slot password. This option does not apply to PED-authenticated HSMs/tokens.
<b>-slot</b> <slot_number>	<b>-s</b>	The target slot.

## Example

```
lunacm:> partition clone -objects 124,140 -slot 1

Option -password was not supplied. It is required.

Enter the password for the target slot: *****

Verifying that the specified objects can be cloned.

All objects can be cloned.
```

Logging in to target slot 1

Checking if objects already exist on target slot 1.

Cloning the objects.

Handle 124 on slot 0 is now handle 141 on slot 1

Handle 140 on slot 0 is now handle 28 on slot 1

Command Result : No Error

## partition contents

---

Display a list of the objects on the partition. This command will display all objects accessible to the role that is currently logged in. The total object count is also displayed. For each object found, the label, handle, object type, and object UID are displayed.

### Syntax

#### **partition contents**

### Example

```
lunacm:> partition contents
```

```
    The 'Crypto User' is currently logged in.  Looking for objects
    accessible to the 'Crypto User'.
```

```
Object list:
```

```
Label:
Handle:      141
Object Type: Private Key
Object UID:  7c080000090000061b030100
```

```
Label:
Handle:      140
Object Type: Public Key
Object UID:  7b080000090000061b030100
```

```
Label:
Handle:      125
Object Type: Private Key
Object UID:  7a080000090000061b030100
```

```
Label:
Handle:      124
Object Type: Public Key
Object UID:  79080000090000061b030100
```

```
Number of objects:  4
```

```
Command Result : No Error
```

## partition init

Initialize an application partition. This command is used within the partition being initialized.

For password-authenticated HSMs, if the password is not provided via the command line, the user is interactively prompted for it. Input is echoed as asterisks, and user is asked for password confirmation. This creates the Crypto Officer role.

For PED-authenticated HSMs, PED action is required, and a partition Crypto Officer PED key (black) is imprinted. Any password provided at the command line is ignored.

**CAUTION!** When labeling HSMs or partitions, *never* use a numeral as the first, or only, character in the name/label. Token backup commands allow a slot-number OR a label as identifier, which can lead to confusion if the label is a string version of a slot number.

For example, if the token is initialized with the label "1", the user cannot use the label to identify the target for backup purposes, because VTL parses "1" as the numeric ID of the first slot rather than as a text label for the target in the actual occupied slot.

### Domain matching and the default domain

If you do not specify a domain in the command line, you are prompted for it.

If you type a character string at the prompt, that string becomes the domain for the partition.

When you run the **partition backup** command, you are again prompted for a domain for the target partition on the backup HSM. You can specify a string at the command line, or omit the parameter at the command line and specify a string when prompted. Otherwise press **Enter** with no string at the prompt to apply the default domain. The domain that you apply to a backup HSM must match the domain on your source HSM partition.

### Partition name rules

A partition **name** or a partition **label** can include any of the following characters:

```
!#$%()' *+,-./0123456789:=@ABCDEFGHIJKLMN O PQRSTUVWXYZ[]^_abcdefghijklmnopqrstuvwxy z}{~
```

- > No spaces, unless you wish to surround the name or label in double quotation marks every time it is used.
- > No question marks, no double quotation marks within the string.
- > Minimum name or label length is 1 character. Maximum is 32 characters.

### Partition password and domain rules

Valid characters that can be used in a **password** or in a cloning **domain** are:

```
!#$% '*+,-./0123456789:=?@ABCDEFGHIJKLMN O PQRSTUVWXYZ[]^_abcdefghijklmnopqrstuvwxy z}{~
```

(the first character in that list is the space character)

Invalid or problematic characters, not to be used in passwords or cloning domains are "&";<>`|()

Minimum password length is 7 characters; maximum is 255 characters.

Minimum domain string length is 1 character; maximum domain length is 128 characters.

Names and labels have an additional restriction, in that you should avoid a leading space.



## Syntax

**partition init -label** <string> [**-password**<string>] [**-domain**<string>] [**-applytemplate** <filepath/filename>] [**-defaultdomain**] [**-auth**] [**-force**]

Option	Shortcut	Description
<b>-applytemplate</b> <filepath/filename>	<b>-at</b>	Apply a policy template located in the specified directory.
<b>-auth</b>	<b>-a</b>	Log in after the initialization.
<b>-defaultdomain</b>	<b>-def</b>	Default cloning domain name. <i>Deprecated</i> . Used only on password-authenticated HSMs, and not recommended. Kept for compatibility with previous, existing configurations; will be discontinued in a future release.
<b>-domain</b>	<b>-d</b>	Partition domain name. Used only on password-authenticated HSMs; ignored for PED-authenticated.
<b>-force</b>	<b>-f</b>	Force the action (useful for scripting).
<b>-label</b>	<b>-l</b>	Label for the partition.
<b>-password</b>	<b>-p</b>	Partition Security Officer Password. Used only on password-authenticated HSMs; ignored for PED-authenticated.

## Example

```
lunacm:> partition init -label par2
```

```
You are about to initialize the partition.
All contents of the partition will be destroyed.
```

```
Are you sure you wish to continue?
```

```
Type 'proceed' to continue, or 'quit' to quit now -> proceed
```

```
Enter password for Partition SO: *****
```

```
Re-enter password for Partition SO: *****
```

```
Option -domain was not specified. It is required.
```

```
Enter the domain name: *****
```

```
Re-enter the domain name: *****
```

```
Command Result : No Error
```

## partition restoresim3file

Restore/insert HSM information from a SIM3 backup file. All objects in the file are restored to the HSM.

### Syntax

**partition restoresim3file -filename <input\_file>**

Option	Shortcut	Description
<b>-filename &lt;input_file&gt;</b>	<b>-fi</b>	The name of the backup file on your computer, from which the restore operation is performed.

### Example

```
lunacm:>partition restoresim3file -filename somepartfile
```

Restored Objects:

```
Object Handle: 14 (0xe)
Object Class: CKO_SECRET_KEY
Key Type: CKK_DES3
Label: Generated DES3 Key
```

```
Object Handle: 20 (0x14)
Object Class: CKO_SECRET_KEY
Key Type: CKK_DES3
Label: Generated DES3 Key
```

```
Object Handle: 30 (0x1e)
Object Class: CKO_SECRET_KEY
Key Type: CKK_DES2
Label: Generated DES2 Key
```

```
Object Handle: 31 (0x1f)
Object Class: CKO_SECRET_KEY
Key Type: CKK_AES
Label: Generated AES Key
```

```
Object Handle: 32 (0x20)
Object Class: CKO_PRIVATE_KEY
Key Type: CKK_RSA
Label: Generated RSA Private Key
```

Command Result : No Error

## partition setlegacydomain

Set the legacy cloning domain on a partition.

The legacy cloning domain for password-authenticated HSM partitions is the text string that was used as a cloning domain on the legacy token HSM or SafeNet Luna PCIe HSM whose contents are to be migrated to the SafeNet PCI 5.x HSM partition.

The legacy cloning domain for PED-authenticated HSM partitions is the cloning domain secret on the red PED key for the legacy PED authenticated HSM whose contents are to be migrated to the SafeNet PCIe 5.x HSM partition.

Your target HSM partition has, and retains, whatever modern partition cloning domain was imprinted (on a red PED Key) when the partition was created. This command takes the domain value from your legacy HSM's red PED Key and associates that with the modern-format domain of the partition, to allow the partition to be the cloning (restore...) recipient of objects from the legacy (token) HSM.

You cannot migrate objects from a password-authenticated token/HSM to a PED-authenticated HSM partition, and you cannot migrate objects from a PED authenticated token/HSM to a Password authenticated HSM partition. Again, this is a security provision.

See ["About the Migration Guide" on page 1](#) in the *Migration Guide* for information on the possible combinations of source (legacy) tokens/HSMs and target (modern) HSM partitions and the disposition of token objects from one to the other.

**NOTE** You can use this command repeatedly to associate different legacy domains to the current partition's cloning domain. This allows you to consolidate content from multiple legacy HSMs onto a single partition of a modern HSM.

### Syntax

**partition setlegacydomain [-legacydomain <legacystring>] [-force]**

Option	Shortcut	Description
<b>-force</b>	<b>-f</b>	Force action without prompting for confirmation.
<b>-legacydomain &lt;legacystring&gt;</b>	<b>-ld</b>	Legacy cloning domain string. This parameter must be specified for password-authenticated HSMs. It is optional for PED authenticated HSMs. If not specified, the domain is obtained using the PED.

### Example

```
lunacm:> partition setlegacydomain
```

```
Existing Legacy Cloning Domain will be destroyed.
Are you sure you wish to continue?
```

```
Type 'proceed' to continue, or 'quit' to quit now ->proceed
```

The PED prompts for the legacy red domain PED key (notice mention of "raw data" in the PED message).

Command result: No Error

## partition showinfo

Display partition-level information for the current slot.

### Syntax

**partition showinfo**

### Examples

#### Partition Info for a PSO application partition

```
lunacm:> partition showinfo

Partition Label -> par0
Partition Manufacturer -> Safenet, Inc.
Partition Model -> LunaSA 7.0.0
Partition Serial Number -> 154438865317
Partition Status -> L3 Device
HSM Part Number -> 808-000048-002
Token Flags ->
    CKF_LOGIN_REQUIRED
    CKF_USER_PIN_INITIALIZED
    CKF_RESTORE_KEY_NOT_NEEDED
    CKF_TOKEN_INITIALIZED
RPV Initialized -> Not Supported
Slot Id -> 0
Session State -> CKS_RW_PUBLIC_SESSION
Role Status -> none logged in
Token Flags ->
    TOKEN_KCV_CREATED
Partition OID: 01010000090000061b030100

Partition Storage:
    Total Storage Space: 324096
    Used Storage Space: 0
    Free Storage Space: 324096
    Object Count: 0
    Overhead: 9648

*** The partition is NOT in FIPS 140-2 approved operation mode. ***

Command Result : No Error
```

## partition showmechanism

Lists the supported mechanisms, or shows some detail about a named mechanism.

### Syntax

**partition showmechanism** [-m <mech\_ID\_number> ]

Option	Short	Description
[no arguments]	.	Lists all available mechanisms.
-m <mech_ID_number>	-m	Shows expanded information for the indicated mechanism (optional), where <mech_ID_number> is a hex mechanism number either 4 or 8 digits long.

### Example

#### List all mechanisms available to the partition

```
lunacm:> partition showmechanism
```

Mechanisms Supported:

```
0x00000000 - CKM_RSA_PKCS_KEY_PAIR_GEN
0x00000001 - CKM_RSA_PKCS
0x00000003 - CKM_RSA_X_509
0x00000006 - CKM_SHA1_RSA_PKCS
0x00000009 - CKM_RSA_PKCS_OAEP
0x0000000a - CKM_RSA_X9_31_KEY_PAIR_GEN
0x80000142 - CKM_RSA_FIPS_186_3_AUX_PRIME_KEY_PAIR_GEN
0x80000143 - CKM_RSA_FIPS_186_3_PRIME_KEY_PAIR_GEN
0x0000000b - CKM_RSA_X9_31
0x0000000c - CKM_SHA1_RSA_X9_31
0x80000135 - CKM_SHA224_RSA_X9_31
0x80000136 - CKM_SHA256_RSA_X9_31
0x80000137 - CKM_SHA384_RSA_X9_31
0x80000138 - CKM_SHA512_RSA_X9_31
0x8000013e - CKM_RSA_X9_31_NON_FIPS
0x80000139 - CKM_SHA1_RSA_X9_31_NON_FIPS
0x8000013a - CKM_SHA224_RSA_X9_31_NON_FIPS
0x8000013b - CKM_SHA256_RSA_X9_31_NON_FIPS
0x8000013c - CKM_SHA384_RSA_X9_31_NON_FIPS
0x8000013d - CKM_SHA512_RSA_X9_31_NON_FIPS
0x0000000d - CKM_RSA_PKCS_PSS
0x0000000e - CKM_SHA1_RSA_PKCS_PSS
:
:
0x00000365 - CKM_EXTRACT_KEY_FROM_KEY
0x00000391 - CKM_MD2_KEY_DERIVATION
0x00000390 - CKM_MD5_KEY_DERIVATION
0x00000392 - CKM_SHA1_KEY_DERIVATION
0x00000350 - CKM_GENERIC_SECRET_KEY_GEN
```

```
0x00000371 - CKM_SSL3_MASTER_KEY_DERIVE
0x00000372 - CKM_SSL3_KEY_AND_MAC_DERIVE
0x00000380 - CKM_SSL3_MD5_MAC
0x00000381 - CKM_SSL3_SHA1_MAC
0x00000221 - CKM_SHA_1_HMAC
0x00000222 - CKM_SHA_1_HMAC_GENERAL
0x00000211 - CKM_MD5_HMAC
0x00000212 - CKM_MD5_HMAC_GENERAL
0x00000370 - CKM_SSL3_PRE_MASTER_KEY_GEN
0x80000140 - CKM_DSA_SHA224
0x80000141 - CKM_DSA_SHA256
0x80000a02 - CKM_NIST_PRF_KDF
0x80000a03 - CKM_PRF_KDF
```

Command Result : No Error

### Show information about a particular mechanism

```
lunacm:> partition showmechanism -m 80000142
```

```
(0x80000142 - -2147483326) CKM_RSA_FIPS_186_3_AUX_PRIME_KEY_PAIR_GEN
  Min Key Size 1024
  Max Key Size 3072
  Flags 0x10001
```

Command Result : No Error

## partition showpolicies

Displays the partition-level capability and policy settings for the indicated user/application partition, including whether the policy is destructive when it is enabled or disabled (verbose mode). Include the **-exporttemplate** option to export the current state of all partition policies to a partition policy template (PPT).

### Policy template export is supported for application partitions only

The **partition showpolicies -exporttemplate** function is not supported for HSM admin partitions.

To export HSM-wide policies from network-connected HSMs, use the LunaSH command "[hsm showpolicies](#)" on page 1 with the **-exporttemplate** option.

### Multiple sessions and policy changes

If you are running more than one LunaCM session against the same partition, and change a partition policy in one LunaCM session, the policy change is reflected in that session only. You must exit and restart the other LunaCM sessions to display the changed policy settings.

## Syntax

**partition showpolicies [-slot <slot>] [-verbose] [-exporttemplate <filepath/filename>]**

Argument(s)	Short	Description
<b>-exporttemplate</b> <filepath/filename>	<b>-et</b>	Export the current state of all partition policies to a policy template in the specified location.
<b>-slot</b> <slot>	<b>-s</b>	Specifies the slot number for which to display partition policy settings. If no slot is specified, the policies for the currently-active slot are displayed.
<b>-verbose</b>	<b>-v</b>	Include information that specifies whether the policy is destructive when enabled/disabled.

## Example

### With -exporttemplate specified

```
lunacm:> partition showpolicies -exporttemplate /usr/safenet/lunaclient/templates/ParPT
```

```
Partition policies for Partition: myPartition1 written to /usr/safenet/lunaclient/templates/ParPT
```

```
Command Result : No Error
```

### Normal mode

```
lunacm:> partition showpolicies
Partition Capabilities
    0: Enable private key cloning : 1
    1: Enable private key wrapping : 1
    2: Enable private key unwrapping : 1
    3: Enable private key masking : 0
```



```

4: Enable secret key cloning : 1
5: Enable secret key wrapping : 1
6: Enable secret key unwrapping : 1
7: Enable secret key masking : 0
10: Enable multipurpose keys : 1
11: Enable changing key attributes : 1
15: Allow failed challenge responses : 1
16: Enable operation without RSA blinding : 1
17: Enable signing with non-local keys : 1
18: Enable raw RSA operations : 1
20: Max failed user logins allowed : 10
21: Enable high availability recovery : 1
22: Enable activation : 0
23: Enable auto-activation : 0
25: Minimum pin length (inverted: 255 - min) : 248
26: Maximum pin length : 255
28: Enable Key Management Functions : 1
29: Enable RSA signing without confirmation : 1
31: Enable private key unmasking : 1
32: Enable secret key unmasking : 1
33: Enable RSA PKCS mechanism : 1
34: Enable CBC-PAD (un)wrap keys of any size : 1
37: Enable Secure Trusted Channel : 1
39: Enable Start/End Date Attributes : 1

```

#### Partition Policies

```

0: Allow private key cloning : 1
1: Allow private key wrapping : 0
2: Allow private key unwrapping : 1
3: Allow private key masking : 0
4: Allow secret key cloning : 1
5: Allow secret key wrapping : 1
6: Allow secret key unwrapping : 1
7: Allow secret key masking : 0
10: Allow multipurpose keys : 1
11: Allow changing key attributes : 1
15: Ignore failed challenge responses : 1
16: Operate without RSA blinding : 1
17: Allow signing with non-local keys : 1
18: Allow raw RSA operations : 1
20: Max failed user logins allowed : 10
21: Allow high availability recovery : 1
22: Allow activation : 0
23: Allow auto-activation : 0
25: Minimum pin length (inverted: 255 - min) : 248
26: Maximum pin length : 255
28: Allow Key Management Functions : 1
29: Perform RSA signing without confirmation : 1
31: Allow private key unmasking : 1
32: Allow secret key unmasking : 1
33: Allow RSA PKCS mechanism : 1
34: Allow CBC-PAD (un)wrap keys of any size : 1
37: Force Secure Trusted Channel : 0
39: Allow Start/End Date Attributes : 0

```

Command Result : No Error

### Verbose mode

```

lunacm:> partition showpolicies
Partition Capabilities
0: Enable private key cloning : 1

```

```

1: Enable private key wrapping : 1
2: Enable private key unwrapping : 1
3: Enable private key masking : 0
4: Enable secret key cloning : 1
5: Enable secret key wrapping : 1
6: Enable secret key unwrapping : 1
7: Enable secret key masking : 0
10: Enable multipurpose keys : 1
11: Enable changing key attributes : 1
15: Allow failed challenge responses : 1
16: Enable operation without RSA blinding : 1
17: Enable signing with non-local keys : 1
18: Enable raw RSA operations : 1
20: Max failed user logins allowed : 10
21: Enable high availability recovery : 1
22: Enable activation : 0
23: Enable auto-activation : 0
25: Minimum pin length (inverted: 255 - min) : 248
26: Maximum pin length : 255
28: Enable Key Management Functions : 1
29: Enable RSA signing without confirmation : 1
31: Enable private key unmasking : 1
32: Enable secret key unmasking : 1
33: Enable RSA PKCS mechanism : 1
34: Enable CBC-PAD (un)wrap keys of any size : 1
37: Enable Secure Trusted Channel : 1
39: Enable Start/End Date Attributes : 1

```

## Partition Policies

Code	Description	Value	Destructive	
			Off-To-On	On-To-Off
0	Allow private key cloning	On	Yes	No
1	Allow private key wrapping	Off	Yes	No
2	Allow private key unwrapping	On	No	No
3	Allow private key masking	Off	Yes	No
4	Allow secret key cloning	On	Yes	No
5	Allow secret key wrapping	On	Yes	No
6	Allow secret key unwrapping	On	No	No
7	Allow secret key masking	Off	Yes	No
10	Allow multipurpose keys	On	Yes	No
11	Allow changing key attributes	On	Yes	No
15	Ignore failed challenge responses	On	Yes	No
16	Operate without RSA blinding	On	Yes	No
17	Allow signing with non-local keys	On	No	No
18	Allow raw RSA operations	On	Yes	No
20	Max failed user logins allowed	10	N/A	N/A
21	Allow high availability recovery	On	No	No
22	Allow activation	Off	No	No
23	Allow auto-activation	Off	No	No
25	Minimum pin length (inverted: 255 - min)	248	N/A	N/A
26	Maximum pin length	255	N/A	N/A
28	Allow Key Management Functions	On	Yes	No
29	Perform RSA signing without confirmation	On	Yes	No
31	Allow private key unmasking	On	No	No
32	Allow secret key unmasking	On	No	No
33	Allow RSA PKCS mechanism	On	Yes	No
34	Allow CBC-PAD (un)wrap keys of any size	On	Yes	No
37	Force Secure Trusted Channel	Off	No	Yes
39	Allow Start/End Date Attributes	Off	No	Yes

Command Result : No Error

## ped

Access the Remote-PED configuration commands. These commands manage the use of Remote PED with your SafeNet Luna HSM. You can use a PED connected to a distant computer to provide authentication when running HSM and partition commands.

Secure use of Remote PED is mediated by the Remote PED Vector (RPV) on the HSM and on orange Remote PED Keys (RPK). Obviously, the commands to administer your HSM could be issued remotely as well, using SSH or remote desktop connection. See ["About Remote PED" on page 1](#) in the *Administration Guide* for more information.

### Syntax

#### ped

**connect**  
**disconnect**  
**get**  
**set**  
**show**

Option	Shortcut	Description
<b>connect</b>	<b>c</b>	Connect to the remote PED. See <a href="#">"ped connect" on the next page</a> .
<b>disconnect</b>	<b>d</b>	Disconnect from the remote PED. See <a href="#">"ped disconnect" on page 87</a> .
<b>get</b>	<b>g</b>	Show the PED ID and the listening slot ID. See <a href="#">"ped get" on page 88</a> .
<b>set</b>	<b>se</b>	Set the PED ID. See <a href="#">"ped set" on page 89</a> .
<b>show</b>	<b>sh</b>	Display the remote PED server configuration. See <a href="#">"ped show" on page 90</a> .

## ped connect

Connect to a remote PED. This command instructs PedClient to attempt to connect to the Remote PED Server at the IP address and port specified on the command line, or configured using the **ped set** command. See "[ped set](#)" on page 89 for more information.

### Behavior when defaults are configured using ped set

The **ped set** command allows you to configure a default IP address and/or port for the Remote PED Server. These values are used if they are not specified when you issue the **ped connect** command. The behavior of the **ped connect** command when defaults are configured using **ped set** is as follows:

Values set with hsm ped set	Parameters specified by hsm ped connect	IP address used	Port used
IP address and port	None	IP address configured with <b>ped set</b> .	Port configured with <b>ped set</b> .
	IP address	IP address specified by <b>ped connect</b>	Port configured with <b>ped set</b> .
	Port	IP address configured with <b>ped set</b> .	Port specified by <b>ped connect</b>
	IP address and port	IP address specified by <b>ped connect</b>	Port specified by <b>ped connect</b>
IP address only	None	IP address configured with <b>ped set</b> .	Port 1503 (default).
	IP address	IP address specified by <b>ped connect</b>	Port 1503 (default).
	Port	IP address configured with <b>ped set</b> .	Port specified by <b>ped connect</b> .
	IP address and port	IP address specified by <b>ped connect</b>	Port specified by <b>ped connect</b> .

Values set with hsm ped set	Parameters specified by hsm ped connect	IP address used	Port used
Port only	None	Error. You must use the <b>-ip</b> parameter to specify an IP address.	Port configured with <b>ped set</b> .
	IP address	IP address specified by <b>ped connect</b>	Port configured with <b>ped set</b> .
	Port	Error. You must use the <b>-ip</b> parameter to specify an IP address..	Port specified by <b>ped connect</b>
	IP address and port	IP address specified by <b>ped connect</b>	Port specified by <b>ped connect</b>

### Behavior when no defaults are configured using ped set

If no defaults are configured using **ped set**, you must specify at least an IP address. If no port is specified, the default port (1503) is used.

### Syntax

**ped connect** [-ip <ip\_address>] [-port <number>] [-slot <slot\_number>]

Option	Shortcut	Description
<b>-ip</b> <ip_address>	<b>-i</b>	Specifies the IP Address of the PED. If <b>-ip</b> is not specified, the configured ip, if any, is used.
<b>-port</b> <number>	<b>-p</b>	Network Port (0-65535). If <b>-port</b> is not specified, the default or the configured port is used. <b>Default:</b> 1503
<b>-slot</b> <slot_number>	<b>-s</b>	Specifies the slot for the remote PED. If <b>-slot</b> is not specified, the current slot number is used.

### Example

```
lunacm:> ped connect
```

```
Command Result : No Error
```

## ped disconnect

Disconnect the current/active remote PED. No address information is required since only one remote PED connection can exist at one time.

### Syntax

**ped disconnect** [-slot <slotnum>] [-force]

Option	Shortcut	Description
<b>-force</b>	<b>-f</b>	Force the action without prompting.
<b>-slot</b>	<b>-s</b>	The slot on which to disconnect from the remote PED server. If this is not specified, the current slot is used.

### Example

```
lunacm:> ped disconnect
```

```
Are you sure you wish to disconnect the remote ped?
```

```
Type 'proceed' to continue, or 'quit' to quit now -> proceed
```

```
Command Result : No Error
```

## ped get

---

Show the PED connection type for current slot. This command displays the type of PED input which is expected ('local' or 'remote') on the current slot.

### Syntax

**ped get**

### Example

```
lunacm:> ped get
```

```
HSM slot 1 listening to remote PED (id 1).
```

```
Command Result : No Error
```

```
lunacm:> ped set id 0 slot 2
```

```
Command Result : No Error
```

```
lunacm:> ped get
```

```
HSM slot 2 listening to local PED (id 0).
```

```
Command Result : No Error
```



## ped set

Configure an IP address and/or port that are used by the **ped connect** command when establishing a connection to a Remote PED Server. See "[ped connect](#)" on page 85 for more information. At least one (**-ip** or **-port**) must be specified.

### Syntax

**ped set** [-ip <ped\_server\_ip> | -port <ped\_server\_port>]

Option	Shortcut	Description
<b>-ip</b> <ped_server_ip>	<b>-i</b>	Specifies the IP Address used by the <b>ped connect</b> command.
<b>-port</b> <ped_server_port	<b>-p</b>	Specifies the port used by the <b>ped connect</b> command. <b>Range:</b> 0-65535 <b>Default:</b> 1503

### Example

```
lunacm:> ped set -ip 192.20.11.64 -port 1503
```

Command Result : No Error

## ped show

---

Display information for the current HSM PED connection.

### Syntax

**ped show**

### Example

```
lunacm:> ped show
```

```
Configured Remote PED Server information
```

```
Remote PED Server IP address: 192.20.11.64  
Remote PED Server Port:      1503
```

```
Command Result : No Error
```

## remotebackup start

Start the remote backup server on the current slot. Your SafeNet Luna Backup HSM must be connected to that computer and the SafeNet Luna HSM client software must be installed, including the library and the Backup HSM driver. Use the **slot set -slot <number>** command to set the backup HSM as the current slot for use by the remote backup server.

### Syntax

remotebackup start [-port <portnum> -timeout <seconds>] [-commandtimeout <seconds>] [-debug]

Option	Shortcut	Description
<b>-commandtimeout</b> <seconds>	<b>-ct</b>	The command timeout for network communication. This option can be used to adjust the timeout value to account for network latency. <b>Default:</b> 10 seconds <b>Range:</b> 1 to 3600
<b>-debug</b>	<b>-de</b>	Display additional error information.
<b>-port</b> <portnum>	<b>-po</b>	Port number the server will listen on. If no port number is provided, the default port number is used. <b>Default:</b> 2222
<b>-timeout</b> <seconds>	<b>-t</b>	The time in seconds that the server will wait for a client connection. The maximum allowed value is 18000. After every client connection, the timeout value is restarted. <b>Default:</b> 18000 seconds <b>Range:</b> 1 to 18000

### Example

```
lunacm:> remotebackup start
```

```
Remote Backup Server started for slot 1 on port 2222.
```

```
It will run for 18000 seconds. To stop it sooner, hit 'ctl^c'.
```

```
Stopping Remote Backup Server.
```

```
Command Result : No Error
```

## role

Perform administrative commands related to HSM and partition roles - list roles, log in and log out, initialize a role on a partition, create a challenge secret, change or reset password for a role, etc.

### Syntax

#### role

**changepw**  
**createchallenge**  
**deactivate**  
**init**  
**list**  
**login**  
**logout**  
**recoveryinit**  
**recoverylogin**  
**resetpw**  
**setdomain**  
**show**

Option	Shortcut	Description
<b>changepw</b>	<b>cp</b>	Change password. See <a href="#">"role changepw"</a> on the next page
<b>createchallenge</b>	<b>cc</b>	Challenge create. See <a href="#">"role createchallenge"</a> on page 95.
<b>deactivate</b>	<b>deact</b>	Deactivate role. See <a href="#">"role deactivate"</a> on page 96.
<b>init</b>	<b>in</b>	Initialize a role on the partition. See <a href="#">"role init"</a> on page 97.
<b>list</b>	<b>li</b>	List roles on the partition. See <a href="#">"role list"</a> on page 98.
<b>login</b>	<b>logi</b>	Role login. See <a href="#">"role login"</a> on page 99.
<b>logout</b>	<b>logo</b>	Role logout. See <a href="#">"role logout"</a> on page 101.
<b>recoveryinit</b>	<b>ri</b>	Setup/configure for "Recovery Login". See <a href="#">"role recoveryinit"</a> on page 102.
<b>recoverylogin</b>	<b>rl</b>	Login using "Recovery Login". See <a href="#">"role recoverylogin"</a> on page 103.
<b>resetpw</b>	<b>r</b>	Reset password. See <a href="#">"role resetpw"</a> on page 104.
<b>setdomain</b>	<b>d</b>	Set the domain for a role. See <a href="#">"role setdomain"</a> on page 105.
<b>show</b>	<b>s</b>	Show state of a role. See <a href="#">"role show"</a> on page 106.

## role changepw

Change the password for a specified role.

### Syntax

**role changepw -name** <role> [**-oldpw** <oldpassword>] [**-newpw** <newpassword>] [**-prompt**] [**-force**]

Option	Shortcut	Description
<b>-name</b> <role>	<b>-n</b>	Role to change password for.
<b>-oldpw</b> <oldpassword>	<b>-old</b>	<p>Current password (for application partition on PW authenticated HSM) or current challenge secret (for application partition on PED authenticated HSM).</p> <p>If you include option <b>-oldpw</b> the HSM assumes that you wish to change the challenge secret, which is the "secondary credential". This applies to Crypto Officer and Crypto User, which each have primary and secondary credentials, but not to Partition SO, which has only primary credential.</p> <p>If you omit option <b>-oldpw</b> the HSM assumes that you wish to change the "primary credential" or PED key secret.</p> <p>Required if you wish to change the secondary credential.</p>
<b>-newpw</b> <newpassword>	<b>-new</b>	<p>New password (for application partition on PW authenticated HSM) or new challenge secret (for application partition on PED authenticated HSM).</p> <p>Required if you have already provided an <b>-oldpw</b>.</p>
<b>-prompt</b>	<b>-p</b>	Prompt for challenges (challenges will be hidden by *)
<b>-force</b>	<b>-f</b>	Force the action. Use this option to bypass the warning about primary/secondary credentials on a PED-authenticated HSM, as shown in the example.

### Examples

#### Change credential on the HSM's Admin partition

```
lunacm:> role login -name SO

Please attend to the PED.

Command Result : No Error
```

```
lunacm:> role changepw -name SO -prompt
```

```
Warning: this role has no secondary credentials.  
-prompt parameter will be ignored.
```

```
Type 'proceed' to continue, or 'quit' to quit now -> proceed
```

```
Please attend to the PED.
```

```
Command Result : No Error
```

---

### Change the Crypto Officer's primary credential (PED Key secret)

```
lunacm:> role changepw -name co
```

```
This role has secondary credentials.  
You are about to change the primary credentials.  
Are you sure you wish to continue?
```

```
Type 'proceed' to continue, or 'quit' to quit now -> proceed
```

```
Command Result : No Error
```

---

### Change Crypto Officer's secondary credential (challenge secret)

```
lunacm:> role changepw -name co -oldpw PASSWORD -newpw userpin
```

```
This role has secondary credentials.  
You are about to change the secondary credentials.  
Are you sure you wish to continue?
```

```
Type 'proceed' to continue, or 'quit' to quit now -> proceed
```

```
Command Result : No Error
```

## role createchallenge

Create a challenge secret for the Crypto Officer (CO) or Crypto User (CU) role on the current partition (slot). This command applies to PED-authenticated partitions only.

The challenge secret is a text string (password) that provides an additional level of authentication for PED-authenticated partitions. If you create a challenge secret for a role, the role authenticates to the partition as follows:

- > If the role is not activated on the partition, the role must provide both the PED key and challenge secret to gain access to the partition.
- > If the role is activated on the partition, the role is able to access the partition using the challenge secret only.

See ["Activation and Auto-Activation on PED-Authenticated Partitions" on page 1](#) in the *Administration Guide* for more information.

You must be logged in as the Partition SO to create a challenge for the Crypto Officer. You must be logged in as the Crypto Officer to create a challenge for the Crypto User. The target role must already exist. See ["role init" on page 97](#).

### Syntax

**role createchallenge -name <role> [-challengesecret <string>]**

Option	Shortcut	Description
<b>-name &lt;role&gt;</b>	<b>-n</b>	Name of role for which the challenge is to be created
<b>-challengesecret</b>	<b>-c</b>	The challenge secret (password) you wish to create for this role. If this option is not included, you will be prompted to enter a challenge secret, masked by asterisks (*).

### Example

```
lunacm:> role createchallenge -name co

Please attend to the PED.

enter new challenge secret: *****

re-enter new challenge secret: *****
```

Command Result : No Error

## role deactivate

Deactivates a role on a partition.

If the "Allow activation" policy is set, then activation/re-activation happens with login for the CO and CU roles. Use this command to disable activation for a specific role.

### Syntax

**role deactivate -name** <role>

Option	Shortcut	Description
<b>-name</b> <role>	<b>-n</b>	Name of role to be deactivated.

### Example

```
lunacm:> role login -name po
```

```
    Please attend to the PED.
```

```
Command Result : No Error
```

```
lunacm:> role deact -n co
```

```
Command Result : No Error
```



## role init

Initializes (creates) the named role on the current partition / slot, if applicable.

Use the command ["role list" on the next page](#) to see which roles are possible on the current partition/slot.

The Auditor role can exist only on the HSM's administrative partition, and shares that partition with the HSM Security Officer or SO. The Auditor role cannot be initialized by another role. Therefore, if the HSM SO is currently logged in, the SO must log out before you run **role init** to create the Auditor.

When the Auditor role is created, it has no domain set. To allow Auditor to clone, you must log in as Auditor and run the command **role setdomain**. See ["role setdomain" on page 105](#).

### Syntax

**role init -name** <role> [-password <password>]

Option	Shortcut	Description
<b>-name</b> <role>	<b>-n</b>	Name of role to be initialized. You can type the entire string, or use the shortcut shown in parentheses (not case-sensitive). <b>Valid roles:</b> Crypto Officer (CO). The SO initializes the CO. Crypto User (CU). The CO initializes the CU. Audit (AU). The SO initializes the AU.
<b>-password</b> <password>	<b>-p</b>	The initial password for role, valid for the initial login only. <b>NOTE</b> The role must change the initial password using the command <a href="#">"role changepw" on page 93</a> during the initial login session, or when they attempt a subsequent login.

### Example

#### Initializing the Crypto Officer role

```
lunacm:>role init -name co

Please attend to the PED.

Command Result : No Error
```

#### Initializing the Auditor role

```
lunacm:>role init -name au

Please attend to the PED.

Command Result : No Error
```

---

## role list

---

List the roles available on the current partition/slot.

### Syntax

**role list**

### Example

```
lunacm:>slot set slot 0
```

```
Current Slot Id:    0      (Luna User Slot 7.0.1 (PED) Signing With Cloning Mode)
```

```
Command Result : No Error
```

```
lunacm:>role list
```

```
Roles                (short)
=====
Partition SO         po
Crypto Officer       co
Crypto User          cu
```

```
Command Result : No Error
```

## role login

Logs the named user into the partition at the current slot.

For password-authenticated HSMs, the entire credential is the password. You can enter your password visibly on-screen with the **-password** option, or wait to be prompted after pressing enter. Passwords entered at the prompt are masked by asterisks (\*). This is the administrative password (Crypto Officer or Crypto User), and it is also the same password that is presented by your application program when it performs cryptographic operations on the application partition.

For PED-authenticated HSMs, the authentication is the black PED key and the password/challenge for Crypto Officer, or the gray PED key and the password/challenge for Crypto User.

- > If Partition Policy 22: Allow activation is not set (value = 0), then the black PED key and the password/challenge are both required for each login, including those initiated by your application program.
- > If Partition Policy 22: Allow activation is set (value = 1 see ["partition change policy" on page 67](#)), then the PED Key secret is cached, and only the password/challenge string is required for each subsequent login. That is, if the partition is activated, you are not prompted to respond to the PED. At that point, your application program can authenticate with just the password/challenge string, as if the HSM was PW-authenticated.

Activation (caching of the PED key secret) persists until you explicitly deactivate (see ["role deactivate" on page 96](#)) or until the HSM is restarted or loses power.

**CAUTION!** If too many bad login attempts are made against a role, the appropriate security policy for that role is enacted. For example, three bad attempts to log into the HSM SO role causes all HSM contents to be zeroized. Too many attempts on the Crypto Officer role causes that role to be locked out until reset by the SO. The bad-login count is reset by a successful login. For the Auditor role, if the bad login attempt threshold is exceeded, the HSM locks out that role for 60 seconds. The output of **role show**, during that time, gives a status of "Locked out". However, **role show** continues to show a state of "Locked out" even after the lockout time has expired; the displayed status does not reset until after a successful login.

PKCS#11 permits one role to be logged into a slot, per session. If a role is logged in, and you attempt to log in as a different role, the HSM presents an error message like `USER_ALREADY_LOGGED_IN`, indicating that some other user role is logged into the current slot via the current session. If you need to log in, your options are:

- > Log out the other user and log in as the desired user, in the current session,
- or
- > Launch another session (lunacm or other tool), select the slot, and log in from there.

## Syntax

**role login -name** <role> [**-password** <password>]

Option	Shortcut	Description
<b>-name</b> <role>	<b>-n</b>	Specifies the name of the role that is logging in. Use the command <a href="#">"role list" on page 98</a> to see the roles available on the partition. <b>Note:</b> If you specify multiple users (for example <b>role login -n Crypto Officer -n Partition SO</b> , the last one entered (in this example, <b>Partition SO</b> ), is used.
<b>-password</b> <password>	<b>-p</b>	Specifies the password for the role. Omit this parameter to be prompted for a password, which will be obscured by * characters when entered.

## Example

```
lunacm:> role list
  Roles                (short)
  =====
  Partition SO         po
  Crypto Officer       co
  Crypto User          cu
```

Command Result : No Error

```
lunacm:>role login -name po
```

Please attend to the PED.

Command Result : No Error

## role logout

---

This command logs the currently logged-in role out of a partition.

For PED-authenticated HSMs, if the activation policy is set, then logout does not uncache the PED Key data, so the next login will require only the password/challenge for success - no PED prompt appears.

### Syntax

**role logout**

### Example

```
lunacm:> role logout
```

```
Command Result : No Error
```

## role recoveryinit

Initialize the current role for Recovery Login by creating an HA RSA key pair. This command applies to SafeNet Luna PCIe HSM or SafeNet Luna USB HSM. Does not apply to SafeNet Luna Network HSM partitions that appear in LunaCM via NTLS or STC channel.

See also CKDemo "[The HIGH AVAILABILITY RECOVERY Menu Functions](#)" on page 1.

### Syntax

**role recoveryinit** [-plabel <string>] [-rlabel <string>] [-keyhandle <number>] [-force]

Option	Shortcut	Description
-plabel <string>	-pl	RSA Public key label.
-rlabel <string>	-rl	RSA Private key label.
-keyhandle <number>	-kh	RSA Private key handle (optional).
-force	-f	Force action (useful for scripting).

### Example

```
lunacm:>role recoveryinit -plabel SOpub -rlabel SOpriv
```

```
    Generating RSA Key pair for Recovery Init...
```

```
    'SO' in slot 103 has been Recovery Initialized  
    with key handle 37.
```

```
Command Result : No Error
```

## role recoverylogin

Perform an HA recovery login. This command applies to SafeNet Luna PCIe HSM or SafeNet Luna USB HSM. Does not apply to SafeNet Luna Network HSM partitions that appear in LunaCM via NTLS or STC channel.

See also CKDemo "[The HIGH AVAILABILITY RECOVERY Menu Functions](#)" on page 1.

### Syntax

**role recoverylogin -user** <username> **-slot** <slotnumber> **-keyhandle** <number>

Option	Shortcut	Description
<b>-user</b> <username>	<b>-pl</b>	User name.
<b>-slot</b> <slotnumber>	<b>-s</b>	Target slot.
<b>-keyhandle</b> <number>	<b>-kh</b>	Handle of RSA Private key to use.

### Example

```
lunacm:>role recoverylogin -user somebody -slot 3 -keyhandle 46
```

## role resetpw

Resets the password for a specified role. The partition SO can reset the Crypto Officer password or black PED key only if HSM policy 15: "Enable SO reset of partition PIN" is enabled. By default, this policy is not enabled and changing it is destructive.

If the target role is not on the current partition, you must specify the target role's partition's slot.

**NOTE** Resetting passwords for roles on partitions other than the current partition is possible only from the administrative partition.

### Syntax

**role resetpw -name** <role> [**-password** <password>] [**-slot** <slotnumber>]

Option	Shortcut	Description
<b>-name</b> <role>	<b>-n</b>	Name of role to have password reset.
<b>-password</b> <password>	<b>-p</b>	Password for the specified role. Use this option for password-authenticated HSMs only. PED-authenticated HSMs will return an error.
<b>-slot</b> <slotnumber>	<b>-s</b>	Target slot.

### Example

```
lunacm:> role resetpw -name co
```

```
    Please attend to the PED.
```

```
Command Result : No Error
```



## role setdomain

Sets the domain of a role. Used only by the HSM's Auditor user. The Auditor role must have been initialized previously, and must be logged in, in order to set the domain. On password-authenticated HSMs, this step is required before setting logging parameters or the log filepath, or importing/exporting audit logs.

### Syntax

**role setdomain** [-domain <domain> | -defaultdomain] [-force]

Option	Shortcut	Description
<b>-domain</b> <domain>	<b>-d</b>	Set the role Cloning Domain string for password-authenticated HSM only; ignored for PED-authenticated HSM) <b>Note:</b> <b>-domain</b> and <b>-defaultdomain</b> are mutually exclusive parameters - attempting to use both causes the command to fail with an error message.
<b>-defaultdomain</b>	<b>-def</b>	Set the default domain on a password-authenticated HSM; ignored for PED-authenticated HSM. (Deprecated - not recommended unless needed to clone with older HSMs that had default domain set.) <b>Note:</b> <b>-domain</b> and <b>-defaultdomain</b> are mutually exclusive parameters - attempting to use both causes the command to fail with an error message.
<b>-force</b>	<b>-f</b>	Force the action (useful for scripting)

### Example

```
lunacm:> role login -name au
Please attend to the PED.
```

Command Result : No Error

```
lunacm:> role setdomain
```

```
You are about to set a new domain for the role.
Are you sure you wish to continue?
```

```
Type 'proceed' to continue, or 'quit' to quit now -> proceed
```

```
Please attend to the PED.
```

Command Result : No Error

## role show

Shows the state of the named role.

**NOTE** For the Auditor role, if the bad login attempt threshold is exceeded, the HSM locks out that role for 60 seconds. The output of **role show**, during that time, gives a status of "Locked out".

However, **role show** continues to show a state of "Locked out" even after the lockout time has expired; the displayed status does not reset until after a successful login.

### Syntax

**role show -name** <role>

Option	Shortcut	Description
<b>-name</b> <role>	<b>-n</b>	The name of the role to show.

### Example

```
lunacm:> role show -name co
```

```
State of role 'Crypto Officer':
  Primary authentication type:      PED
  Secondary authentication type:   PIN
  Failed login attempts before lockout: 10
```

Command Result : No Error

```
lunacm:> role show -name Crypto User
```

```
State of role 'Crypto User':
  Not initialized.
```

Command Result : No Error

## slot

Access the slot commands.

Slots originated as a cryptographic software concept, later overlaid onto HSM function, and originally corresponded to individual removable cryptographic "token" HSMs. In general, a physical "slot" correlates to a PKCS#11 crypto slot. However, to allow for cases where more than one HSM, or where physical SafeNet Luna HSMs containing multiple virtual HSMs can be connected, we declare placeholder slots that might or might not be occupied by a physical device, but which are seen by the library as ready for a device to be connected.

This allows (for example) a USB-connected HSM to be connected to a SafeNet appliance or to a SafeNet Luna HSM client computer during a cryptographic session without requiring a restart. Similarly, it allows HA operation, where client activity is directed toward the HA virtual slot, but the client must be able to see all physical slots, in addition to that HA virtual slot, in order to coordinate the function of the HA group.

LunaCM depends on the availability of HSM partitions in order to be useful. If no application partition has been created, then only the HSM SO (administrative) partition is available, against which to run commands.

If the `Chrystoki.conf / Crystoki.ini` configuration file [Presentation] setting "ShowAdminTokens=" is set to no, then the HSM administrative partition/slot is also unavailable, and LunaCM is not usable. If you know you have a working SafeNet Luna PCIe HSM or SafeNet Luna USB HSM attached to your Client computer and LunaCM shows no usable commands, then verify in your `Chrystoki.conf` or `Crystoki.ini` file that "ShowAdminTokens" is not set to no.

## Syntax

### slot

```

configset
configshow
list
partitionlist
set
showempty

```

Option	Shortcut	Description
<b>configset</b>	<b>cset</b>	Set a configuration item for the slot. See <a href="#">"slot configset" on the next page</a>
<b>configshow</b>	<b>cshow</b>	Show the configuration for a slot . See <a href="#">"slot configshow" on page 110</a> .
<b>list</b>	<b>l</b>	List the available slots. See <a href="#">"slot list" on page 111</a> .
<b>partitionlist</b>	<b>plist</b>	List the partitions for a slot. See <a href="#">"slot partitionlist" on page 113</a> .
<b>set</b>	<b>s</b>	Set the current slot. See <a href="#">"slot set" on page 114</a> .
<b>showempty</b>	<b>semp</b>	Show empty slots and their types. See .

## slot configset

Identify and set a SafeNet Luna Backup HSM partition to access at the specified slot number.

This command is used only with a SafeNet Luna Backup HSM at firmware version earlier than 6.22.0, and allows an archive partition on the Backup HSM to be accessed in a manner similar to an application partition on a general-purpose HSM. This command was originally developed for purposes of object migration from older PCMCIA-type HSMs in a SafeNet DOCK reader. It is still available, and can be used on a SafeNet Luna Backup HSM, if you have a use for it. For a Backup HSM partition that is exposed by the **slot configset** command, the following limitations apply:

- > Keys cannot be used for cryptographic objects.
- > Keys cannot be modified.

The benefit of applying the **slot configset** command to a Backup HSM is that, on an identified archive partition:

- > Keys can be deleted, individually/selectively.
- > Keys can be cloned to other HSM partitions.

Partitions are named as they are created on a Backup HSM to accept archived objects during backup operations. If more than one backup partition exists on a Backup HSM, they are not exposed when you perform the lunacm command **slot list**. Generally the only backup partition that is referenced by default when the slot listing shows a slot as containing a SafeNet Luna Backup HSM is from older editions of SafeNet Luna HSMs, and is called "Cryptoki User". To choose which, of potentially several, archive partitions within a Backup HSM is the active partition, and to make it accessible, you need to identify that archive partition by name.

The process is to list/view the partitions while the Backup HSM is the current slot in LunaCM, using **partition list**, in order to see their partition names. Then run **slot configset -slot <slot#-of-the-backup-hsm> -partitionname <name-of-desired-partition-on-backup-hsm>** Then, for example, use **partition clone** to clone selected objects to other HSM partition slots.

**NOTE** The configuration set with this command exists for the current LunaCM session only. If you log out of your LunaCM session, your **slot configset** configuration is erased.

### Syntax

**slot configset -slot <slot\_number> -partitionname <partition\_name>**

Option	Shortcut	Description
<b>-partitionname</b> <partition_name>	<b>-p</b>	The partition name of the slot.
<b>-slot</b> <slot_number>	<b>-s</b>	Specifies the number of the slot for which you wish to set configuration settings.

### Example

```
lunacm:> slot configset -slot 1 -partitionname backuppar3
```

Slot configuration was successfully updated.

Command Result : No Error

## slot configshow

Show the configuration information for the specified slot number.

### Syntax

**slot configshow -slot** <slot\_number>

Option	Shortcut	Description
<b>-slot</b> <slot_number>	<b>-s</b>	The number of the slot for which you want to show the configuration information.

### Example

```
lunacm:> slot configshow -slot 2
```

```
Slot Configuration:
```

```
Slot ID:                2
User Partition Name:    Cryptoki User
```

```
Command Result : No Error
```

## slot list

List the available slots on the system. The HSM administrative partition and any application partition are distinct and appear individually in a LunaCM slot list, so at least two slots. Similarly, if you have several local SafeNet Luna HSMs installed or connected, or if you have SafeNet Luna Network HSM application partitions Ethernet-connected via NTLS or STC links, then you can have multiple slots represented in a LunaCM slot list.

LunaCM depends on the availability of HSM partitions in order to be useful. If no application partition has been created, then only the HSM SO (administrative) partition is available, against which to run commands.

If the Chrystoki.conf / Crystoki.ini configuration file [Presentation] setting "ShowAdminTokens=" is set to no, then the HSM administrative partition/slot is also unavailable, and LunaCM is not usable. If you know you have a working SafeNet Luna PCIe HSM or SafeNet Luna USB HSM attached to your Client computer and LunaCM shows no usable commands, then verify in your Chrystoki.conf or Crystoki.ini file that "ShowAdminTokens" is not set to no.

**NOTE** The LunaCM command **hagroup haonly** acts on your client applications, either allowing (default or **hagroup haonly -disable**) or disallowing (**hagroup haonly -enable**) the application to see individual HSM partition slots or just the HA group virtual slot, respectively. The command has no effect on administrative tools like LunaCM, where a **slot list** returns all slots, both actual and virtual, regardless of the status of **hagroup haonly**.

## Syntax

### slot list

## Example

```
lunacm:> slot list
```

```
Slot Id ->          0
Label ->           par0
Serial Number ->   1238700701521
Model ->           LunaSA
Firmware Version -> 7.0.1
Configuration ->   Luna User Partition With SO (PED) Signing With Cloning Mode
Slot Description -> Net Token Slot

Slot Id ->          1
Label ->           par1
Serial Number ->   1238700701522
Model ->           LunaSA
Firmware Version -> 7.0.1
Configuration ->   Luna User Partition With SO (PED) Signing With Cloning Mode
Slot Description -> Net Token Slot

Slot Id ->          2
Label ->           par2
Serial Number ->   154438865317
Model ->           LunaSA 7.0.0
Firmware Version -> 7.0.1
Configuration ->   Luna User Partition With SO (PW) Signing With Cloning Mode
Slot Description -> Net Token Slot
```

```
Slot Id -> 3
Label -> myRBSG5Bk
Serial Number -> 7000329
Model -> G5Backup
Firmware Version -> 6.22.0
Configuration -> Luna HSM Admin Partition (PW) Backup Mode
Slot Description -> Net Admin Token Slot
HSM Configuration -> Luna HSM Admin Partition (PW) Backup Device
HSM Status -> OK
```

Current Slot ID: 3

Command Result : No Error

**NOTE** Each HSM administrative partition in a slot list includes "HSM Status". The possible values are listed, along with expanded descriptions and possible responses, at "[HSM Status Values](#)" on page 1 in the *Administration Guide*.



## slot partitionlist

List the partitions for the specified slot. This is of interest when a cryptographic slot might contain more than one HSM partition. In general, one slot contains one partition, but a SafeNet Luna Backup HSM, for example, might occupy one cryptographic slot while containing many partitions (see ["slot configset" on page 108](#)).

### Syntax

**slot partitionlist -slot <slot\_number>**

Parameter	Shortcut	Description
<b>-slot &lt;slot_number&gt;</b>	<b>-s</b>	The slot for which you want to list the partitions.

### Example

```
lunacm:> s plist -s 103
```

```
    Number of Partitions: 3
```

```
        Partition #: 1
        Partition Name: par0
```

```
        Partition #: 2
        Partition Name: par1
```

```
        Partition #: 3
        Partition Name: par2
```

```
Command Result : No Error
```

## slot set

Set the current slot number. The current slot is the slot to which you want LunaCM commands to apply.

LunaCM commands work on the current slot. If there is only one slot, then it is always the current slot. If there is more than one slot, then use the **slot set** command to direct the focus at the desired slot/partition, so that you can use LunaCM commands against whatever HSM admin partition or application partition occupies the indicated slot.

This command is useful where you have more than one SafeNet module installed in or connected to your computer, or when you have a single HSM where the HSM administrative slot is separate from the application partition slot. In those cases, you can use the **slot list** command to see which slot numbers have been assigned, and then use **slot set** to specify which of the available HSM partitions (in their slots) you wish to address with LunaCM commands.

### Syntax

**slot set -slot** <slot\_number>

Option	Shortcut	Description
<b>-slot</b> <slot_number>	<b>-s</b>	The number of the slot that you wish to assign as the current slot for other LunaCM utility commands to work with.

### Example

```
lunacm:> slot set -slot 4
```

```
Command Result : No Error
```

## slot showempty

---

This command will list the available empty slots on the system and their types.

### Syntax

**slot showempty**

### Example

```
lunacm:> slot showempty
```

```
Slot Id -> 5: Luna UHD Slot  
Slot Id -> 6: Luna UHD Slot  
Slot Id -> 7: Luna UHD Slot
```

```
Current Slot Id: 0
```

```
Command Result : No Error
```

## stc

**NOTE** STC commands are used only for configuring partitions on the SafeNet Luna Network HSM.

Access the STC (secure trusted channel) setup commands. Use these commands to set up and manage an STC network link between a client and a partition.

See also "[stconfig](#)" on page 130 for the STC configuration commands, which you can use to specify the network and security settings for the STC link.

### Syntax

#### stc

**disable**  
**enable**  
**identitycreate**  
**identitydelete**  
**identityexport**  
**identityshow**  
**partitionderegister**  
**partitionregister**  
**status**  
**tokeninit**  
**tokenlist**

Option	Shortcut	Description
<b>disable</b>	<b>d</b>	Disable STC for the current slot. See " <a href="#">stc disable</a> " on page 118.
<b>enable</b>	<b>e</b>	Enable STC for the current slot. See " <a href="#">stc enable</a> " on page 119.
<b>identitycreate</b>	<b>idc</b>	Create a client identity on the STC client token. See " <a href="#">stc identitycreate</a> " on page 120.
<b>identitydelete</b>	<b>idd</b>	Delete a client identity from the STC identity token. See " <a href="#">stc identitydelete</a> " on page 121.
<b>identityexport</b>	<b>ide</b>	Export the STC client identify to a file. See " <a href="#">stc identityexport</a> " on page 122.
<b>identityshow</b>	<b>idsh</b>	Display the client name, public key hash, and registered partitions for the STC client token. See " <a href="#">stc identityshow</a> " on page 123.
<b>partitionderegister</b>	<b>pard</b>	Remove a partition identity from the STC client token. See " <a href="#">stc partitionderegister</a> " on page 124.

Option	Shortcut	Description
<b>partitionregister</b>	<b>parr</b>	Register a partition to the STC client token. See " <a href="#">stc partitionregister</a> " on page 125
<b>status</b>	<b>s</b>	Display status and configuration information for an STC link. See " <a href="#">stc status</a> " on page 126.
<b>tokeninit</b>	<b>ti</b>	Initialize a client token. See " <a href="#">stc tokeninit</a> " on page 127.
<b>tokenlist</b>	<b>tl</b>	List the available STC client identity tokens. See " <a href="#">stc tokenlist</a> " on page 129.

## stc disable

Disable STC for the current slot. This command changes the port for the client-partition network link from STC to NTLS and saves the change to the **ServerPort00** statement in the **Chrystoki.conf** (Linux) or **crystoki.ini** (Windows) file.

**CAUTION!** Disabling the STC link terminates all existing sessions.

### Syntax

**stc disable -id <server\_ID> [-force]**

Option	Shortcut	Description
<b>-id &lt;server_ID&gt;</b>	<b>-i</b>	Specifies the identifier of the SafeNet Luna Network HSM appliance to which you want to disable STC, as displayed using the command " <a href="#">clientconfig listservers</a> " on page 26.
<b>-force</b>	<b>-f</b>	Force the action without prompting.

### Example

```
lunacm:> stc disable
```

```
You are about to disable STC to server 192.20.11.40
The following slot will be affected:
```

```
0,1,2,3
```

```
This will initiate an automatic restart of this application All sessions
logged in through the application will be closed.
```

```
Are you sure you wish to continue?
```

```
Type 'proceed' to continue, or 'quit' to quit now ->proceed
```

```
Successfully disabled STC to connect to server 192.20.11.40.
```

```
Command Result : No Error
```

## stc enable

Enable STC on the current HSM/partition. This command changes the port for the client-partition network link from NTLS to STC and saves the change to the **ServerPort00** statement in the **Chrystoki.conf** (Linux) or **crystoki.ini** (Windows) file.

This command is valid only if the STC policy is enabled on both the HSM and the partition. See ["Enabling or Disabling STC on the HSM" on page 1](#) and ["Enabling or Disabling STC on a Partition" on page 1](#) in the *Administration Guide*.

**CAUTION!** Enabling the STC link terminates all existing NTLS sessions.

### Syntax

**stc enable -id**<server\_ID> [**-force**]

Option	Shortcut	Description
<b>-force</b>	<b>-f</b>	Force the action without prompting.
<b>-id</b> <server_ID>	<b>-i</b>	Specifies the identifier of the SafeNet Luna Network HSM appliance to which you want to disable STC, as displayed using the command <a href="#">"clientconfig listservers" on page 26</a> .

### Example

```
lunacm:> clientconfig listservers
```

Server ID	Server	Channel	HTL Required
0	192.20.11.78	NTLS	no
1	192.20.11.40	NTLS	no

Command Result : No Error

```
lunacm:> stc enable -id 1
```

```
You are about to enable STC to server 192.20.11.40.
This will initiate an automatic restart of this application. All sessions
logged in through the application will be closed.
```

```
Are you sure you wish to continue?
```

```
Type 'proceed' to continue, or 'quit' to quit now -> proceed
```

```
Successfully enabled STC to connect to server 192.20.11.40.
```

Command Result : No Error

## stc identitycreate

Create a client identity on the STC client token. After it is created, the client identity is exported to the following path:

<luna\_client\_root\_dir>/data/client\_identities/<client-name>

**NOTE** If a client identity already exists, a warning is displayed. If you choose to create a new identity, all currently registered partition identities will be removed and will need to be registered to the new client identity.

### Syntax

**stc identitycreate -label <label> [-force]**

Option	Shortcut	Description
-label <label>	-l	Specifies the token label.
-force	-f	Force the action without prompting.

### Example

```
lunacm:> stc identitycreate -label client1
```

Client identity client1 successfully created and exported to file C:\Program Files\SafeNet\LunaClient\data\client\_identities\client1

Command Result : No Error



## stc identitydelete

Delete a client identity from the STC identity token. This command, in conjunction with "[stc identitycreate](#)" on [the previous page](#) allows you to re-generate the token identity key pair if required for security reasons (for example, if the token is compromised), or for administrative reasons (for example, to perform a key rotation).

This command does the following, in the order specified:

1. Deletes the client identity public key in the partition.
2. Deletes each registered partition identity.
3. Deletes the client identity.

If any of the identities fail to be deleted, the command will report the failure but will continue to delete the client identity.

**CAUTION!** Deleting the client identity results in the loss of all partitions registered to the client. Any applications using those partitions will experience a loss of service.

### Syntax

#### stc identitydelete [-force]

Option	Shortcut	Description
-force	-f	Force the action without prompting.

### Example

```
lunacm:> stc identitydelete
```

```
Are you sure you want to delete the client identity client1?
```

```
All the partition registrations will be lost. Any applications using this
client identity will subsequently be affected.
```

```
    Type 'proceed' to continue, or 'quit' to quit now ->
```

```
Successfully deleted client identity client1.
```

```
Command Result : No Error
```

## stc identityexport

Export the STC client identity to a file. This command allows you to reuse the client identity to re-establish a new STC channel in the event that the partition that originally used the channel no longer exists.

### Syntax

**stc identityexport** [-file <file\_path>]

Option	Shortcut	Description
-file <file_path>	-f	Specifies the full path of the file to which you want to export the client identity. If this parameter is not specified, the client identity is saved to the following location: <luna_client_root_dir>/data/client_identities/<client-name>

### Example

```
lunacm:> stc identityexport
```

```
Successfully exported the client identity to C:\Program Files\SafeNet\LunaClient\data\client_
identities\client1
```

```
Command Result : No Error
```

## stc identityshow

Display the following information for the STC client token:

- > The client identity name
- > The public key SHA1 hash for the client identity
- > A list of the partitions registered with the client identity

### Syntax

#### stc identityshow

### Example

```
lunacm:> stc identityshow
```

```
Client Identity Name:          client1
Public Key SHA1 Hash:         d11c9d27884788332124d1417fffa07b8acd0c45
List of Registered Partitions:
```

Partition Identity Label	Partition Serial Number	Partition Public Key SHA1 Hash
par0	1238700701521	5b198518dbb6146f5a0ee78a8605b24de0191601
par1	1238700701522	3525218101b446e830464e3a39bb08bba6d0869c
par2	1238700701523	3e486cf08dd502ac8d5d3c6d4b81f4735c72ecec
par3	154438865321	440fe709d45ddab5833192d2ef2142a982019a7d
par4	154438865322	988d88995e4a336f0a6d0ecee5f91de09598725d
par5	154438865323	f4d50c439fe8159778e76c9efdde1cb1ee40dcc0

```
Command Result : No Error
```

## stc partitionderegister

Remove the partition identity public key that is currently registered to the STC client token. Use this command if you no longer require access to a registered partition.

After invoking this command, use the command ["clientconfig restart" on page 27](#) to restart LunaCM and refresh the slot list.

**CAUTION!** Deregistering a partition disables the STC link. Any applications using the partition will lose access to the partition.

### Syntax

**stc partitionderegister -serial** <partition\_serialnum> [**-force**]

Option	Shortcut	Description
<b>-serial</b> <partition_serialnum>	<b>-s</b>	Specifies the serial number of the partition to deregister.
<b>-force</b>	<b>-f</b>	Force the action without prompting.

### Example

```
lunacm:> stc partitionderegister -serial 98730559
```

```
Are you sure you want to deregister the partition 98730559?
```

```
    Type 'proceed' to continue, or 'quit' to quit now -> proceed
```

```
Partition 98730559 successfully deregistered from the client token.
```

```
Command Result : No Error
```

## stc partitionregister

Register the partition in the current slot to the STC client token.

After invoking this command, use the command ["clientconfig restart" on page 27](#) to restart LunaCM and refresh the slot list.

### Syntax

**stc partitionregister -file** <partition\_ID\_filepath> [-label <partition\_ID\_label>]

Option	Shortcut	Description
<b>-file</b> <partition_id_filepath>	<b>-f</b>	Specifies the path to the partition identity file.
<b>-label</b> <partition_id_label>	<b>-l</b>	Specifies a label for the partition identity.

### Example

```
lunacm:> stc partitionregister par0 -file /usr/safenet/lunaclient/partition_
identities/359693009026.pid
```

```
Partition identity 359693009026 successfully registered.
```

```
Command Result : No Error
```

## stc status

Display the STC status and configuration information for the current slot, or for all slots.

### Syntax

**stc status [-all]**

Option	Shortcut	Description
<b>-all</b>	<b>-a</b>	Display the STC status for all slots.

### Example

**NOTE** The key life is displayed only if allowed by the partition security policy settings.

```
lunacm:> stc status
```

```
Enabled:           Yes
Status:           Connected
Channel ID:       1
Cipher Name:      AES 256 Bit with Cipher Block Chaining
HMAC Name:        HMAC with SHA 512 Bit
```

Command Result : No Error

```
lunacm:> stc status -all
```

Slot ID	Enabled	State	Channel ID	Cipher Name	HMAC name
0	Yes	Connected	1	AES256_CBC	HMAC_SHA512
1	Yes	Connected	2	AES256_CBC	HMAC_SHA512
2	Yes	Connected	3	AES256_CBC	HMAC_SHA512
3	Yes	Connected	7	AES256_CBC	HMAC_SHA512
4	Yes	Connected	8	AES256_CBC	HMAC_SHA512

Command Result : No Error

## stc tokeninit

Initialize an STC client identity token. You must run this command on a Windows client if you are initializing an eToken 7300 hard token.

Use the command "[stc tokenlist](#)" on page 129 to list the available tokens and to determine whether the token has been initialized.

**NOTE** Re-initializing a token deletes all information stored in the token (client identity and the list of all registered partition identities).

### Syntax

**stc tokeninit -label** <token\_label> [-force]

Option	Shortcut	Description
-label <token_label>	-l	Specifies the label of the token.
-force	-f	Force the action without prompting.

### Example

#### Uninitialized token

```
lunacm:> stc tokeninit -label token1
Successfully initialized the client token.
Command Result : No Error
```

#### Previously initialized token

```
lunacm:> stc tokeninit -label token1
The client token token1 is already initialized with the following client identity:
```

```
Client Identity Name:      client1
Public Key SHA1 Hash:     dllc9d27884788332124d1417fffa07b8acd0c45
List of Registered Partitions:
```

Partition Identity Label	Partition Serial Number	Partition Public Key SHA1 Hash
par0	154438865321	440fe709d45ddab5833192d2ef2142a982019a7d
par1	154438865322	988d88995e4a336f0a6d0ecee5f91de09598725d
par2	154438865323	f4d50c439fe8159778e76c9efdde1cb1ee40dcc0

Re-initialization will delete the client identity and remove existing partition registrations.

```
Type 'proceed' to continue, or 'quit' to quit now ->proceed
```

```
Successfully initialized the client token.
```

Command Result : No Error



## stc tokenlist

List the available STC client identity tokens. Use this command to determine the following:

- > Which token to use when setting up a token using the command ["stc tokeninit" on page 127](#)
- > Whether the token has been initialized.

**NOTE** Only one token per client is supported.

### Syntax

#### stc tokenlist

### Example

```
lunacm:> stc tokenlist
```

Token Slot ID	Token Label	Serial Number	Initialized
1	token1	55f3f968b2	Yes

```
Command Result : No Error
```

## stcconfig

Access the STC configuration commands. Use these commands to specify the network and security settings for an STC link between a client and a partition.

See also ["stc" on page 116](#) for STC setup commands, which you can use to set up and manage an STC network link.

### Syntax

#### stcconfig

**activationtimeoutset**  
**activationtimeoutshow**  
**cipherdisable**  
**cipherenable**  
**ciphershow**  
**clientderegister**  
**clientlist**  
**clientregister**  
**hmacdisable**  
**hmacenable**  
**hmacshow**  
**partitionidexport**  
**partitionidshow**  
**rekeythresholdset**  
**rekeythresholdshow**

Option	Shortcut	Description
<b>activationtimeoutset</b>	<b>atse</b>	Set the activation timeout for an STC link. See <a href="#">"stcconfig activationtimeoutset" on page 132</a> .
<b>activationtimeoutshow</b>	<b>atsh</b>	Display the activation timeout for an STC link. See <a href="#">"stcconfig activationtimeoutshow" on page 133</a> .
<b>cipherdisable</b>	<b>cid</b>	Disable the use of a symmetric encryption cipher algorithm for data encryption on an STC link. See <a href="#">"stcconfig cipherdisable" on page 134</a> .
<b>cipherenable</b>	<b>cie</b>	Enable the use of a symmetric encryption cipher algorithm for data encryption on an STC link. See <a href="#">"stcconfig cipherenable" on page 135</a> .
<b>ciphershow</b>	<b>cish</b>	List the symmetric encryption cipher algorithms you can use for data encryption on an STC link. See <a href="#">"stcconfig ciphershow" on page 136</a> .

Option	Shortcut	Description
<b>clientderegister</b>	<b>cld</b>	Deregister a client's STC public key from a partition. See <a href="#">"stcconfig clientderegister" on page 137</a> .
<b>clientlist</b>	<b>cli</b>	List the clients registered to a partition. See <a href="#">"stcconfig clientlist" on page 138</a> .
<b>clientregister</b>	<b>clr</b>	Register a client's STC public key to a partition. See <a href="#">"stcconfig clientregister" on page 139</a> .
<b>hmacdisable</b>	<b>hmd</b>	Disable the use of an HMAC message digest algorithm for message integrity verification on an STC link. See <a href="#">"stcconfig hmacdisable" on page 140</a> .
<b>hmacenable</b>	<b>hme</b>	Enable the use of an HMAC message digest algorithm for message integrity verification on an STC link. See <a href="#">"stcconfig hmacenable" on page 141</a> .
<b>hmacshow</b>	<b>hsh</b>	List the HMAC message digest algorithms you can use for message integrity verification on an STC link. See <a href="#">"stcconfig hmacshow" on page 142</a> .
<b>partitionidexport</b>	<b>pidex</b>	Export a partition's STC public key to a file. See <a href="#">"stcconfig partitionidexport" on page 143</a> .
<b>partitionidshow</b>	<b>pish</b>	Display a partition's STC public key and serial number. <a href="#">"stcconfig partitionidshow" on page 144</a> .
<b>rekeythresholdset</b>	<b>rkse</b>	Set the rekey threshold for the symmetric key used to encrypt data on an STC link. See <a href="#">"stcconfig rekeythresholdset" on page 145</a> .
<b>rekeythresholdshow</b>	<b>rksh</b>	Display the rekey threshold for the symmetric key used to encrypt data on an STC link. See <a href="#">"stcconfig rekeythresholdshow" on page 146</a> .

## stconfig activationtimeoutset

Set the activation timeout for an STC link. The activation timeout is the maximum time allowed to establish the STC link before the channel request is dropped.

### Syntax

**stconfig activationtimeoutset -time <seconds> [-slot <slot\_ID>]**

Option	Shortcut	Description
<b>-slot &lt;slot_ID&gt;</b>	<b>-s</b>	Specifies the slot containing the partition for which you want to set the STC link activation timeout. This parameter is available only if you are logged into the HSM's Admin partition.
<b>-time &lt;seconds&gt;</b>	<b>-t</b>	Specifies the activation timeout, in seconds. <b>Range:</b> 1-240 <b>Default:</b> 120

### Example

```
lunacm:> stconfig activationtimeoutset -time 30
```

Successfully changed the activation timeout for the current slot to 30 seconds.

## stconfig activationtimeoutshow

Display the activation timeout for an STC link. The activation timeout is the maximum time allowed to establish the STC link before the channel request is dropped.

### Syntax

**stconfig activationtimeoutshow -slot <slot\_ID>**

Option	Shortcut	Description
<b>-slot &lt;slot_ID&gt;</b>	<b>-s</b>	Specifies the slot containing the partition for which you want to display the STC link activation timeout. This parameter is available only if you are logged into the HSM's Admin partition.

### Example

#### Current slot

```
lunacm:> stconfig activationtimeoutshow
```

The activation timeout for the current slot is 30 seconds.

Command Result : No Error

## stcconfig cipherdisable

Disable the use of a symmetric encryption cipher algorithm for data encryption on an STC link. All data transmitted over the STC link will be encrypted using the cipher that is both enabled and that offers the highest level of security. For example, if AES 192 and AES 256 are enabled, and AES 128 is disabled, AES 256 will be used. You can use the command ["stcconfig ciphershow" on page 136](#) to show which ciphers are currently enabled and the command ["stc status" on page 126](#) to display the cipher that is currently being used.

**NOTE** Performance is reduced for larger ciphers.

### Syntax

**stcconfig cipherdisable -slot <slot\_ID> -id <cipher\_ID> [-all] [-force]**

Option	Shortcut	Description
<b>-all</b>	<b>-a</b>	Disable all ciphers.
<b>-force</b>	<b>-f</b>	Force the action without prompting for confirmation.
<b>-id &lt;cipher_ID&gt;</b>	<b>-id</b>	Specifies the numerical identifier of the cipher you want to allow or disallow, as listed by <a href="#">"stcconfig ciphershow" on page 136</a>
<b>-slot &lt;slot_ID&gt;</b>	<b>-s</b>	Specifies the slot containing the partition for which you want to allow or disallow a cipher algorithm.  This parameter is available only if you are logged into the HSM's Admin partition.

### Example

```
lunacm:> stcconfig cipherdisable
```

This table lists the ciphers supported for STC links to the current slot. Enabled ciphers are accepted during STC link negotiation with a client. If all ciphers are disabled, STC links to the partition are not encrypted.

STC Encryption: On

Cipher ID	Cipher Name	Enabled
1	AES 128 Bit with Cipher Block Chaining	No
2	AES 192 Bit with Cipher Block Chaining	Yes
3	AES 256 Bit with Cipher Block Chaining	Yes

Command Result : No Error

```
lunacm:> stcconfig cipherdisable -id 3
```

AES 256 Bit with Cipher Block Chaining is now disabled for the current slot.

Command Result : No Error

## stcconfig cipherenable

Enable the use of a symmetric encryption cipher algorithm for data encryption on an STC link. All data transmitted over the STC link will be encrypted using the cipher that is both enabled and that offers the highest level of security. For example, if AES 192 and AES 256 are enabled, and AES 128 is disabled, AES 256 will be used. You can use the command ["stcconfig ciphershow" on the next page](#) to show which ciphers are currently enabled and the command ["stc status" on page 126](#) to display the cipher that is currently being used.

**NOTE** Performance is reduced for larger ciphers.

### Syntax

**stcconfig cipherenable -slot <slot\_ID> -id <cipher\_ID> [-all]**

Option	Shortcut	Description
<b>-all</b>	<b>-a</b>	Enable all ciphers.
<b>-id &lt;cipher_ID&gt;</b>	<b>-id</b>	Specifies the numerical identifier of the cipher you want to allow or disallow, as listed by <a href="#">"stcconfig ciphershow" on the next page</a>
<b>-slot &lt;slot_ID&gt;</b>	<b>-s</b>	Specifies the slot containing the partition for which you want to allow or disallow a cipher algorithm.  This parameter is available only if you are logged into the HSM's Admin partition.

### Example

```
lunacm:> stcconfig ciphershow
```

This table lists the ciphers supported for STC links to the current slot. Enabled ciphers are accepted during STC link negotiation with a client. If all ciphers are disabled, STC links to the partition are not encrypted.

STC Encryption: On

Cipher ID	Cipher Name	Enabled
1	AES 128 Bit with Cipher Block Chaining	No
2	AES 192 Bit with Cipher Block Chaining	Yes
3	AES 256 Bit with Cipher Block Chaining	Yes

Command Result : No Error

```
lunacm:> stcconfig cipherenable -id 3
```

AES 256 Bit with Cipher Block Chaining is now enabled for the current slot.

Command Result : No Error

## stcconfig ciphershow

---

List the symmetric encryption cipher algorithms you can use for data encryption on an STC link.

### Syntax

**stcconfig ciphershow**

### Example

```
lunacm:> stcconfig ciphershow
```

This table lists the ciphers supported for STC links to the current slot. Enabled ciphers are accepted during STC link negotiation with a client. If all ciphers are disabled, STC links to the partition are not encrypted.

STC Encryption: On

Cipher ID	Cipher Name	Enabled
1	AES 128 Bit with Cipher Block Chaining	Yes
2	AES 192 Bit with Cipher Block Chaining	Yes
3	AES 256 Bit with Cipher Block Chaining	Yes

Command Result : No Error



## stconfig clientderegister

Deregister a client's STC public key from a partition. You must be logged into the partition as the SO to use this command.

**CAUTION!** Deregistering a client's public key disables the STC link to that client.

**\*\*WARNING\*\*** If you delete the client identity for the partition SO, you will lose the partition. You can only recover by restoring the partition from a backup, with the help of the HSM SO.

### Syntax

**stconfig clientderegister -label <client\_label> [-force]**

Option	Shortcut	Description
<b>-force</b>	<b>-f</b>	Force the action without prompting for confirmation.
<b>-label &lt;client_label&gt;</b>	<b>-l</b>	A string used to identify the client being deregistered.

### Example

```
lunacm:> stconfig clientderegister -label client2
```

```
Are you sure you want to deregister the client identity client2?
```

```
    Type 'proceed' to continue, or 'quit' to quit now -> proceed
```

```
Successfully deregistered the client client2 from the current slot.
```

```
Command Result : No Error
```

---

## stcconfig clientlist

---

List the clients registered to a partition.

### Syntax

**stcconfig clientlist**

### Example

```
lunacm:> stcconfig clientlist
```

Client Name	Client Public Key SHA1 Hash
Partition SO	3472c9423f9faf2ce431fda7f845e53c783b7303
client2	8be55fa0f7ad688f1fa1f243c142a04fdaa8bf39

Command Result : No Error

## stconfig clientregister

Register a client's STC public key to a partition. You must be logged in to the partition as the SO to use this command.

**NOTE** Each client identity registered to a partition uses 2332 bytes of storage on the partition. Before registering a client identity to a partition, ensure that there is adequate free space.

### Syntax

**stconfig clientregister -label** <client\_label> **-file** <client\_public\_key>

Option	Shortcut	Description
<b>-label</b> <client_label>	<b>-l</b>	A string used to identify the client being registered.
<b>-file</b> <client_public_key>	<b>-f</b>	Specifies the full path to the client public key file.

### Example

```
lunacm:> stconfig clientregister -label client2 -file "C:\Program
Files\SafeNet\LunaClient\data\client_identities\client2"
```

Successfully registered the client client2 to the current slot.

Command Result : No Error

## stcconfig hmacdisable

Disable the use of an HMAC message digest algorithm for message integrity verification on an STC link. The HMAC algorithm that is both enabled and that offers the highest level of security is used. For example, if SHA 256 and SHA 512 are enabled, SHA 512 is used. You can use the command ["stcconfig hmacshow" on page 142](#) to show which HMAC message digest algorithms are currently enabled/disabled and the command ["stc status" on page 126](#) to display the HMAC message digest algorithm that is currently being used.

### Syntax

**stcconfig hmacdisable -id <hmac\_ID> [-slot <slot\_ID>]**

Option	Shortcut	Description
<b>-id &lt;hmac_ID&gt;</b>	<b>-i</b>	Specifies the numerical identifier of the HMAC message digest algorithm you want to use, as listed using <a href="#">"stcconfig hmacshow" on page 142</a>
<b>-slot &lt;slot_ID&gt;</b>	<b>-s</b>	Specifies the slot containing the partition on which you want to allow or disallow an HMAC algorithm. This parameter is available only if you are logged into the HSM's Admin partition.

### Example

```
lunacm:> stcconfig hmacshow
```

This table lists the HMAC algorithms supported for STC links to the current slot. Enabled algorithms are accepted during STC link negotiation with a client. At least one HMAC algorithm must be enabled.

HMAC ID	HMAC Name	Enabled
0	HMAC with SHA 256 Bit	Yes
1	HMAC with SHA 512 Bit	Yes

```
Command Result : 0 (Success)
```

```
lunacm:> stcconfig hmacdisable -id 0
```

HMAC with SHA 256 Bit for the current slot is now disabled.

```
Command Result : 0 (Success)
```

## stcconfig hmacenable

Enable the use of an HMAC message digest algorithm for message integrity verification on an STC link. The HMAC algorithm that is both enabled and that offers the highest level of security is used. For example, if SHA 256 and SHA 512 are enabled, SHA 512 is used. You can use the command ["stcconfig hmacshow" on the next page](#) to show which HMAC message digest algorithms are currently enabled/disabled and the command ["stc status" on page 126](#) to display the HMAC message digest algorithm that is currently being used.

### Syntax

**stcconfig hmacenable -slot <slot\_ID> -id <hmac\_ID>**

Option	Shortcut	Description
<b>-id &lt;hmac_ID&gt;</b>	<b>-i</b>	Specifies the numerical identifier of the HMAC message digest algorithm you want to use, as listed using <a href="#">"stcconfig hmacshow" on the next page</a>
<b>-slot &lt;slot_ID&gt;</b>	<b>-s</b>	Specifies the slot containing the partition on which you want to allow or disallow an HMAC algorithm. This parameter is available only if you are logged into the HSM's Admin partition.

### Example

```
lunacm:> stcconfig hmacshow
```

This table lists the HMAC algorithms supported for STC links to the current slot. Enabled algorithms are accepted during STC link negotiation with a client. At least one HMAC algorithm must be enabled.

HMAC ID	HMAC Name	Enabled
0	HMAC with SHA 256 Bit	No
1	HMAC with SHA 512 Bit	Yes

```
Command Result : 0 (Success)
```

```
lunacm:> stcconfig hmacenable -id 0
```

HMAC with SHA 256 Bit for the current slot is now enabled.

```
Command Result : 0 (Success)
```

## stcconfig hmacshow

List the HMAC message digest algorithms you can use for message integrity verification on an STC link.

### Syntax

**stcconfig hmacshow -slot <slot\_ID>**

Option	Shortcut	Description
<b>-slot &lt;slot_ID&gt;</b>	<b>-s</b>	Specifies the slot containing the partition whose available HMAC algorithms you want to display. This parameter is available only if you are logged into the HSM's Admin partition.

### Example

```
lunacm:> stcconfig hmacshow
```

This table lists the HMAC algorithms supported for STC links to the current slot. Enabled algorithms are accepted during STC link negotiation with a client. At least one HMAC algorithm must be enabled.

HMAC ID	HMAC Name	Enabled
0	HMAC with SHA 256 Bit	Yes
1	HMAC with SHA 512 Bit	Yes

Command Result : No Error

## stconfig partitionidexport

Export a partition's STC public key to a file.

**NOTE** If the HSM is zeroized while STC is enabled, the STC link between LunaCM and the admin partition will no longer authenticate, since the admin partition identity no longer exists. If this occurs, you will be unable to log into, or initialize, the HSM. To recover from this state, run the **stconfig partitionidexport** command without any parameters. When you run the command, a new identity is created for the admin partition, and the new admin partition public key is exported to the default directory. This will restore the STC link between LunaCM and the admin partition, allowing you to re-initialize the HSM. You can only run this command, while not logged into the HSM, if the HSM is zeroized.

### Syntax

**stconfig partitionidexport -slot <slot\_ID> [-file <filepath>]**

Option	Shortcut	Description
<b>-file</b> <filepath>	<b>-f</b>	Specifies the full path to the file to which you want to export the partition's STC public key. If you omit this parameter the key is exported by default to the following file: <code>&lt;luna_client_root&gt;/identities/&lt;partition_serial_number&gt;.pem</code>
<b>-slot</b> <slot_ID>	<b>-s</b>	Specifies the slot containing the partition whose STC public key you want to export. This parameter is available only if you are logged into the HSM's Admin partition.

### Example

```
lunacm:> stconfig partitionidexport
```

```
Successfully exported partition identity for the current slot to C:\Program
Files\SafeNet\LunaClient\data\partition_identities\154438865321.pid
```

```
Command Result : No Error
```

## stcconfig partitionidshow

Display a partition's STC public key and serial number.

### Syntax

**stcconfig partitionidshow -slot <slot\_ID>**

Option	Shortcut	Description
<b>-slot &lt;slot_ID&gt;</b>	<b>-s</b>	Specifies the slot for the partition for which you want to display the public key and serial number. This parameter is available only if you are logged into the HSM's Admin partition.

### Example

```
lunacm:> stcconfig partitionidshow
```

```
Partition Serial Number:          154438865321
Partition Identity Public Key SHA1 Hash: 440fe709d45ddab5833192d2ef2142a982019a7d
```

```
Command Result : No Error
```



## stcconfig rekeythresholdset

Set the rekey threshold for the symmetric key used to encrypt data on an STC link. The symmetric key is used to encode the number of messages specified by the threshold value, after which it is regenerated and the counter is reset to 0.

The default of 400 million messages would force a rekeying operation once every 24 hours on an HSM under heavy load (processing approximately 5000 messages/second), or once a week for an HSM under light load (processing approximately 700 messages/second).

### Syntax

**stcconfig rekeythresholdset -slot <slot\_ID> -value <threshold>**

Option	Shortcut	Description
<b>-slot</b> <slot_ID>	<b>-s</b>	Specifies the slot containing the partition for which you want to set the rekey threshold. This parameter is available only if you are logged into the HSM's Admin partition.
<b>-value</b> <threshold>	<b>-v</b>	An integer that specifies the key life (in millions of encoded messages) for the STC symmetric key. Enter a value of <b>0</b> to disable rekeying. <b>Range:</b> 0 to 4000 million messages. <b>Default:</b> 400 million messages.

### Example

```
lunacm:> stcconfig rekeythresholdset -value 600
```

Successfully changed the rekey threshold for the current slot to 600. (in millions of messages)

```
Command Result : No Error
```

## stcconfig rekeythresholdshow

Display the rekey threshold for the symmetric key used to encrypt data on an STC link. The symmetric key is used for the number of times specified by the threshold value, after which it is regenerated and the counter is reset to 0.

### Syntax

**stcconfig rekeythresholdset -slot <slot\_ID>**

Option	Shortcut	Description
<b>-slot &lt;slot_ID&gt;</b>	<b>-s</b>	Specifies the slot containing the partition for which you want to display the rekey threshold. This parameter is available only if you are logged into the HSM's Admin partition.

### Example

```
lunacm:> stcconfig rekeythresholdshow
```

The current rekey threshold for the current slot is 400. (in millions of messages)

Command Result : No Error