

## SafeNet Luna Network HSM 7.3

### SDK REFERENCE GUIDE



## Document Information

<b>Product Version</b>	7.3
<b>Document Part Number</b>	007-013576-005
<b>Release Date</b>	13 December 2019

## Revision History

<b>Revision</b>	<b>Date</b>	<b>Reason</b>
Rev. A	13 December 2019	Initial release.

## Trademarks, Copyrights, and Third-Party Software

Copyright 2001-2019 Thales. All rights reserved. Thales and the Thales logo are trademarks and service marks of Thales and/or its subsidiaries and are registered in certain countries. All other trademarks and service marks, whether registered or not in specific countries, are the property of their respective owners.

## Disclaimer

All information herein is either public information or is the property of and owned solely by Thales and/or its subsidiaries who shall have and keep the sole right to file patent applications or any other kind of intellectual property protection in connection with such information.

Nothing herein shall be construed as implying or granting to you any rights, by license, grant or otherwise, under any intellectual and/or industrial property rights of or concerning any of Thales's information.

This document can be used for informational, non-commercial, internal, and personal use only provided that:

- > The copyright notice, the confidentiality and proprietary legend and this full warning notice appear in all copies.
- > This document shall not be posted on any publicly accessible network computer or broadcast in any media, and no modification of any part of this document shall be made.

Use for any other purpose is expressly prohibited and may result in severe civil and criminal liabilities.

The information contained in this document is provided "AS IS" without any warranty of any kind. Unless otherwise expressly agreed in writing, Thales makes no warranty as to the value or accuracy of information contained herein.

The document could include technical inaccuracies or typographical errors. Changes are periodically added to the information herein. Furthermore, Thales reserves the right to make any change or improvement in the specifications data, information, and the like described herein, at any time.

Thales hereby disclaims all warranties and conditions with regard to the information contained herein, including all implied warranties of merchantability, fitness for a particular purpose, title and non-infringement. In no event shall Thales be liable, whether in contract, tort or otherwise, for any indirect, special or consequential

damages or any damages whatsoever including but not limited to damages resulting from loss of use, data, profits, revenues, or customers, arising out of or in connection with the use or performance of information contained in this document.

Thales does not and shall not warrant that this product will be resistant to all possible attacks and shall not incur, and disclaims, any liability in this respect. Even if each product is compliant with current security standards in force on the date of their design, security mechanisms' resistance necessarily evolves according to the state of the art in security and notably under the emergence of new attacks. Under no circumstances, shall Thales be held liable for any third party actions and in particular in case of any successful attack against systems or equipment incorporating Thales products. Thales disclaims any liability with respect to security for direct, indirect, incidental or consequential damages that result from any use of its products. It is further stressed that independent testing and verification by the person using the product is particularly encouraged, especially in any application in which defective, incorrect or insecure functioning could result in damage to persons or property, denial of service, or loss of privacy.

All intellectual property is protected by copyright. All trademarks and product names used or referred to are the copyright of their respective owners. No part of this document may be reproduced, stored in a retrieval system or transmitted in any form or by any means, electronic, mechanical, chemical, photocopy, recording or otherwise without the prior written permission of Thales Group.

### **Regulatory Compliance**

This product complies with the following regulatory regulations. To ensure compliancy, ensure that you install the products as specified in the installation instructions and use only Thales-supplied or approved accessories.

#### **USA, FCC**

This equipment has been tested and found to comply with the limits for a “Class B” digital device, pursuant to part 15 of the FCC rules.

#### **Canada**

This class B digital apparatus meets all requirements of the Canadian interference-causing equipment regulations.

#### **Europe**

This product is in conformity with the protection requirements of EC Council Directive 2014/30/EU. This product satisfies the CLASS B limits of EN55032.

# CONTENTS

<b>Preface: About the SDK Reference Guide</b> .....	<b>13</b>
Customer Release Notes .....	13
Audience .....	13
Document Conventions .....	14
Support Contacts .....	15
<b>Chapter 1: SafeNet SDK Overview</b> .....	<b>16</b>
Supported Cryptographic Algorithms .....	16
Application Programming Interface .....	16
Application Programming Interface (API) Overview .....	18
Sample Application .....	19
A Note About RSA Key Attributes 'p' and 'q' .....	19
What Does 'Supported' Mean? .....	20
Why Is an Integration Not Listed Here Or On the Website? .....	20
Frequently Asked Questions .....	21
<b>Chapter 2: PKCS#11 Support</b> .....	<b>24</b>
PKCS#11 Compliance .....	24
Supported PKCS#11 Services .....	24
Additional Functions .....	28
Using the PKCS#11 Sample .....	28
The SfmtLibPath Environment Variable .....	28
What p11Sample Does .....	28
<b>Chapter 3: Extensions to PKCS#11</b> .....	<b>31</b>
SafeNet Luna Extensions to PKCS#11 .....	31
BIP32 .....	42
Curve Support .....	42
Key Type and Form .....	42
Extended Keys and Hardened Keys .....	42
Key Derivation .....	43
Error Codes .....	44
Key Attributes .....	44
Public Key Import/Export .....	45
Private Key Import/Export .....	46
Key Backup and Cloning .....	46
Non-FIPS Algorithm .....	46
Code Samples .....	47
Deriving the master key pair .....	47
Deriving a child leaf key .....	47
Importing a public extended key .....	48

Exporting a public extended key .....	49
Importing a private extended key .....	49
Exporting a private extended key .....	49
PKCS#11 Definitions .....	50
HSM Configuration Settings .....	50
SafeNet Luna Network HSM-Specific Commands .....	51
Commands Not Available Through Libraries .....	51
Configuration Settings .....	51
Secure PIN Port Authentication .....	51
High Availability Indirect Login Functions .....	52
Initialization functions .....	52
Recovery Functions .....	53
Login Key Attributes .....	54
Control of HA Functionality .....	55
MofN Secret Sharing (quorum or multi-person access control) .....	55
Key Export Features .....	55
RSA Key Component Wrapping .....	55
Derivation of Symmetric Keys with 3DES_ECB .....	58
PKCS#11 Extension HA Status Call .....	58
Function Definition .....	58
Pseudorandom Function KDF Mechanisms .....	59
Derive Template .....	59
Examples .....	60
<b>Chapter 4: Supported Mechanisms .....</b>	<b>62</b>
Mechanism Remap for FIPS Compliance .....	62
Mechanism Remap Configuration Settings .....	62
CKM_AES_CBC .....	63
CKM_AES_CBC_ENCRYPT_DATA .....	64
CKM_AES_CBC_PAD .....	65
CKM_AES_CBC_PAD_IPSEC .....	66
CKM_AES_CFB8 .....	67
CKM_AES_CFB128 .....	68
CKM_AES_CMAC .....	69
CKM_AES_CTR .....	70
CKM_AES_ECB .....	71
CKM_AES_ECB_ENCRYPT_DATA .....	72
CKM_AES_GCM .....	73
CKM_AES_GMAC .....	75
CKM_AES_KEY_GEN .....	77
CKM_AES_KW .....	78
CKM_AES_KWP .....	79
CKM_AES_MAC .....	80
CKM_AES_OFB .....	81
CKM_AES_XTS .....	82
CKM_ARIA_CBC .....	83
CKM_ARIA_CBC_ENCRYPT_DATA .....	84

CKM_ARIA_CBC_PAD .....	85
CKM_ARIA_CFB8 .....	86
CKM_ARIA_CFB128 .....	87
CKM_ARIA_CMAC .....	88
CKM_ARIA_CTR .....	89
CKM_ARIA_ECB .....	90
CKM_ARIA_ECB_ENCRYPT_DATA .....	91
CKM_ARIA_KEY_GEN .....	92
CKM_ARIA_L_CBC .....	93
CKM_ARIA_L_CBC_PAD .....	94
CKM_ARIA_L_ECB .....	95
CKM_ARIA_L_MAC .....	96
CKM_ARIA_MAC .....	97
CKM_ARIA_OFB .....	98
CKM_BIP32_CHILD_DERIVE .....	99
CKM_BIP32_MASTER_DERIVE .....	100
CKM_CAST3_CBC .....	101
CKM_CAST3_CBC_PAD .....	102
CKM_CAST3_ECB .....	103
CKM_CAST3_KEY_GEN .....	104
CKM_CAST3_MAC .....	105
CKM_CAST5_CBC .....	106
CKM_CAST5_CBC_PAD .....	107
CKM_CAST5_ECB .....	108
CKM_CAST5_KEY_GEN .....	109
CKM_CAST5_MAC .....	110
CKM_DES_CBC .....	111
CKM_DES_CBC_ENCRYPT_DATA .....	112
CKM_DES_CBC_PAD .....	113
CKM_DES_ECB .....	114
CKM_DES_ECB_ENCRYPT_DATA .....	115
CKM_DES_KEY_GEN .....	116
CKM_DES_MAC .....	117
CKM_DES2_DUKPT_DATA .....	118
CKM_DES2_DUKPT_DATA_RESP .....	120
CKM_DES2_DUKPT_MAC .....	122
CKM_DES2_DUKPT_MAC_RESP .....	124
CKM_DES2_DUKPT_PIN .....	126
CKM_DES2_KEY_GEN .....	128
CKM_DES3_CBC .....	129
CKM_DES3_CBC_ENCRYPT_DATA .....	130
CKM_DES3_CBC_PAD .....	131
CKM_DES3_CBC_PAD_IPSEC .....	132
CKM_DES3_CFB8 .....	133
CKM_DES3_CFB64 .....	134
CKM_DES3_CMAC .....	135
CKM_DES3_CTR .....	136

CKM_DES3_ECB .....	137
CKM_DES3_ECB_ENCRYPT_DATA .....	138
CKM_DES3_KEY_GEN .....	139
CKM_DES3_MAC .....	140
CKM_DES3_OFB .....	141
CKM_DES3_X919_MAC .....	142
CKM_DH_PKCS_DERIVE .....	144
CKM_DH_PKCS_KEY_PAIR_GEN .....	145
CKM_DH_PKCS_PARAMETER_GEN .....	146
CKM_DSA .....	147
CKM_DSA_KEY_PAIR_GEN .....	148
CKM_DSA_PARAMETER_GEN .....	149
CKM_DSA_SHA1 .....	150
CKM_DSA_SHA224 .....	151
CKM_DSA_SHA256 .....	152
CKM_EC_EDWARDS_KEY_PAIR_GEN .....	153
CKM_EC_KEY_PAIR_GEN .....	154
CKM_EC_KEY_PAIR_GEN_W_EXTRA_BITS .....	155
CKM_EC_MONTGOMERY_KEY_PAIR_GEN .....	156
CKM_ECDH1_COFACTOR_DERIVE .....	157
CKM_ECDH1_DERIVE .....	158
CKM_ECDSA .....	159
CKM_ECDSA_GBCS_SHA256 .....	160
CKM_ECDSA_SHA1 .....	161
CKM_ECDSA_SHA224 .....	162
CKM_ECDSA_SHA256 .....	163
CKM_ECDSA_SHA384 .....	164
CKM_ECDSA_SHA512 .....	165
CKM_ECIES .....	166
CKM_EDDSA .....	167
CKM_EDDSA_NACL .....	168
CKM_GENERIC_SECRET_KEY_GEN .....	169
CKM_HAS160 .....	170
CKM_HAS_160_HMAC .....	171
CKM_HAS160_KCDSA .....	172
CKM_HAS160_KCDSA_NO_PAD .....	173
CKM_KCDSA_KEY_PAIR_GEN .....	174
CKM_KCDSA_PARAMETER_GEN .....	175
CKM_KEY_WRAP_SET_OAEP .....	176
CKM_MD2 .....	177
CKM_MD2_DES_CBC .....	178
CKM_MD2_KEY_DERIVATION .....	179
CKM_MD5_HMAC .....	180
CKM_MD5_KEY_DERIVATION .....	181
CKM_NIST_PRF_KDF .....	182
CKM_PKCS5_PBKD2 .....	184
CKM_PRF_KDF .....	185

CKM_RC2_CBC .....	187
CKM_RC2_CBC_PAD .....	188
CKM_RC2_ECB .....	189
CKM_RC2_KEY_GEN .....	190
CKM_RC2_MAC .....	191
CKM_RC4 .....	192
CKM_RC4_KEY_GEN .....	193
CKM_RC5_CBC .....	194
CKM_RC5_CBC_PAD .....	195
CKM_RC5_ECB .....	196
CKM_RC5_KEY_GEN .....	197
CKM_RC5_MAC .....	198
CKM_RSA_FIPS_186_3_AUX_PRIME_KEY_PAIR_GEN .....	199
CKM_RSA_FIPS_186_3_PRIME_KEY_PAIR_GEN .....	200
CKM_RSA_PKCS .....	201
CKM_RSA_PKCS_KEY_PAIR_GEN .....	202
CKM_RSA_PKCS_OAEP .....	203
CKM_RSA_PKCS_PSS .....	204
CKM_RSA_X_509 .....	205
CKM_RSA_X9_31 .....	206
CKM_RSA_X9_31_KEY_PAIR_GEN .....	207
CKM_RSA_X9_31_NON_FIPS .....	208
CKM_SEED_CBC .....	209
CKM_SEED_CBC_PAD .....	210
CKM_SEED_CMAC .....	211
CKM_SEED_CTR .....	212
CKM_SEED_ECB .....	213
CKM_SEED_KEY_GEN .....	214
CKM_SEED_MAC .....	215
CKM_SHA_1 .....	216
CKM_SHA_1_80_HMAC .....	217
CKM_SHA_1_HMAC .....	218
CKM_SHA1_CAST5_CBC .....	219
CKM_SHA1_DES2_CBC .....	220
CKM_SHA1_DES2_CBC_OLD .....	221
CKM_SHA1_DES3_CBC .....	222
CKM_SHA1_DES3_CBC_OLD .....	223
CKM_SHA1_EDDSA .....	224
CKM_SHA1_EDDSA_NACL .....	225
CKM_SHA1_KCDSA .....	226
CKM_SHA1_KCDSA_NO_PAD .....	227
CKM_SHA1_KEY_DERIVATION .....	228
CKM_SHA1_RC2_40_CBC .....	229
CKM_SHA1_RC2_128_CBC .....	230
CKM_SHA1_RC4_40 .....	231
CKM_SHA1_RC4_128 .....	232
CKM_SHA1_RSA_PKCS .....	233



CKM_SHA1_RSA_PKCS_PSS .....	234
CKM_SHA1_RSA_X9_31 .....	235
CKM_SHA1_RSA_X9_31_NON_FIPS .....	236
CKM_SHA224 .....	237
CKM_SHA224_EDDSA .....	238
CKM_SHA224_EDDSA_NACL .....	239
CKM_SHA224_HMAC .....	240
CKM_SHA224_KCDSA .....	241
CKM_SHA224_KCDSA_NO_PAD .....	242
CKM_SHA224_KEY_DERIVATION .....	243
CKM_SHA224_RSA_PKCS .....	244
CKM_SHA224_RSA_PKCS_PSS .....	245
CKM_SHA224_RSA_X9_31 .....	246
CKM_SHA224_RSA_X9_31_NON_FIPS .....	247
CKM_SHA256 .....	248
CKM_SHA256_EDDSA .....	249
CKM_SHA256_EDDSA_NACL .....	250
CKM_SHA256_HMAC .....	251
CKM_SHA256_KCDSA .....	252
CKM_SHA256_KCDSA_NO_PAD .....	253
CKM_SHA256_KEY_DERIVATION .....	254
CKM_SHA256_RSA_PKCS .....	255
CKM_SHA256_RSA_PKCS_PSS .....	256
CKM_SHA256_RSA_X9_31 .....	257
CKM_SHA256_RSA_X9_31_NON_FIPS .....	258
CKM_SHA384 .....	259
CKM_SHA384_EDDSA .....	260
CKM_SHA384_EDDSA_NACL .....	261
CKM_SHA384_HMAC .....	262
CKM_SHA384_KCDSA .....	263
CKM_SHA384_KCDSA_NO_PAD .....	264
CKM_SHA384_KEY_DERIVATION .....	265
CKM_SHA384_RSA_PKCS .....	266
CKM_SHA384_RSA_PKCS_PSS .....	267
CKM_SHA384_RSA_X9_31 .....	268
CKM_SHA384_RSA_X9_31_NON_FIPS .....	269
CKM_SHA512 .....	270
CKM_SHA512_EDDSA .....	271
CKM_SHA512_EDDSA_NACL .....	272
CKM_SHA512_HMAC .....	273
CKM_SHA512_KCDSA .....	274
CKM_SHA512_KCDSA_NO_PAD .....	275
CKM_SHA512_KEY_DERIVATION .....	276
CKM_SHA512_RSA_PKCS .....	277
CKM_SHA512_RSA_PKCS_PSS .....	278
CKM_SHA512_RSA_X9_31 .....	279
CKM_SHA512_RSA_X9_31_NON_FIPS .....	280

CKM_SM3 .....	281
CKM_SM3_HMAC .....	282
CKM_SM3_KEY_DERIVATION .....	283
CKM_SSL3_KEY_AND_MAC_DERIVE .....	284
CKM_SSL3_MASTER_KEY_DERIVE .....	285
CKM_SSL3_MD5_MAC .....	286
CKM_SSL3_PRE_MASTER_KEY_GEN .....	287
CKM_SSL3_SHA1_MAC .....	288
CKM_X9_42_DH_DERIVE .....	289
CKM_X9_42_DH_HYBRID_DERIVE .....	290
CKM_X9_42_DH_KEY_PAIR_GEN .....	291
CKM_X9_42_DH_PARAMETER_GEN .....	292
CKM_XOR_BASE_AND_DATA_W_KDF .....	293
<b>Chapter 5: Using the SafeNet SDK .....</b>	<b>294</b>
Libraries and Applications .....	294
SafeNet SDK Applications General Information .....	294
Compiler Tools .....	295
Using CKlog .....	296
Application IDs .....	298
Shared Login State and Application IDs .....	298
Named Curves and User-Defined Parameters .....	302
Curve Validation Limitations .....	302
Storing Domain Parameters .....	302
Using Domain Parameters .....	303
User Friendly Encoder .....	303
Application Interfaces .....	303
Curve Names By Organization .....	309
Capability and Policy Configuration Control Using the SafeNet API .....	311
HSM Capabilities and Policies .....	311
HSM Partition Capabilities and Policies .....	311
Policy Refinement .....	311
Policy Types .....	311
Querying and Modifying HSM Configuration .....	312
Connection Timeout .....	314
Linux and Unix Connection Timeout .....	315
Windows Connection Timeout .....	315
<b>Chapter 6: Design Considerations .....</b>	<b>316</b>
PED-Authenticated HSMs .....	316
About CKDemo with Luna PED .....	317
Interchangeability .....	317
Startup .....	318
Cloning of Tokens .....	318
High Availability (HA) Implementations .....	318
Detecting the Failure of an HA Member .....	319
Key Attribute Defaults .....	320

Vendor-defined key attributes .....	322
Object Usage Count .....	322
Migrating Keys From Software to a SafeNet Luna Network HSM .....	325
Other Formats of Key Material .....	327
Sample Program .....	327
Audit Logging .....	349
Audit Log Records .....	349
Audit Log Message Format .....	350
Log External .....	351
<b>Chapter 7: Java Interfaces .....</b>	<b>352</b>
SafeNet JSP Overview and Installation .....	352
JDK Compatibility .....	352
Installation .....	353
Post-Installation Tasks .....	354
SafeNet JSP Configuration .....	355
Installation .....	356
Java -- Encryption policy files for unlimited strength ciphers .....	356
SafeNet Java Security Provider .....	356
Keytool .....	358
Cleaning Up .....	358
PKCS#11/JCA Interaction .....	358
The JCPROV PKCS#11 Java Wrapper .....	359
JCPROV Overview .....	360
Installing JCPROV .....	360
JCPROV Sample Programs .....	361
JCPROV Sample Classes .....	362
JCPROV API Documentation .....	366
Java or JSP Errors .....	366
Re-Establishing a Connection Between Your Java Application and SafeNet Luna Network HSM .....	367
Recovering From the Loss of All HA Members .....	367
When to Use the reinitialize Method .....	367
Why the Method Must Be Used .....	368
What Happens on the HSM .....	368
Using Java Keytool with SafeNet Luna Network HSM .....	370
Limitations .....	370
Keytool Usage and Examples .....	370
Import CA certificate .....	371
Generate private key .....	371
Create the CSR .....	372
Import client certificate .....	373
How to build a certificate with chain ... ..	374
Additional minor notes .....	374
JSP Dynamic Registration Sample .....	376
Sample Code .....	376
<b>Chapter 8: Microsoft Interfaces .....</b>	<b>377</b>

---

The SafeNet CSP Registration Tool and Utilities .....	377
The Keymap Utility .....	377
The ms2Luna Utility .....	378
The CSP Registration Tool .....	378
KSP for CNG .....	383
Installing KSP .....	383
Configuring KSP with GUI .....	384
Configuring KSP via the Command Line .....	387
Troubleshooting .....	388
Algorithms Supported .....	388
Enabling Key Counting .....	389
SafeNet CSP Calls and Functions .....	389
Programming for SafeNet Luna Network HSM with SafeNet CSP .....	390
Algorithms .....	391

# PREFACE: About the SDK Reference Guide

This document describes how to use the SafeNet SDK to create applications that interact with SafeNet Luna Network HSMs. It contains the following chapters:

- > ["SafeNet SDK Overview" on page 16](#)
- > ["PKCS#11 Support" on page 24](#)
- > ["Extensions to PKCS#11" on page 31](#)
- > ["Supported Mechanisms" on page 62](#)
- > ["Using the SafeNet SDK" on page 294](#)
- > ["Design Considerations" on page 316](#)
- > ["Java Interfaces" on page 352](#)
- > ["Microsoft Interfaces" on page 377](#)

This preface also includes the following information about this document:

- > ["Customer Release Notes" below](#)
- > ["Audience" below](#)
- > ["Document Conventions" on the next page](#)
- > ["Support Contacts" on page 15](#)

For information regarding the document status and revision history, see ["Document Information" on page 2](#).

## Customer Release Notes

---

The customer release notes (CRN) provide important information about this release that is not included in the customer documentation. Read the CRN to fully understand the capabilities, limitations, and known issues for this release. You can view or download the latest version of the CRN from the Technical Support Customer Portal at <https://supportportal.gemalto.com>.

## Audience

---

This document is intended for personnel responsible for maintaining your organization's security infrastructure. This includes SafeNet Luna HSM users and security officers, key manager administrators, and network administrators.

All products manufactured and distributed by Thales Group are designed to be installed, operated, and maintained by personnel who have the knowledge, training, and qualifications required to safely perform the tasks assigned to them. The information, processes, and procedures contained in this document are intended for use by trained and qualified personnel only.

It is assumed that the users of this document are proficient with security concepts.

## Document Conventions

This document uses standard conventions for describing the user interface and for alerting you to important information.

### Notes

Notes are used to alert you to important or helpful information. They use the following format:

**NOTE** Take note. Contains important or helpful information.

### Cautions

Cautions are used to alert you to important information that may help prevent unexpected results or data loss. They use the following format:

**CAUTION!** Exercise caution. Contains important information that may help prevent unexpected results or data loss.

### Warnings

Warnings are used to alert you to the potential for catastrophic data loss or personal injury. They use the following format:

**\*\*WARNING\*\*** Be extremely careful and obey all safety and security measures. In this situation you might do something that could result in catastrophic data loss or personal injury.

## Command Syntax and Typeface Conventions

Format	Convention
<b>bold</b>	<p>The bold attribute is used to indicate the following:</p> <ul style="list-style-type: none"> <li>&gt; Command-line commands and options (Type <b>dir /p</b>.)</li> <li>&gt; Button names (Click <b>Save As</b>.)</li> <li>&gt; Check box and radio button names (Select the <b>Print Duplex</b> check box.)</li> <li>&gt; Dialog box titles (On the <b>Protect Document</b> dialog box, click <b>Yes</b>.)</li> <li>&gt; Field names (<b>User Name</b>: Enter the name of the user.)</li> <li>&gt; Menu names (On the <b>File</b> menu, click <b>Save</b>.) (Click <b>Menu &gt; Go To &gt; Folders</b>.)</li> <li>&gt; User input (In the <b>Date</b> box, type <b>April 1</b>.)</li> </ul>
<i>italics</i>	<p>In type, the italic attribute is used for emphasis or to indicate a related document. (See the <i>Installation Guide</i> for more information.)</p>

Format	Convention
<variable>	In command descriptions, angle brackets represent variables. You must substitute a value for command line arguments that are enclosed in angle brackets.
[ <b>optional</b> ] [<optional>]	Represent optional <b>keywords</b> or <variables> in a command line description. Optionally enter the keyword or <variable> that is enclosed in square brackets, if it is necessary or desirable to complete the task.
{ <b>a b c</b> } {<a> <b> <c>}	Represent required alternate <b>keywords</b> or <variables> in a command line description. You must choose one command line argument enclosed within the braces. Choices are separated by vertical (OR) bars.
[ <b>a b c</b> ] [<a> <b> <c>]	Represent optional alternate keywords or variables in a command line description. Choose one command line argument enclosed within the braces, if desired. Choices are separated by vertical (OR) bars.

## Support Contacts

If you encounter a problem while installing, registering, or operating this product, please refer to the documentation before contacting support. If you cannot resolve the issue, contact your supplier or [Thales Customer Support](#).

Thales Customer Support operates 24 hours a day, 7 days a week. Your level of access to this service is governed by the support plan arrangements made between Thales and your organization. Please consult this support plan for further information about your entitlements, including the hours when telephone support is available to you.

### Customer Support Portal

The Customer Support Portal, at <https://supportportal.thalesgroup.com>, is where you can find solutions for most common problems. The Customer Support Portal is a comprehensive, fully searchable database of support resources, including software and firmware downloads, release notes listing known problems and workarounds, a knowledge base, FAQs, product documentation, technical notes, and more. You can also use the portal to create and manage support cases.

**NOTE** You require an account to access the Customer Support Portal. To create a new account, go to the portal and click on the **REGISTER** link.

### Telephone

The support portal also lists telephone numbers for voice contact ([Contact Us](#)).

# CHAPTER 1: SafeNet SDK Overview

This chapter provides an overview of the SafeNet Software Development Kit (SDK), a development platform you can use to integrate a SafeNet Luna Network HSM into your application or system. It contains the following topics:

- > ["Supported Cryptographic Algorithms" below](#)
- > ["Application Programming Interface \(API\) Overview" on page 18](#)
- > ["What Does 'Supported' Mean?" on page 20](#)
- > ["Frequently Asked Questions" on page 21](#)

## Supported Cryptographic Algorithms

---

The K7 Cryptographic engine supports cryptographic algorithms that include:

- > RSA
- > DSA
- > Diffie-Hellman
- > DES and triple DES
- > MD2 and MD5
- > SHA-1, SHA-224, SHA-256, SHA-384, SHA-512
- > RC2, RC4 and RC5
- > AES
- > PBE
- > ECC
- > ECIES
- > ARIA, SEED

## Application Programming Interface

The major API provided with SafeNet Product Software Development Kit conforms to RSA Laboratories' Public-Key Cryptography Standards #11 (PKCS #11) v2.20. A set of API services (called PKCS #11 Extensions) designed by SafeNet, augments the services provided by PKCS#11. The API is a library – a DLL in Windows, a shared object in Solaris, AIX, and Linux, – called Chrystoki. Applications wanting to use token services must connect with Chrystoki.

In addition, support is provided for Microsoft's cryptographic APIs (CAPI/CNG) and Oracle's Java Security API.



The extensions to each API enable optimum use of SafeNet hardware for commonly used calls and functions, where the unaugmented API would tend to use software, or to make generic, non-optimized use of available HSMs.

**Table 1: SafeNet libraries by platform**

Platform	Key name	Libraries
Windows	LibNT	X:\Program Files\SafeNet\LunaClient\cryptoki.dll
		X:\Program Files\SafeNet\LunaClient\cklog201.dll
		X:\Program Files\SafeNet\LunaClient\shim.dll
		X:\Program Files\SafeNet\LunaClient\LunaCSP\LunaCSP.dll
		C:\WINDOWS\system32\SafeNetKSP.dll
Solaris (32-bit)	LibUNIX	/opt/safenet/lunaclient/lib/libCryptoki2.so
		/opt/safenet/lunaclient/lib/libcklog2.so
		/opt/safenet/lunaclient/lib/libshim.so
Solaris (64-bit)	LibUNIX64	/opt/safenet/lunaclient/lib/libCryptoki2_64.so
		/opt/safenet/lunaclient/lib/libcklog2.so
		/opt/safenet/lunaclient/lib/libshim_64.so
Linux (32-bit)	LibUNIX	/usr/safenet/lunaclient/lib/libCryptoki2.so
		/usr/safenet/lunaclient/lib/libcklog2.so
		/usr/safenet/lunaclient/lib/libshim.so
Linux (64-bit)	LibUNIX64	/usr/safenet/lunaclient/lib/libCryptoki2_64.so
		/usr/safenet/lunaclient/lib/libcklog2.so
		/usr/safenet/lunaclient/lib/libshim_64.so
AIX (32-bit and 64-bit)	LibAIX	/usr/safenet/lunaclient/lib/libCryptoki2.so
		/usr/safenet/lunaclient/lib/libCryptoki2_64.so
		/usr/safenet/lunaclient/lib/libcklog2.so
		/usr/safenet/lunaclient/lib/libshim.so

Included with SafeNet Product Software Development Kit is a sample application – and the source code – to accelerate integration of SafeNet’s cryptographic engine into your system.

**NOTE** To reduce development or adaptation time, you may re-distribute the salogin program to customers who use SafeNet Luna Network HSM, in accordance with the terms of the End User License Agreement. However, you may not re-distribute the SafeNet Software Development Kit itself.

## Application Programming Interface (API) Overview

The major API provided with SafeNet Product Software Development Kit conforms to RSA Laboratories' Public-Key Cryptography Standards #11 (PKCS #11) v2.20, as described in ["PKCS#11 Support" on page 24](#). A set of API services (called PKCS #11 Extensions) designed by SafeNet, augments the services provided by PKCS#11, as described in ["Extensions to PKCS#11" on page 31](#). The extensions to each API enable optimum use of SafeNet hardware for commonly used calls and functions, where the unaugmented API would tend to use software, or to make generic, non-optimized use of available HSMs.

In addition, support is provided for Microsoft’s cryptographic APIs (CAPI/CNG) (see ["Microsoft Interfaces" on page 377](#) and Oracle’s Java Security API (see ["Java Interfaces" on page 352](#)).

The API is a library – a DLL in Windows, a shared object in Solaris, AIX and Linux – called Chrystoki. Applications wanting to use token services must connect with Chrystoki.

**Table 1: SafeNet libraries by platform**

Platform	Key name	Libraries
Windows	LibNT	X:\Program Files\SafeNet\LunaClient\cryptoki.dll
		X:\Program Files\SafeNet\LunaClient\cklog201.dll
		X:\Program Files\SafeNet\LunaClient\shim.dll
		X:\Program Files\SafeNet\LunaClient\LunaCSP\LunaCSP.dll
		C:\WINDOWS\system32\SafeNetKSP.dll
Solaris (32-bit)	LibUNIX	/opt/safenet/lunaclient/lib/libCryptoki2.so
		/opt/safenet/lunaclient/lib/libcklog2.so
		/opt/safenet/lunaclient/lib/libshim.so
Solaris (64-bit)	LibUNIX64	/opt/safenet/lunaclient/lib/libCryptoki2_64.so
		/opt/safenet/lunaclient/lib/libcklog2.so
		/opt/safenet/lunaclient/lib/libshim_64.so

Platform	Key name	Libraries
Linux (32-bit)	LibUNIX	/usr/safenet/lunaclient/lib/libCryptoki2.so
		/usr/safenet/lunaclient/lib/libcklog2.so
		/usr/safenet/lunaclient/lib/libshim.so
Linux (64-bit)	LibUNIX64	/usr/safenet/lunaclient/lib/libCryptoki2_64.so
		/usr/safenet/lunaclient/lib/libcklog2.so
		/usr/safenet/lunaclient/lib/libshim_64.so
AIX (32-bit and 64-bit)	LibAIX	/usr/safenet/lunaclient/lib/libCryptoki2.so
		/usr/safenet/lunaclient/lib/libCryptoki2_64.so
		/usr/safenet/lunaclient/lib/libcklog2.so
		/usr/safenet/lunaclient/lib/libshim.so

## Sample Application

Included with SafeNet Product Software Development Kit is a sample application – and the source code – to accelerate integration of SafeNet’s cryptographic engine into your system.

**NOTE** To reduce development or adaptation time, you may re-distribute the salogin program to customers who use SafeNet Luna Network HSM, in accordance with the terms of the End User License Agreement. However, you may not re-distribute the SafeNet Software Development Kit itself.

## A Note About RSA Key Attributes ‘p’ and ‘q’

When RSA keys are generated, ‘p’ and ‘q’ components are generated which, theoretically, could be of considerably different sizes.

### Unwrapping

The SafeNet Luna Network HSM allows RSA private keys to be unwrapped onto the HSM where the lengths of the ‘p’ and ‘q’ components are unequal. Because the effective strength of an RSA key pair is determined by the length of the shorter component, choosing ‘p’ and ‘q’ to be of equal length provides the maximum strength from the generated key pair. If your application is designed to generate key pairs that will be unwrapped onto the HSM, care should be taken in choosing the lengths of the ‘p’ and ‘q’ components such that they differ by no more than 15%.

## Generation

Where you are generating RSA private keys within the HSM, the HSM enforces that 'p' and 'q' be equal in size, to the byte level.

## A Note About the Shim

The Client install includes a shim library to support PKCS#11 integration with various third-party products. You should have no need for this shim library in your development. If for some reason you determine that you need the shim, Chrystoki supports it.

## What Does 'Supported' Mean?

With the exception of some generic items that (for example) might need to be set in Windows when installing CSP, KSP, or Java, we do not include a list of integrations in the main product documentation.

Instead, you can check with the <https://supportportal.gemalto.com> website for third-party applications that have been integrated and tested with SafeNet Luna Network HSMs by our Integrations group. That group is constantly testing and updating third-party integrations and publishing notes and instructions to help you integrate our HSMs with your applications.

As a general rule, if a specific version of an application and a specific version of a SafeNet Luna Network HSM product are mentioned in an Integration document, then those items will definitely work together. A newer version of the SafeNet Luna Network HSM or its attendant software is most likely to work with the indicated application without problem. We take care, for several generations of a given HSM product, to not break working relationships, though eventually it might happen that very old versions of third-party software and systems can no longer be supported. One thing that can sometimes happen is that we update HSM firmware to include newer algorithms, and to exclude older algorithms or key sizes that no longer meet industry-accepted standards (like NIST, Common Criteria, etc.).

A newer version of a third-party software might, or might not work with SafeNet Luna Network HSMs that were tested to work with a specific earlier version of the same software. This is because some vendors make changes in their products that require new adaptation or at least new configuration instructions. If this happens to you, Thales Customer Support or Sales Engineering is usually happy to work with you to find a solution - both to support you as one of our customers and to have a revised/new integration that can be added to our portfolio.

Check the website or contact Thales Customer Support for the latest list of third-party applications that are tested and supported with SafeNet Luna Network HSMs.

## Why Is an Integration Not Listed Here Or On the Website?

In many cases, third-party application vendors see a need to integrate their application with Gemalto SafeNet products. In those cases, the third-party company performs the integration and testing, and also provides the support for the integrated solution to their customers (including you). For integrations not listed by Thales, please contact the application vendor for current information.

Similarly some value-added resellers and custom/third-party integrators or consultants might have performed specific integrations of SafeNet Luna Network HSMs for the benefit of their specific customers. If you have purchased services or product from such a supplier, you will need to contact them for support of such integrations.

Third-party-tested integrations are not listed here or on the Thales website library of integration documents because we have not verified them in our own labs. If you contact Thales Support regarding use of our product with an application that we have not integrated, you will be asked to contact the third party that performed the integration.

## Frequently Asked Questions

---

This section provides additional information by answering questions that are frequently asked by our customers.

### **How can we use a SafeNet Luna Network HSM with a Key Manager?**

A SafeNet Luna Network HSM could be a Certificate Authority (CA) within your organization, and would operate in parallel with a Key Manager. It is normally the Key Manager that requests service from a CA, and not the other way around. For example, the Key Manager might generate an RSA key pair for an endpoint to use for authentication. The KM would then go to its associated CA and request a certificate for the public key.

The other typical use case for a KM looking to a CA for service is for confirming certificate validity, either through CRLs or OCSP.

In general, the HSM keeps keys safe within its confines, and exports only metadata about the contained objects. The metadata allows the KM or an integrated application to refer to the keys and objects within the HSM, when invoking cryptographic operations by the HSM, but not to touch the actual keys or objects themselves.

A CA's private key(s) are extremely valuable and often are used only by a CA application operating on a stand-alone server or one on a very minimally-connected subnet. Backup is normally done to a Safenet Luna Backup HSM that can then be locked away in a safe.

### **We need to encrypt PANs on MS SQL Server 2008 (Extensible Key Management). We have a problem with the encrypted PAN, as the length is greater than the original PAN (16 digits).**

The issue is a common one and it arises because the CBC padding scheme requires an extra padding block (8 bytes), with all bytes having the hex value 8, to be appended if the length of the original plaintext is a multiple of the cipher's block length. Another format issue often comes up as well since encrypted data does not generally represent well as decimal digits.

We suggest one of two options:

1. You can set up a shadow table to hold the encrypted PANs. The shadow table schema can then be set up for a sufficient number of hex numerals to hold the padded data or just make that field a binary blob. This takes some coding on your part, and the plaintext PANs would be retrieved into a dynamic view, rather than back into the "real" table, to protect their confidentiality. You should do this only if there is a hard requirement to use SafeNet Luna Network HSM, such as certification.
2. Alternatively, you can switch to DataSecure. It has tokenization support and is, in general, designed for DB security.

**"Makecert" fails when using SafeNet Luna Network HSM with MS Authenticode, because the MD5 algorithm is not available when the HSM is in FIPS mode.**

**Error: CryptHashPublicKeyInfo failed => 0x80090005 (-2146893819) Failed, and FINIDigest\_Init \*\*\*CKR\_MECHANISM\_INVALID\*\*\*(296ms) {}**

The certificate always has an MD5 hash in it. Configure LunaCSP algorithm registration such that MD5 hashing is performed in software. For example:

```
# register.exe /algorithms
```

### **We are developing our application(s) in C#, and we want to integrate with SafeNet Luna Network HSMs**

If you want to integrate your C# application with SafeNet Luna Network HSM 6.x using PKCS#11 calls, rather than using Microsoft CAPI or CNG, then you might consider using "ncryptoki". At the time this note is being written, we have not created anything formal, but we have worked with some customers who are successfully using "ncryptoki" for that purpose.

Keep an eye on the Safenet C3 website, or ask your SafeNet technical representatives if anything new has been added. Or, you could engage SafeNet Professional Services for formal assistance with your project.

### **We intend to use PKCS#11 data objects - is this supported in the API for your HSMs?**

Yes, it's a basic requirement.

If you have concerns, you might wish to verify if SafeNet Luna Network HSMs' (and our API's) handling of data objects are conducive to the operation of your intended application(s). SafeNet API generally places no restrictions on whether data objects can be private or not. We understand that, in the past, some competitors' modules might have allowed only public data objects, if that was the basis of your question.

However, one concern that might arise is Java.

Java offers no support for data objects, and so we do not support them with the LunaProvider. Unexpected results can occur with SafeNet JCA if a data object is present in a partition. This might be the case if you attempt to use an application that uses the CSP, and then the JSP accesses the same partition. CSP inherently creates a data object for its own purposes.

Therefore, keep CSP and JSP clients tied to separate partitions. Generally do not allow JSP to connect to a partition that contains a data object, regardless of the source - Java (and therefore JSP) doesn't know what to do with it.

If your application scenario really does demand the use of both the Microsoft Cryptographic Provider and Java against a common partition, then consider upgrading/updating to Microsoft CNG and use our KSP, which does not inherently create a data object, and so would not cause conflict of that sort.

### **In our application, both for PKCS#11 and for the JCA/JCE SafeNet Provider, we need to use CKM\_SHAxxx\_RSA\_PKCS mechanism for Signing. Does Hashing occur at the Client or in the HSM?**

CKM\_SHAxxx\_RSA\_PKCS is a PKCS#11 mechanism, not a Java method.

For PKCS#11 the digest operation is done within the HSM if that mechanism is called.

For Java, digests are done in software.

**We were using another vendor's HSM - or are evaluating HSM products - to host an online sub- or issuing CA with MSCA. With the other vendor we must check "Allow administrator interaction when the private key is accessed by the CA" in the "Configure Cryptography" setup dialog. SafeNet Luna Network HSMs seem to work regardless of whether that selection is checked or not.** So, for that other vendor's product, you need to enter the additional credentials every time you need to issue a certificate? That seems a bit restrictive.

"Allow administrator interaction..." actually means "Allow administrator interaction if the underlying KSP requires it".

The Windows operating system passes a Windows handle that the KSP can use to render any GUI designed by a vendor (SafeNet or some other vendor).

Somewhere in the process a KSP reports that it can (or cannot) interact with the GUI so the application will (or will not) request GUI interaction; that is, pass a window handle to the KSP.

So, the <competitor product> KSP expects a window handle - implying hands-on action by an administrator, each time - whereas SafeNetKsp ignores the handle (if one was provided).

SafeNet's KSP was designed to register partitions ahead of time. SafeNet Luna Network HSMs can be Activated, which caches the administrative and enabling credentials, such that only the partition challenge (text string) is needed, which can be passed by your application without need for GUI interaction. Furthermore, SafeNet Luna Network HSM can "AutoActivate" partitions, which allows cached ("Activated") partition credentials to be retained through power interruptions as long as 2 hours in duration.

For SafeNet Luna Network HSMs, as long as the user is registered in the KSP utility, and the partition is activated, the "Allow administrator interaction..." check box (checked or not checked ) does not impose any additional, ongoing, authentication requirements -- no additional prompts for credentials from the GUI. After initial setup and Activation, the SafeNet Luna Network HSM knows what to do, and doesn't need to pester you.

For root CAs, on the other hand, you always have the option of not activating the partition, so PED interaction would always be required to ensure close supervision for each use of the private key.

# CHAPTER 2: PKCS#11 Support

This chapter describes the PKCS#11 support provided by the SafeNet SDK. It contains the following topics:

- > ["PKCS#11 Compliance" below](#)
- > ["Using the PKCS#11 Sample" on page 28](#)

## PKCS#11 Compliance

This section shows the compliance of SafeNet Software Development Kit HSM products to the PKCS#11 standard, with reference to particular versions of the standard. The text of the standard is not reproduced here.

### Supported PKCS#11 Services

The table below identifies which PKCS#11 services this version of SafeNet Software Development Kit supports. The table following lists other features of PKCS#11 and identifies the compliance of this version of the SafeNet Software Development Kit to these features.

**Table 1: PKCS#11 function support**

Category	Function	Supported SafeNet ver 2.20
General purpose functions	C_Initialize	Yes
	C_Finalize	Yes
	C_GetInfo	Yes
	C_GetFunctionList	Yes



Category	Function	Supported SafeNet ver 2.20
Slot and token management functions	C_GetSlotList	Yes
	C_GetSlotInfo	Yes
	C_GetTokenInfo	Yes
	C_WaitForSlotEvent	No
	C_GetMechanismList	Yes
	C_GetMechanismInfo	Yes
	C_InitToken	Yes
	C_InitPIN	Yes
	C_SetPIN	Yes
Session management functions	C_OpenSession	Yes
	C_CloseSession	Yes
	C_CloseAllSessions	Yes
	C_GetSessionInfo	Yes
	C_GetOperationState	Yes
	C_SetOperationState	Yes
	C_Login	Yes
	C_Logout	Yes

Category	Function	Supported SafeNet ver 2.20
Object management functions	C_CreateObject	Yes
	C_CopyObject	Yes
	C_DestroyObject	Yes
	C_GetObjectSize	Yes
	C_GetAttributeValue	Yes
	C_SetAttributeValue	Yes
	C_FindObjectsInit	Yes
	C_FindObjects	Yes
	C_FindObjectsFinal	Yes
Encryption functions	C_EncryptInit	Yes
	C_Encrypt	Yes
	C_EncryptUpdate	Yes
	C_EncryptFinal	Yes
Decryption functions	C_DecryptInit	Yes
	C_Decrypt	Yes
	C_DecryptUpdate	Yes
	C_DecryptFinal	Yes
Message digesting functions	C_DigestInit	Yes
	C_Digest	Yes
	C_DigestUpdate	Yes
	C_DigestKey	Yes
	C_DigestFinal	Yes

Category	Function	Supported SafeNet ver 2.20
Signing and MACing functions	C_SignInit	Yes
	C_Sign	Yes
	C_SignUpdate	Yes
	C_SignFinal	Yes
	C_SignRecoverInit	No
	C_SignRecover	No
Functions for verifying signatures and MACs	C_VerifyInit	Yes
	C_Verify	Yes
	C_VerifyUpdate	Yes
	C_VerifyFinal	Yes
	C_VerifyRecoverInit	No
	C_VerifyRecover	No
Dual-purpose cryptographic functions	C_DigestEncryptUpdate	No
	C_DecryptDigestUpdate	No
	C_SignEncryptUpdate	No
	C_DecryptVerifyUpdate	No
Key management functions	C_GenerateKey	Yes
	C_GenerateKeyPair	Yes
	C_WrapKey	Yes
	C_UnwrapKey*	Yes
	C_DeriveKey	Yes
Random number generation functions	C_SeedRandom	Yes
	C_GenerateRandom	Yes

Category	Function	Supported SafeNet ver 2.20
Parallel function management functions	C_GetFunctionStatus	No
	C_CancelFunction	No
Callback function		No

\*C\_UnwrapKey has support for the CKA\_Unwrap\_Template object. All mechanisms which perform the unwrap function support an unwrap template. Nested templates are not supported.

**Table 2: PKCS#11 feature support**

Feature	Supported?
Exclusive sessions	Yes
Parallel sessions	No

## Additional Functions

Please note that certain additional functions have been implemented by SafeNet as extensions to the standard. These include aspects of object cloning, and are described in detail in ["SafeNet Luna Extensions to PKCS#11" on page 31](#).

## Using the PKCS#11 Sample

The SafeNet SDK includes a simple "C" language cross platform source example, **p11Sample**, that demonstrates the following:

- > How to dynamically load the SafeNet cryptoki library.
- > How to obtain the function pointers to the exported PKCS11 standard functions and the SafeNet extension functions.

The sample demonstrates how to invoke some, but not all of the API functions.

### The SfntLibPath Environment Variable

The sample depends on an environment variable created and exported prior to execution. This variable specifies the location of **cryptoki.dll** (Windows) or **libCryptoki2.so** on Linux/UNIX. The variable is called **SfntLibPath**. You are free to provide your own means for locating the library.

### What p11Sample Does

The p11Sample program performs the following actions:

1. The sample first attempts to load the dynamic library in the function called **LoadP11Functions**. This calls **LoadLibrary** (Windows) or **dlopen** (Linux/UNIX).

2. The function then attempts to get a function pointer to the PKCS11 API **C\_GetFunctionList** using **GetProcAddress** (Windows) or **dlsym** (Linux/UNIX).
3. Once the function pointer is obtained, use the API to obtain a pointer called **P11Functions** that points to the static CK\_FUNCTION\_LIST structure in the library. This structure holds pointers to all the other PKCS11 API functions supported by the library.

At this point, if successful, PKCS11 APIs may be invoked like the following:

```
P11Functions->C_Initialize(...);
P11Functions->C_GetSlotList(...);
P11Functions->C_OpenSession(...);
P11Functions->C_Login(...);
P11Functions->C_GenerateKey(...);
P11Functions->C_Encrypt(...);
:
:
etc
```

4. The sample next attempts to get a function pointer to the SafeNet extension API **CA\_GetFunctionList** using **GetProcAddress** (Windows) or **dlsym** (Linux/UNIX).
5. Once the function pointer is obtained, use the API to obtain a pointer called **SfntFunctions** that points to the static CK\_SFNT\_CA\_FUNCTION\_LIST structure in the library. This structure holds pointers to some but not all of the other SafeNet extension API functions supported by the library.
6. At this point, if successful, SafeNet extension APIs may be invoked like the following:

```
SfntFunctions->CA_GetHState(...);
:
:
etc.
```

7. Three sample makefiles are provided:
  - One for 32-bit Windows
  - One for 32-bit Linux
  - One for 64-bit AIX

You can easily port to another platform with minor changes.

8. To build:

<b>Windows</b>	nmake -f Makefile.win32
<b>Linux</b>	make -f Makefile.linux.32
<b>Aix</b>	make -f Makefile.aix.64

**NOTE** Please note that this simple example loads the cryptoki library directly. If your application requires integration with cklog or ckshim, you will need to load the required library (see SDK General for naming on your platform) in lieu of cryptoki. cklog and ckshim will then use the Chrystoki configuration file to locate and load cryptoki. You also have the option of locating the cryptoki library by parsing the Chrystoki2 section of the Chrystoki config file. If you do this, then the initial library (cryptoki, cklog, or ckshim) can be changed by simply updating the configuration file.

# CHAPTER 3: Extensions to PKCS#11

This chapter describes the SafeNet extensions to the PKCS#11 standard. It contains the following topics:

- > "SafeNet Luna Extensions to PKCS#11" below
- > "HSM Configuration Settings" on page 50
- > "SafeNet Luna Network HSM-Specific Commands" on page 51
- > "Secure PIN Port Authentication" on page 51
- > "High Availability Indirect Login Functions" on page 52
- > "MofN Secret Sharing (quorum or multi-person access control)" on page 55
- > "Key Export Features" on page 55
- > "Derivation of Symmetric Keys with 3DES\_ECB" on page 58
- > "PKCS#11 Extension HA Status Call" on page 58
- > "Pseudorandom Function KDF Mechanisms" on page 59
- > "Derive Template" on page 59

## SafeNet Luna Extensions to PKCS#11

---

The following table provides a list of the SafeNet Luna PKCS#11 C-API extensions.

### Firmware Dependencies

Some functions are firmware-dependent, as indicated. Where there is a firmware dependency, the specified firmware version applies to all minor revisions of the firmware. In the following table, if no firmware version/series is mentioned, then the extension applies to all. If a firmware version is mentioned, then the extension applies to that firmware series, but not to others. A function that applies to Firmware 4 (example: CA\_CloneModifyMofN) works with firmware versions 4.xx.xx, but not with firmware 6.xx.xx nor firmware 7.xx.xx.

### Other APIs

These commands and functions can also be used as extensions to other Application Programming Interfaces (for example, OpenSSL).

### Cryptoki Version Supported

The current release of SafeNet SafeNet Toolkit provides the Chrystoki library supporting version 2.20 of the Cryptoki standard.

Extension	Description
CA_ActivateMofN	Activates a token that has the secret sharing feature enabled.
CA_CapabilityUpdate	Apply configuration update file as Security Officer only.
CA_CheckOperationState	Checks if the specified cryptographic operation (encrypt, decrypt, sign, verify, digest) is in progress or not in the given session.
CA_CloneAsSource	Refer to the <i>SafeNet Luna Cloning Functions Technical Note</i> , available from Technical Support.
CA_CloneAsTarget	Refer to the <i>SafeNet Luna Cloning Functions Technical Note</i> , available from Technical Support.
CA_CloneAsTargetInit	Refer to the <i>SafeNet Luna Cloning Functions Technical Note</i> , available from Technical Support.
CA_CloneModifyMofN	Firmware 4. Cloning of M of N.
CA_CloneMofN	Firmware 4 cloning of M of N. Copy a cloneable secret-splitting vector from one token to another.
CA_CloneMofN_Common	Firmware 4 cloning of M of N.
CA_CloneObject	Refer to the <i>SafeNet Luna Cloning Functions Technical Note</i> , available from Technical Support.
CA_ClonePrivateKey	Permits the secure transfer a private key (RSA) between a source token and a target token.
CA_CloseApplicationID	Deactivate an application identifier.
CA_CloseApplicationIDForContainer	Deactivate an application identifier for a container.
CA_CloseSecureToken	Firmware 6. Close context for an SFF token.
CA_ConfigureRemotePED	Configure the given slot to use the provided remote PED information (appliance slot only).
CA_CreateContainer	Create a partition for non-PPSO users.
CA_CreateContainerLoginChallenge	Create a challenge for a role on a partition.



Extension	Description
CA_CreateContainerWithPolicy	Firmware 6. Create a partition with per-partition template data.
CA_CreateLoginChallenge	Create a login challenge for the specified user.
CA_Deactivate	Deactivate a partition.
CA_DeactivateMofN	Firmware 4. Deactivate M of N.
CA_DeleteContainer	Delete a partition.
CA_DeleteContainerWithHandle	Delete a partition.
CA_DeleteRemotePEDVector	Delete the Remote PED vector.
CA_DeriveKeyAndWrap	This is an optimization of C_DeriveKey with C_Wrap, merging the two functions into one (the in and out constraints are the same as for the individual functions). A further optimization is applied when mechanism CKM_ECDH1_DERIVE is used with CA_DeriveKeyAndWrap.
CA_DestroyMultipleObjects	Delete multiple objects.
CA_DismantleRemotePED	Inverse of CA_ConfigureRemotePED(). Delete remote PED configuration information.
CA_DuplicateMofN	Create duplicates (copies) of all MofN secret splits.
CA_EncodeECChar2Params	Encode EC curve parameters for user defined curves.
CA_EncodeECPParamsFromFile	Encode EC curve parameters for user defined curves.
CA_EncodeECPrimeParams	Encode EC curve parameters for user defined curves.
CA_Extract	Extract a SIM3 blob.
CA_FactoryReset	Factory Reset the HSM.
CA_FindAdminSlotForSlot	Get the Admin slot for the current slot.
CA_FirmwareRollback	Rollback firmware.
CA_FirmwareUpdate	Firmware 4. Firmware update for Firmware 4 (only used in Luna SA 4.x).

Extension	Description
CA_GenerateCloneableMofN	Create a cloneable secret-splitting vector on a token.
CA_GenerateCloningKEV	Refer to the <i>SafeNet Luna Cloning Functions Technical Note</i> , available from Technical Support.
CA_GenerateMofN	Generate the secret information on a token.
CA_GenerateMofN_Common	Refer to the M of N document.
CA_Get	Get HSM parameters such as serial numbers, and certificates.
CA_GetConfigurationElementDescription	Get capability / policy description and properties.
CA_GetContainerCapabilitySet	Get all partition capability values.
CA_GetContainerCapabilitySetting	Get a single partition capability value.
CA_GetContainerList	Get the list of all partitions on a slot.
CA_GetContainerName	Get the name of a specific partition.
CA_GetContainerPolicySet	Get all partition policy values.
CA_GetContainerPolicySetting	Get a single partition policy value.
CA_GetContainerStatus	Get partition status, which returns authentication status flags.
CA_GetContainerStorageInformation	Get partition storage information such as size, usage, and number of objects.
CA_GetDefaultHSMPolicyValue	Get the default value of a single HSM policy.
CA_GetDefaultPartitionPolicyValue	Get the default value of a single partition policy.
CA_GetFirmwareVersion	Get the vendor-specific firmware version of the SafeNet Luna HSM.
CA_GetHASState	Get HA status from the application perspective.
CA_GetHSMCapabilitySet	Get all HSM capability values.
CA_GetHSMCapabilitySetting	Get a single HSM capability value.

Extension	Description
CA_GetHSMPolicySet	Get all HSM policy values.
CA_GetHSMPolicySetting	Get a single HSM policy value.
CA_GetHSMStats	Get HSM usage stats such as operational counters and how busy the HSM is.
CA_GetHSMStorageInformation	Get HSM storage information such as storage and usage.
CA_GetMofNStatus	Retrieve the MofN structure of the specified token.
CA_GetNumberOfAllowedContainers	Get the number of allowed partitions depending on the partition license count.
CA_GetObjectHandle	Get the object handle for a given OUID.
CA_GetObjectUID	Get the OUID for a given object handle.
CA_GetPartitionPolicyTemplate	Firmware 6. Gets default partition policy template data from HSM.
CA_GetPedId	Get the PED ID.
CA_GetRemotePEDVectorStatus	Get the status of the RPV, created or not.
CA_GetRollbackFirmwareVersion	Get the available rollback version.
CA_GetSecureElementMeta	Get META data for objects on an SFF backup token.
CA_GetServerInstanceBySlotID	Get the instance # in the chrystoki.conf (crystoki.ini) file for the appliance/server the specified slot maps to.
CA_GetSessionInfo	Gets the session info that includes vendor specific information such as authentication state and container handle.
CA_GetSlotIdForContainer	Return a slot for a given container handle.
CA_GetSlotIdForPhysicalSlot	Return a slot for a given physical slot.
CA_GetSlotListFromServerInstance	Get the list of slots for the specified appliance/server instance #, as defined in the chrystoki.conf (crystoki.ini) file.

Extension	Description
CA_GetTime	Get the HSM time.
CA_GetTokenCapabilities	Get the capabilities for the specified partition.
CA_GetTokenCertificateInfo	Get the cloning certificate.
CA_GetTokenCertificates	Get all HSM certificates.
CA_GetTokenInsertionCount	Get the insertion or reset count of HSM in the given slot.
CA_GetTokenObjectHandle	Firmware 6.22.0 or higher. Same as CA_GetObjectHandle for partitions with a partition security officer.
CA_GetTokenObjectUID	Firmware 6.22.0 or higher. Same as CA_GetObjectUID for partitions with a partition security officer.
CA_GetTokenPolicies	Get partition policies.
CA_GetTokenStatus	Get partition status.
CA_GetTokenStorageInformation	Get partition storage information.
CA_GetTunnelSlotNumber	Get the tunnel slot number for a given slot number.
CA_HAActivateMofN	See <a href="#">"High Availability Indirect Login Functions" on page 52.</a>
CA_HAAnswerLoginChallenge	See <a href="#">"High Availability Indirect Login Functions" on page 52.</a>
CA_HAAnswerMofNChallenge	See <a href="#">"High Availability Indirect Login Functions" on page 52.</a>
CA_HAGetLoginChallenge	See <a href="#">"High Availability Indirect Login Functions" on page 52.</a>
CA_HAGetMasterPublic	See <a href="#">"High Availability Indirect Login Functions" on page 52.</a>
CA_HAInit	See <a href="#">"High Availability Indirect Login Functions" on page 52.</a>

Extension	Description
CA_HALogin	See <a href="#">"High Availability Indirect Login Functions"</a> on page 52.
CA_InitAudit	Initialize the Auditor role.
CA_InitializeRemotePEDVector	Create the Remote PED Vector.
CA_InitRolePIN	Initialize a role on the current slot.
CA_InitSlotRolePIN	Initialize a role on a different slot.
CA_InitToken	Same as CA_Init_token with PPT support.
CA_Insert	Insert a SIM3 blob.
CA_IsMofNEnabled	Firmware 4. Queries M of N status.
CA_IsMofNRequired	Firmware 4. Queries M of N status.
CA_ListSecureTokenInit	Retrieve information from an SFF backup token.
CA_ListSecureTokenUpdate	Continue retrieving information from a backup SFF token.
CA_LogExportSecret	Export (backup) the audit log HMAC key.
CA_LogExternal	Log external message - pushes an application-provided message to the HSM and logs it via the audit log.
CA_LogGetConfig	Get the audit log configuration.
CA_LogGetStatus	Get the audit log status (audit role, logs needing export, HSM to PedClient communication status).
CA_LogImportSecret	Restore the audit log HMAC key.
CA_LogSetConfig	Modify the audit log configuration.
CA_LogVerify	Verify the audit log record(s).
CA_LogVerifyFile	Verify the audit log record file.
CA_ManualKCV	Set the key cloning vector (KCV) (sets the domain).
CA_ModifyMofN	Modify the secret-splitting vector on a token.

Extension	Description
CA_ModifyUsageCount	Modify key usage count (Crypto Officer).
CA_MTKGetState	Firmware 6. Get the master tamper key (MTK) state (tampered or not).
CA_MTKResplit	Generate new MTK split, new purple key value.
CA_MTKRestore	Return MTK, provide purple key to recover from tamper.
CA_MTKSetStorage	Create purple key, enables STM/SRK.
CA_MTKZeroize	Erase the MTK, user invoked tamper. Puts HSM in to transport mode.
CA_OpenApplicationID	Activate an application identifier, independent of any open sessions.
CA_OpenApplicationIDForContainer	Same as CA_OpenApplicationID, but partition specific.
CA_OpenSecureToken	Firmware 6. Open context for an SFF token.
CA_OpenSession	Same as C_OpenSession, but lets you specify partition.
CA_OpenSessionWithAppID	Same as CA_OpenSession, but lets you specify an application ID (AppID)
CA_PerformSelfTest	Invoke a self test on HSM (RNG statistics, Cryptographic Algorithms).
CA_QueryLicense	Get License/CUF information.
CA_ResetDevice	Reset the HSM .
CA_ResetPIN	SO reset of a CO role PIN (if "SO can reset PIN" policy is on).
CA_Restart	Clean up all sessions for a given slot.
CA_RestartForContainer	Clean up all sessions for a given partition.
CA_RetrieveLicenseList	Get a list of all Licenses/CUFs.
CA_RoleStateGet	Get the state of a role (initialized, activated, failed logins, challenge created, etc).

Extension	Description
CA_SetApplicationID	Set the application's identifier.
CA_SetCloningDomain	Set the domain string used during token initialization.
CA_SetContainerPolicies	Set multiple partition policies.
CA_SetContainerPolicy	Set single partition policy.
CA_SetContainerSize	Set container storage size.
CA_SetDestructiveHSMPolicies	Set multiple destructive HSM policies.
CA_SetDestructiveHSMPolicy	Set single destructive HSM policy.
CA_SetHSMPolicies	Set multiple HSM policies.
CA_SetHSMPolicy	Set single HSM policy.
CA_SetKCV	Set KCV (domain).
CA_SetLKCV	Set a legacy KCV (legacy domain).
CA_SetMofN	Set the security policy for the token to use the secret sharing feature.
CA_SetPedId	Set the PED ID for a specific slot.
CA_SetRDK	Set the RDK (role specific KCV) for the current role.
CA_SetTokenPolicies	Set partition policies for given slot (PPSO only)
CA_SetUserContainerName	Set the name the library should use for the user partition on non-PPSO partitions.
CA_SIMExtract	SIM2, SKS, firmware 4.x, firmware 6.x. Extract SIM2 blob.
CA_SIMInsert	SIM2, SKS, firmware 4.x, firmware 6.x. Insert SIM2 blob.
CA_SIMMultiSign	SIM2, SKS, firmware 4.x, firmware 6.x. Sign multiple data blobs with multiple keys provided as SIM2 blobs.
CA_SpRawRead	PED key migration - read PED key value from DataKey PED Key.

Extension	Description
CA_SpRawWrite	PED key migration - store PED key value to iKey PED Key.
CA_STCClearCipherAlgorithm	Remove the specified Cipher Algorithm from use with STC for the specified slot.
CA_STCClearDigestAlgorithm	Remove the specified Digest Algorithm from use with STC for the specified slot.
CA_STCDeregister	Remove STC registration of a client from the specified slot.
CA_STCGetAdminPubKey	Get the public key for the Admin slot's STC identity RSA keypair.
CA_STCGetChannelID	Get the Secure Trusted Channel ID for the current slot.
CA_STCGetCipherAlgorithm	Get all the valid cipher suites allowed for the specified slot.
CA_STCGetCipherID	Get the ID for the cipher currently in use on active STC to this slot.
CA_STCGetCipherIDs	Get all cipher IDs valid for use with STC to the specified slot.
CA_STCGetCipherNameByID	Get the readable name string for the specified Cipher ID.
CA_STCGetClientInfo	Get the STC registration details (name, public key, active access) about the specified client on the specified slot.
CA_STCGetClientsList	Get the list of all STC clients registered to the specified slot.
CA_STCGetCurrentKeyLife	Get the remaining lifetime (in operations) for the active negotiated STC session key.
CA_STCGetDigestAlgorithm	Get all the valid digest algorithms allowed for the specified slot.
CA_STCGetDigestID	Get the ID for the digest currently in use on active STC to this slot.
CA_STCGetDigestIDs	Get all digest IDs valid for use with STC to the specified slot.



Extension	Description
CA_STCGetDigestNameByID	Get the readable name string for the specified Digest ID.
CA_STCGetKeyActivationTimeOut	Get the amount of time allowed between the initiation and completion of STC session negotiation.
CA_STCGetKeyLifeTime	Get the configured session key lifetime (in operations) for the specified slot.
CA_STCGetPartPubKey	Get the public key for the specified slot STC identity RSA keypair.
CA_STCGetPubKey	Get the specified slot's public key.
CA_STCGetSequenceWindowSize	Get the replay window size for the specified slot.
CA_STCGetState	Get the STC state of the specified slot.
CA_STCIsEnabled	Determine if STC is configured for the specified slot.
CA_STCRegister	Register a client for STC to the specified slot.
CA_STCSetCipherAlgorithm	Set a cipher algorithm as valid for use with STC on the specified slot.
CA_STCSetDigestAlgorithm	Set a digest algorithm as valid for use with STC on the specified slot.
CA_STCSetKeyActivationTimeOut	Set the amount of time allowed between the initiation and completion of STC session negotiations for the specified slot.
CA_STCSetKeyLifeTime	Set how long a STC key can live before STC rekeying occurs.
CA_STCSetSequenceWindowSize	Set the replay window size for the specified slot.
CA_STMGetState	Firmware 7. Get STM state (enabled or disabled).
CA_STMToggle	Enter, or recover from, Secure Transport Mode.
CA_TamperClear	Firmware 7. Used by the SO to clear tamper status.
CA_TimeSync	Synchronize the HSM time with the host time.
CA_TokenDelete	SO can delete a partition (PPSO only).

Extension	Description
CA_TokenZeroize	Zeroize a PPSO partition.
CA_ValidateContainerPolicySet	Firmware 7. Validate partition policy settings prior to calling SetPolicies.
CA_ValidateHSMPolicySet	Firmware 7. Validate HSM policy settings prior to calling SetPolicies.
CA_WaitForSlotEvent	For PCMCIA HSMs, extends C_WaitForSlotEvent and provides some history of events.
CA_Zeroize	Zeroize the HSM.

## BIP32

The addition of BIP32 support by Thales (formerly SafeNet) introduced a new key type to distinguish BIP32 keys from existing ECDSA keys. Mechanisms are added for the initial master key derivation and all child key derivations.

### Curve Support

Only curve `secp256k1` is supported. The BIP32 derivation mechanisms fail with `CKR_TEMPLATE_INCONSISTENT` for attempts to specify a curve with `CKA_ECDSA_PARAMS`.

### Key Type and Form

Key type `CKK_BIP32` is used to distinguish keys that can be used for BIP32 from all the existing ECDSA keys. Existing ECDSA keys cannot be used with any of the BIP32 mechanisms because they lack a chain code. The serialization format when importing, exporting, wrapping and unwrapping keys is also different from ECDSA keys. All mechanisms supported by ECDSA keys are supported for BIP32 keys.

The SEC1 compressed form of BIP32 key values stores only the x-coordinate value, prepended by a Y coordinate flag, to reduce public key size, and thus overhead in many calculations. This is possible because only two points along the curve share any particular X coordinate, so the 32-byte Y coordinate can be replaced with a single bit indicating whether the point is on the “top” side or the “bottom” side.

### Extended Keys and Hardened Keys

For BIP32 both private and public keys are represented by the extended format. An extra 256 bits of entropy is added to each key called the chain code, and is identical for corresponding private and public keys, and consists of 32 bytes.

An extended private key is represented as (k, c), with k the normal private key, and c the chain code. An extended public key is represented as (K, c), with K = point(k) (the coordinate pair x and y) and c the chain code.

In BIP32 there are hardened and non-hardened (normal) child keys. Each of these child keys has a 32-bit index. Child keys are considered hardened if the most significant bit of their index is set. This bit is defined as `CKF_BIP32_HARDENED`. This allows  $2^{31}$  hardened keys and  $2^{31}$  non-hardened keys per parent.

Hardened private keys create a firewall through which multi-level key derivation compromises cannot occur. For normal keys one can derive child public keys of a given parent key without knowing any private key. So if an attacker gets a normal parent chain code and parent public key, he can brute-force all chain codes deriving from it. If the attacker also obtains a child, grandchild, or further-descended private key, he can use the chain code to generate all of the extended private keys descending from that private key. The formula for creating hardened keys makes it impossible to create child public keys without knowing the parent private key.

## Key Derivation

Two mechanisms support all the key derivations in BIP32.

### CKM\_BIP32\_MASTER\_DERIVE

This mechanism derives the master key pair from a seed. The input key must have the type `CKK_GENERIC_SECRET` (size between 128 and 512 bits). This mechanism is unique in that it derives 2 keys from 1, accepting 2 templates as input and outputting the 2 derived key handles. To avoid confusion, the 3 last arguments of `C_DeriveKey()` (`pTemplate`, `ulAttributeCount` and `phKey`) must be null or zero. `CKR_ARGUMENTS_BAD` is returned if any of those parameters are non-NULL. The templates and returned handles are instead passed in through the mechanism parameters which are clearly labeled public and private. Leave those parameters as zero or null if you choose to not generate the public or private key.

```
typedef struct CK_BIP32_MASTER_DERIVE_PARAMS {
    CK_ATTRIBUTE_PTR pPublicKeyTemplate;
    CK_ULONG ulPublicKeyAttributeCount;
    CK_ATTRIBUTE_PTR pPrivateKeyTemplate;
    CK_ULONG ulPrivateKeyAttributeCount;
    CK_OBJECT_HANDLE hPublicKey; // output parameter
    CK_OBJECT_HANDLE hPrivateKey; // output parameter
} CK_BIP32_MASTER_DERIVE_PARAMS;
```

See ["Code Samples" on page 47](#).

### CKM\_BIP32\_CHILD\_DERIVE

Use this mechanism to derive child keys from a parent key. The mechanism can generate both the private and public parts of the key pair. The mechanism accepts a BIP32 public or private key as input, and returns an error if a public to private derivation is attempted. Like the master key derivation, the templates and key handle outputs are passed through the mechanism parameters. Leave those parameters as zero or null to not generate the public or private key.

The BIP32 and BIP44 specifications recommend wallet structures and use cases. The specifications provide a good reference for deciding how a key tree should be organized and if a particular key should be hardened or not. Follow the specifications to avoid potential security holes.

This mechanism can generate keys that are several levels deep in the key hierarchy. The path of the key is specified with `pulPath` and `ulPathLen`. The path is an array of integers (key indices). The path is relative to the input key. For example, if the path is [5, 1, 4] and the path of the input key is m/0 then the resulting path is m/0/5/1/4.

```

typedef struct CK_BIP32_CHILD_DERIVE_PARAMS {
    CK_ATTRIBUTE_PTR pPublicKeyTemplate;
    CK_ULONG ulPublicKeyAttributeCount;
    CK_ATTRIBUTE_PTR pPrivateKeyTemplate;
    CK_ULONG ulPrivateKeyAttributeCount;
    CK_ULONG_PTR pulPath;
    CK_ULONG ulPathLen;
    CK_OBJECT_HANDLE hPublicKey; // output parameter
    CK_OBJECT_HANDLE hPrivateKey; // output parameter
    CK_ULONG ulPathErrorIndex; // output parameter
} CK_BIP32_CHILD_DERIVE_PARAMS;

```

See ["Code Samples" on page 47](#).

## Error Codes

These mechanisms can fail in the following ways.

**CKR\_BIP32\_CHILD\_INDEX\_INVALID:** This error is returned on the rare occurrence ( $1 / 2^{127}$ ) that a child derivation returns an all zero private key, a private key bigger than or equal to the curve order parameter  $n$  or a point at infinity. This error signifies that the child key index cannot be used to derive keys. The customer should choose a different index and try the derivation again. The problematic child index is indicated by `ulPathErrorIndex`.

PKCS#11 does not have fixed width integers. This error can also be returned on platforms where `CK_ULONG` is bigger than 32 bits and a child index is bigger than  $2^{32} - 1$ .

**CKR\_BIP32\_INVALID\_HARDENED\_DERIVATION:** This error is returned if the customer attempts to derive a hardened key from a public key. BIP32 doesn't support such a derivation.

**CKR\_BIP32\_MASTER\_SEED\_LEN\_INVALID:** The BIP32 specification recommends deriving the master key from a seed that is between 128 and 512 bits long. This error is returned if the seed length is outside of that range.

**CKR\_BIP32\_MASTER\_SEED\_INVALID:** This error is returned on the rare occurrence ( $1 / 2^{127}$ ) that the master derivation returns an all zero private key, a private key bigger than or equal to the curve order parameter  $n$  or a point at infinity. This error signifies that the master seed cannot be used for BIP32. The customer should generate a new master seed and retry the derivation.

**CKR\_BIP32\_INVALID\_KEY\_PATH\_LEN:** This error is returned when `ulPathLen` is 0 or greater than 255. The BIP44 standard only requires paths of length 5 so this limit should be acceptable in most cases.

## Key Attributes

The following attributes will exist on all keys created with one of the above derivation mechanisms.

**CKA\_BIP32\_CHAIN\_CODE:** The chain code is essential for BIP32 keys and is used to derive future keys. The public and private key share this value. *Read only*.

**CKA\_BIP32\_VERSION\_BYTES:** Version bytes are used to further identify BIP32 keys. The version bytes help determine if a key is used on the main bitcoin network or the test network. This attribute defaults to `CKG_BIP32_VERSION_MAINNET_PUB/PRIV` if it wasn't specified at key creation time. This value can also be set to `CKG_BIP32_VERSION_TESTNET_PUB/PRIV` or any other value.

**CKA\_BIP32\_CHILD\_INDEX:** The child index stores which index was used to derive this key. An index with the `CKF_BIP32_HARDENED` bit set is considered a hardened child. The child index is 0 for the master key. The public and private key share this value. *Read only.*

**CKA\_BIP32\_CHILD\_DEPTH:** The depth of the child key in the key tree. The master key has a depth of 0. The public and private key share this value. *Read only.*

**CKA\_BIP32\_ID:** The unique identifier for the key. This value is derived from the HASH160 of the compressed public key. The first 32 bits of this value is known as the fingerprint. `CKA_ID` is not used for this because that attribute is writable. The public and private key share this value. *Read only.*

An attribute for the parent ID is not required. Because we advise that you derive a key, use it and then delete it, there should be no need to discover how keys are organized based on the fingerprints or IDs. The parent fingerprint is available, in case a key tree needs to be rediscovered but the wallet software must deal with collisions.

#### **CKA\_BIP32\_FINGERPRINT and CKA\_BIP32\_PARENT\_FINGERPRINT:**

These are the fingerprints for the key and parent key, or the first 32 bits of the BIP32 key identifier. These can be used to identify keys but the wallet software must handle collisions. For identifying keys, it's better to use `CKA_BIP32_ID` because it is long enough that collisions are unlikely. The public and private key share this value. The master key has a parent fingerprint of 0. *Read only.*

## Public Key Import/Export

To import existing BIP32 keys we support their serialization format. For public keys, library functions facilitate importing and exporting.

```
CK_RV CA_Bip32ImportPubKey(
    CK_SESSION_HANDLE hSession,
    CK_ATTRIBUTE_PTR pTemplate,
    CK_ULONG ulCount,
    const CK_CHAR_PTR pKey,           //in BIP32 serialization format
    CK_OBJECT_HANDLE_PTR phObject
);
CK_RV CA_Bip32ExportPubKey(
    CK_SESSION_HANDLE hSession,
    CK_OBJECT_HANDLE hObject,
    CK_CHAR_PTR pKey,               //in BIP32 serialization format
    CK_ULONG_PTR pulKeyLen         //on input contains max. buffer size, returns
                                   // actual size
);
```

Importing is done with `CA_Bip32ImportPubKey()`. The function is similar to `C_CreateObject()` but it takes an additional parameter for the serialized public key. The template passed in should contain all the desired non-BIP32 attributes like `CKA_TOKEN`, `CKA_PRIVATE`, `CKA_DERIVE`, etc. The function decodes the public key to get all the BIP32 attributes. Both sets of attributes are then used to create the public key on the HSM.

**NOTE:** When importing a serialized extended public key, implementations must verify whether the X coordinate in the public key data corresponds to a point on the curve. If not, the extended public key is invalid.

Exporting is done with `CA_Bip32ExportPubKey()`. The specified object is extracted from the HSM and encoded in the BIP32 format. The result is a NULL terminated string, and is placed in the `pKey` parameter. The length of `pKey` has a maximum of 112 characters. This constant is defined as `CKG_BIP32_MAX_SERIALIZED_LEN`. It is possible that not all characters are needed to serialize the key. Any unused characters are set to 0.

See ["Code Samples" on the next page](#).

### BIP32 Serialization Format

Extended public and private keys are serialized as follows:

- 4 byte: version bytes (mainnet: 0x0488B21E public, 0x0488ADE4 private; testnet: 0x043587CF public, 0x04358394 private)
- 1 byte: depth: 0x00 for master nodes, 0x01 for level-1 derived keys, ....
- 4 bytes: the fingerprint of the parent's key (0x00000000 if master key)
- 4 bytes: child number (index) – 32-bit unsigned integer with most significant byte first (0x00000000 if master key)
- 32 bytes: the chain code
- 33 bytes: the public key or private key data ( $\text{ser}_P(K)$  for public keys,  $0x00 \parallel \text{ser}_{256}(k)$  for private keys)

Where  $\text{ser}_P(P)$ : serializes the coordinate pair  $P = (x,y)$  as a byte sequence using SEC1's compressed form:  $(0x02 \text{ or } 0x03) \parallel \text{ser}_{256}(x)$ , where the header byte depends on the parity of the omitted  $y$  coordinate.

This 78 byte structure is encoded like other Bitcoin data in Base58, by first adding 32 checksum bits (derived from the double SHA-256 checksum), and then converting to the Base58 representation. This results in a Base58-encoded string of up to `CKG_BIP32_MAX_SERIALIZED_LEN` characters. Because of the choice of the version bytes, the Base58 representation starts with "xprv" or "xpub" on mainnet, "tprv" or "tpub" on testnet.

### Private Key Import/Export

Private keys can be imported and exported with existing PKCS#11 functions. They can be imported and exported only if the HSM uses the key wrap model instead of cloning. To import a key, call `C_Encrypt*` on the serialized key followed by `C_UnwrapKey()`. Exporting keys is done by calling `C_WrapKey()` followed by `C_Decrypt*`. As with other keys, use `C_WrapKey()` and `C_UnwrapKey()` to store keys off the HSM or to move them between HSMs.

See ["Code Samples" on the next page](#).

### Key Backup and Cloning

Backups and cloning of BIP32 keys supported only between generation 7 PCIe HSM cards (either as the host-installable PCIe HSM or the Network HSM). Cloning of BIP32 keys is supported only for HSMs containing firmware versions that include BIP32 support. BIP32 keys cannot be cloned to HSMs with older firmware versions made before BIP32 support was introduced.

### Non-FIPS Algorithm

The BIP32 mechanisms are available only if non-FIPS algorithms are allowed. See "Capabilities and Policies" in the Administration Guide.

## Code Samples

### Deriving the master key pair

Set `CKA_PRIVATE` on the master public and private keys to `TRUE` to prevent the chain code from being seen by unauthorized users. The master key should be used only for derivations, so it is the only operation allowed. The version bytes default to `0x0488B21E/0x0488ADE4` for the public/private keys, if the attribute is missing in the template. Those are the values specified in BIP32 for keys on the main bitcoin network.

```
CK_ATTRIBUTE pubTemplate[] =
{
    {CKA_TOKEN,          &bToken,      sizeof(bToken)},
    {CKA_PRIVATE,       &bTrue,       sizeof(bTrue)},
    {CKA_DERIVE,        &bTrue,       sizeof(bTrue)},
    {CKA_MODIFIABLE,   &bTrue,       sizeof(bTrue)},
    {CKA_LABEL,         pbLabel,      strlen(pbLabel)},
};
CK_ATTRIBUTE privTemplate[] =
{
    {CKA_TOKEN,          &bToken,      sizeof(bToken)},
    {CKA_PRIVATE,       &bTrue,       sizeof(bTrue)},
    {CKA_SENSITIVE,    &bTrue,       sizeof(bTrue)},
    {CKA_DERIVE,        &bTrue,       sizeof(bTrue)},
    {CKA_MODIFIABLE,   &bTrue,       sizeof(bTrue)},
    {CKA_LABEL,         pbLabel,      strlen(pbLabel)},
};

CK_BIP32_MASTER_DERIVE_PARAMS mechParams;
mechParams.pPublicKeyTemplate = pubTemplate;
mechParams.ulPublicKeyAttributeCount = ARRAY_SIZE(pubTemplate);
mechParams.pPrivateKeyTemplate = privTemplate;
mechParams.ulPrivateKeyAttributeCount = ARRAY_SIZE(privTemplate);
CK_MECHANISM mechanism = {CKM_BIP32_MASTER_DERIVE, &mechParams, sizeof(mechParams)};

CK_RV rv = C_DeriveKey(hSession, &mechanism, hSeedKey, NULL, 0, NULL);
// fail if rv != CKR_OK

CK_OBJECT_HANDLE pubKey = mechanism.hPublicKey;
CK_OBJECT_HANDLE privKey = mechanism.hPrivateKey;
```

The new key handles are stored in `pubKey` and `privKey` if the derivation was successful.

### Deriving a child leaf key

Set `CKA_PRIVATE` on the child public and private keys to `TRUE` to prevent the chain code from being seen by unauthorized users. A child leaf key (the bottom key in the tree) should not be used for derivation and is meant for signing, verifying, encrypting and decrypting. Parent child keys need the derive attribute turned on. The version bytes default to `0x0488B21E/0x0488ADE4` for the public/private keys if the attribute is missing. Those are the values specified in BIP32 for keys on the main bitcoin network.

```

CK_ATTRIBUTE pubTemplate[] =
{
    {CKA_TOKEN,          &bToken,      sizeof(bToken)},
    {CKA_PRIVATE,       &bTrue,       sizeof(bTrue)},
    {CKA_ENCRYPT,        &bTrue,       sizeof(bTrue)},
    {CKA_VERIFY,        &bTrue,       sizeof(bTrue)},
    {CKA_MODIFIABLE,    &bTrue,       sizeof(bTrue)},
    {CKA_LABEL,         pbLabel,       strlen(pbLabel)},
};

CK_ATTRIBUTE privTemplate[] =
{
    {CKA_TOKEN,          &bToken,      sizeof(bToken)},
    {CKA_PRIVATE,       &bTrue,       sizeof(bTrue)},
    {CKA_SENSITIVE,     &bTrue,       sizeof(bTrue)},
    {CKA_SIGN,          &bTrue,       sizeof(bTrue)},
    {CKA_DECRYPT,        &bTrue,       sizeof(bTrue)},
    {CKA_MODIFIABLE,    &bTrue,       sizeof(bTrue)},
    {CKA_LABEL,         pbLabel,       strlen(pbLabel)},
};

CK_ULONG path[] = {
    CKF_BIP32_HARDENED | CKG_BIP44_PURPOSE,
    CKF_BIP32_HARDENED | CKG_BIP44_COIN_TYPE_BTC,
    CKF_BIP32_HARDENED | 1,
    CKG_BIP32_EXTERNAL_CHAIN,
    0
};

CK_BIP32_MASTER_DERIVE_PARAMS mechParams;
mechParams.pPublicKeyTemplate = pubTemplate;
mechParams.ulPublicKeyAttributeCount = ARRAY_SIZE(pubTemplate);
mechParams.pPrivateKeyTemplate = privTemplate;
mechParams.ulPrivateKeyAttributeCount = ARRAY_SIZE(privTemplate);
mechParams.pulPath = path;
mechParams.ulPathLen = ARRAY_SIZE(path);
CK_MECHANISM mechanism = {CKM_BIP32_CHILD_DERIVE, &mechParams, sizeof(mechParams)};

CK_RV rv = C_DeriveKey(hSession, &mechanism, hMasterPrivKey, NULL, 0, NULL);
// fail if rv != CKR_OK

CK_OBJECT_HANDLE pubKey = mechanism.hPublicKey;
CK_OBJECT_HANDLE privKey = mechanism.hPrivateKey;

```

The new key handles are stored in `pubKey` and `privKey` if the derivation was successful. The path generates a key pair that follows the BIP44 convention and can be used to receive BTC.

## Importing a public extended key

```

CK_ATTRIBUTE template[] =
{
    {CKA_TOKEN,          &bToken,      sizeof(bToken)},
    {CKA_PRIVATE,       &bTrue,       sizeof(bTrue)},
    {CKA_DERIVE,        &bTrue,       sizeof(bTrue)},
    {CKA_MODIFIABLE,    &bTrue,       sizeof(bTrue)},
    {CKA_LABEL,         pbLabel,       strlen(pbLabel)},
};

```



```

CK_CHAR_PTR encodedKey = "xpub661MyMwAqRbcFtXgS5..."; //BIP32 serialization format
CK_OBJECT_HANDLE pubKey;

CK_RV rv = CA_Bip32ImportKey(hSession, template, ARRAY_SIZE(template), encodedKey, &pubKey);

```

The handle for the newly create key is stored in `pubKey` if the import was successful.

## Exporting a public extended key

```

CK_CHAR encodedKey[CKG_BIP32_MAX_SERIALIZED_LEN+1];
CK_ULONG ulEncodedKeySize = sizeof(encodedKey);

CK_RV rv = CA_Bip32ExportPubKey(hSession, hObject, encodedKey, &ulEncodedKeySize );

```

The encoded key is stored in `encodedKey` (BIP32 serialization format) if there were no errors.

## Importing a private extended key

```

CK_ATTRIBUTE template[] =
{
    {CKA_CLASS,          &keyClass,    sizeof(keyClass)},
    {CKA_TOKEN,         &bToken,      sizeof(bToken)},
    {CKA_KEY_TYPE,      &keyType,     sizeof(keyType)},
    {CKA_PRIVATE,       &bTrue,       sizeof(bTrue)},
    {CKA_DERIVE,        &bTrue,       sizeof(bTrue)},
    {CKA_MODIFIABLE,    &bTrue,       sizeof(bTrue)},
    {CKA_LABEL,         pbLabel,      strlen(pbLabel)},
    {CKA_SENSITIVE,     &bTrue,       sizeof(bTrue)},
};

CK_CHAR_PTR encodedKey = "xprv9s21ZrQH143K3QTDL4LXw2F...";
CK_MECHANISM mechanism = {CKM_AES_KWP, NULL, 0};
CK_BYTE wrappedKey[256];
CK_ULONG wrappedKeyLen = sizeof(wrappedKey);
CK_OBJECT_HANDLE hUnwrappedKey;

CK_RV rv = C_EncryptInit(hSession, &mechanism, hWrappingKey);
// fail if rv != CKR_OK

rv = C_Encrypt(hSession, encodedKey, sizeof(encodedKey), wrappedKey, &wrappedKeyLen);
// fail if rv != CKR_OK

rv = C_UnwrapKey(hSession, &mechanism, hWrappingKey, wrappedKey, wrappedKeyLen, template, ARRAY_
SIZE(template), &hUnwrappedKey);

```

After unwrapping the encoded key its BIP32 serialization format is decoded (the template key type is checked for BIP32). The handle of the unwrapped key is stored in `hUnwrappedKey` if there were no errors.

## Exporting a private extended key

```

CK_MECHANISM mechanism = {CKM_AES_KWP, NULL, 0};
CK_BYTE key[256];
CK_ULONG keyLen = sizeof(key);

CK_RV rv = C_WrapKey(hSession, &mechanism, hWrappingKey, hKeyToWrap, key, &keyLen);

```

```
// fail if rv != CKR_OK

rv = C_DecryptInit(hSession, &mechanism, hWrappingKey);
// fail if rv != CKR_OK

rv = C_Decrypt(hSession, key, keyLen, key, &keyLen);
// fail if rv != CKR_OK

key[keyLen] = 0 // The key isn't NULL terminated after C_Decrypt().
```

`C_WrapKey()` must convert the BIP32 key to the BIP32 serialization format before wrapping.

The serialized key is stored in `key` if there were no errors.

## PKCS#11 Definitions

```
#define CKK_BIP32 (CKK_VENDOR_DEFINED | 0x14)
#define CKM_BIP32_MASTER_DERIVE (CKM_VENDOR_DEFINED | 0xE00)
#define CKM_BIP32_CHILD_DERIVE (CKM_VENDOR_DEFINED | 0xE01)
#define CKR_BIP32_CHILD_INDEX_INVALID (CKR_VENDOR_DEFINED | 0x83)
#define CKR_BIP32_INVALID_HARDENED_DERIVATION (CKR_VENDOR_DEFINED | 0x84)
#define CKR_BIP32_MASTER_SEED_LEN_INVALID (CKR_VENDOR_DEFINED | 0x85)
#define CKR_BIP32_MASTER_SEED_INVALID (CKR_VENDOR_DEFINED | 0x86)
#define CKR_BIP32_INVALID_KEY_PATH_LEN (CKR_VENDOR_DEFINED | 0x87)
#define CKA_BIP32_CHAIN_CODE (CKA_VENDOR_DEFINED | 0x1100)
#define CKA_BIP32_VERSION_BYTES (CKA_VENDOR_DEFINED | 0x1101)
#define CKA_BIP32_CHILD_INDEX (CKA_VENDOR_DEFINED | 0x1102)
#define CKA_BIP32_CHILD_DEPTH (CKA_VENDOR_DEFINED | 0x1103)
#define CKA_BIP32_ID (CKA_VENDOR_DEFINED | 0x1104)
#define CKA_BIP32_FINGERPRINT (CKA_VENDOR_DEFINED | 0x1105)
#define CKA_BIP32_PARENT_FINGERPRINT (CKA_VENDOR_DEFINED | 0x1106)
#define CKG_BIP32_VERSION_MAINNET_PUB (0x0488B21E)
#define CKG_BIP32_VERSION_MAINNET_PRIV (0x0488ADE4)
#define CKG_BIP32_VERSION_TESTNET_PUB (0x043587CF)
#define CKG_BIP32_VERSION_TESTNET_PRIV (0x04358394)
#define CKG_BIP44_PURPOSE (0x0000002C)
#define CKG_BIP44_COIN_TYPE_BTC (0x00000000)
#define CKG_BIP44_COIN_TYPE_BTC_TESTNET (0x00000001)
#define CKG_BIP32_EXTERNAL_CHAIN (0x00000000)
#define CKG_BIP32_INTERNAL_CHAIN (0x00000001)
#define CKG_BIP32_MAX_SERIALIZED_LEN (112)
#define CKF_BIP32_HARDENED (0x80000000)
#define CKF_BIP32_MAX_PATH_LEN (255)
```

## HSM Configuration Settings

SafeNet Luna Network HSMs implement configuration settings that can be used to modify the behavior of the HSM, or can be read to determine how the HSM will behave. There are multiple settings that may be manipulated. Other than the "allow non-FIPS algorithms", most customers have no need to either query or change HSM settings. If you believe that your application needs more control over the HSM, please contact SafeNet for guidance.

## SafeNet Luna Network HSM-Specific Commands

---

SafeNet Luna Network HSM, both the HSM Server and the client, use PKCS#11 and the SafeNet Extensions, with some exceptions that differ from other SafeNet products. This SDK document is meant to support all SafeNet products that use PKCS#11 and the other supported interfaces, in addition to SafeNet Luna Network HSM.

### Commands Not Available Through Libraries

Several commands, both standard PKCS#11 commands and our Extensions are not enabled in the Client, because their functions are addressed on SafeNet Luna Network HSM via the LunaSH interface. These are:

- > C\_InitToken
- > C\_SetPin
- > CA\_ResetPin
- > CA\_SetCloningDomain
- > All of the CCM commands
- > CA\_ClonePrivateKey
- > C\_GetOperationState
- > C\_SetOperationState

### Configuration Settings

Other SafeNet tokens implement configuration settings that can be used to modify the behavior of the token, or can be read to determine how the token will behave.

In SafeNet Luna Network HSM, this configuration and modification of HSM and behavior is controlled in LunaSH via HSM Policies, using the following commands:

- > ["hsm showpolicies" on page 1](#)
- > ["hsm changepolicy" on page 1](#)

## Secure PIN Port Authentication

---

Generally, an application collects an authentication code or PIN from a user and/or other source controlled by the host computer. With Gemalto's FIPS 140-2 level 3-validated products (such as SafeNet Luna Network HSM), the PIN must come from a device connected to the secure port of the physical interface (or connected via a secure Remote PED protocol connection). The Luna PED (PIN Entry Device) is used for secure entry of PINs.

A bit setting in the device's capabilities settings determines whether the HSM requires that PINs be entered through the secure port. If the appropriate configuration bit is set, PINs must be entered through the secure port.

If the device's configuration bit is off, the application must provide the PIN through the existing mechanism. Through setting the PIN parameters, the application tells the token where to look for PINs. A similar programming approach applies to define the key cloning domain identifier.

Applications wanting PINs to be collected via the secure port must pass a NULL pointer for the pPin parameter and a value of zero for the ulPinLen parameter in function calls with PIN parameters. This restriction applies everywhere PINs are used. The following functions are affected:

- > C\_InitToken
- > C\_InitIndirectToken
- > C\_InitPIN
- > C\_SetPIN
- > CA\_InitIndirectPIN
- > C\_Login
- > CA\_IndirectLogin

When domains are generated/collected through the secure port during a C\_InitToken call, the application must pass a NULL pointer for the pbDomainString parameter and a value of zero for the ulDomainStringLen parameter in the CA\_SetCloningDomain function.

## High Availability Indirect Login Functions

**NOTE** In order to implement High Availability Recovery, the primary and secondary tokens must exist on separate systems.

The following enhancements securely extend the indirect login capability to SafeNet CA3 tokens. SafeNet CA3 tokens to store sensitive information (encrypted) in flash memory, and must therefore be protected against attack by a man-in-the-middle who physically attacks the target token to expose the contents of flash memory, and employs that information against intercepted (or spuriously-generated) message traffic.

The SafeNet CA3 to SafeNet CA3 indirect login protocol also supports old-style MofN authentication between tokens that share an MofN secret.

### Initialization functions

Initialization of tokens in a high-availability environment involves three steps:

1. The generation of an RSA login key pair (the public key of the pair may be discarded),
2. Cloning of the private key member to the User (and optionally to the SO) spaces of all tokens within that environment and,
3. Calling the **CA\_HAInit** function on all tokens within that environment, in the context of the session owned by the User or SO.

The first two steps are performed using ordinary key generate and cloning Cryptoki function calls. The **CA\_HAInit** function is implemented as follows:

#### CA\_HAInit()

```
CK_RV CK_ENTRY CA_HAInit(
CK_SESSION_HANDLE hSession, // Logged-in session of user
// who owns the Login key pair
CK_OBJECT_HANDLE hLoginPrivateKey // Handle to Login private key
);
```

## Recovery Functions

The HA recovery mechanism requires the following commands and interface functions:

### CA\_HAGetMasterPublic()

Called on the primary token, **CA\_HAGetMasterPublic()** retrieves the primary token's TWC (Token Wrapping Certificate) and returns it as a blob (octet string and length). The format of this function is as follows:

```
CK_RV CK_ENTRY CA_HAGetMasterPublic(
CK_SLOT_ID slotId, // Slot number of the primary
// token
CK_BYTE_PTR pCertificate, // pointer to buffer to hold
//TWC certificate
CK_ULONG_PTR pulCertificateLen // pointer to value to hold
//TWC certificate length
);
```

### CA\_HAGetLoginChallenge()

Called on the secondary token, **CA\_HAGetLoginChallenge()** accepts the TWC blob and returns the secondary token's login challenge blob. The format of this command is as follows:

```
CK_RV CK_ENTRY CA_HAGetLoginChallenge(
CK_SESSION_HANDLE hSession, // Public session
CK_USER_TYPE userType, // User type - SO or USER
CK_BYTE_PTR pCertificate, // TWC certificate retrieved
// from primary
CK_ULONG ulCertificateLen, // TWC certificate length
CK_BYTE_PTR pChallengeBlob, // pointer to buffer to hold
// challenge blob
CK_ULONG_PTR pulChallengeBlobLen // pointer to value to hold
// challenge blob length
);
```

### CA\_HAAnswerLoginChallenge()

Called on the primary token, **CA\_HAAnswerLoginChallenge()** accepts the login challenge blob and returns the encrypted SO or User PIN, as appropriate.

```
CK_RV CK_ENTRY CA_HAAnswerLoginChallenge(
CK_SESSION_HANDLE hSession, // Session of the Login Private
// key owner
CK_OBJECT_HANDLE hLoginPrivateKey, // object handle to login key
CK_BYTE_PTR pChallengeBlob, // pointer to buffer containing
// challenge blob
CK_ULONG ulChallengeBlobLen, // length of challenge blob
CK_BYTE_PTR pEncryptedPin, // pointer to buffer holding
// encrypted PIN
CK_ULONG_PTR pulEncryptedPinLen // pointer to value holding
// encrypted PIN length
);
```

### CA\_HALogin()

Called on the secondary token, **CA\_HALogin()** accepts the encrypted PIN and logs the secondary token in. If the second-ary token requires MofN authentication, an MofN challenge blob is returned. If no MofN authentication is required, a zero-length blob is returned. The format of this function is as follows:

```
CK_RV CK_ENTRY CA_HALogin(
CK_SESSION_HANDLE hSession, // Same public session opened
```

```
// in CA_HAGetLoginChallenge,
//above
CK_BYTE_PTR pEncryptedPin, // pointer to buffer holding
// encrypted PIN
CK_ULONG ulEncryptedPinLen, // length of encrypted PIN
CK_BYTE_PTR pMofNBlob, // pointer to buffer to hold
// MofN blob
CK_ULONG_PTR pulMofNBlobLen // pointer to value to hold the
// length of MofN blob
);
```

If the call is successful, then the session now becomes a private session owned by the User or SO (as appropriate).

### CA\_AnswerMofNChallenge()

Called on the primary token, **CA\_AnswerMofNChallenge()** accepts the MofN challenge blob and returns the primary token's masked MofN secret. The format of this function is as follows:

```
CK_RV CK_ENTRY CA_HAAnswerMofNChallenge(
CK_SESSION_HANDLE hSession, // Private session
CK_BYTE_PTR pMofNBlob, // passed in MofN blob
CK_ULONG ulMofNBlobLen, // length of MofN blob
CK_BYTE_PTR pMofNSecretBlob, // pointer to buffer to hold
// MofN secret blob
CK_ULONG_PTR pulMofNSecretBlobLen // pointer to value that holds
// the MofN secret blob len
);
```

### CA\_HAActivateMofN()

Called on the secondary token, **CA\_HAActivateMofN()** accepts the masked MofN secret and performs MofN authentication. The resulting MofN secret is checked against the CRC stored in the MofN PARAM structure.

```
CK_RV CK_ENTRY CA_HAActivateMofN(
CK_SESSION_HANDLE hSession, // The now-private session from
// successful CA_HALogin call
CK_BYTE_PTR pMofNSecretBlob, // pointer to MofN secret
// blob that is passed in
CK_ULONG ulMofNSecretBlobLen // length of MofN secret blob
);
```

It is expected that the recovery functions will be executed in the proper sequence and as part of an atomic operation. Nonetheless, the recovery operation may be restarted at any time due to an error. Restarting the recovery operation resets the state condition of the secondary token, and any data that has been stored or generated on the token is discarded.

## Login Key Attributes

The login keys must possess the following attributes to function properly in a HA recovery scenario:

```
// Object
CKA_CLASS = CKO_PRIVATE_KEY,
// StorageClass
CKA_TOKEN = True,
CKA_PRIVATE = True,
CKA_MODIFIABLE = False,
// Key
CKA_KEY_TYPE = CKK_RSA,
CKA_DERIVE = False,
```

```

CKA_LOCAL = True,
// Private
CKA_SENSITIVE = True,
CKA_DECRYPT = False,
CKA_SIGN = False,
CKA_SIGN_RECOVER = False,
CKA_UNWRAP = False,
CKA_EXTRACTABLE = False

```

## Control of HA Functionality

Refer to for the mechanisms by which the SO can control availability of the HA functionality.

## MofN Secret Sharing (quorum or multi-person access control)

In previous SafeNet Luna Network HSM releases, this page described library and firmware aspects of MofN secret sharing.

Current implementation (since HSM firmware 5) no longer implements MofN via the HSM.

Instead, MofN is entirely mediated via Luna PED 2.4 and later. The HSM is unaware of secret sharing. Multi-person access control for any of the authentication secrets (SO, User, Cloning domains, Remote PED Vector) is a PED function, and the HSM sees only the fully reconstituted MofN secrets as they are presented to it by the PED.

This implementation is both cleaner and more flexible than the legacy implementation. If you have used, or are still using legacy SafeNet Luna Network HSMs, be aware that the legacy implementation of MofN split-secret, multi-person access control is not compatible with the modern implementation. For migration instructions, contact Gemalto Technical Support.

## Key Export Features

The SafeNet Key Export HSM provides the feature(s) detailed in this section.

### RSA Key Component Wrapping

The RSA Key Component Wrapping is a feature that allows an application to wrap any subset of attributes from an RSA private key with 3-DES. Access to the feature is through the PKCS #11 function `C_WrapKey` with the `CKM_DES3_ECB` mechanism. The wrapping key must be a `CKK_DES2` or `CKK_DES3` key with its `CKA_WRAP` attribute set to `TRUE`. The key to wrap must be an RSA private key with `CKA_EXTRACTABLE` set to `TRUE` and the FPV must have `FPV_WRAPPING_TOKEN` turned on.

The details of the wrapping format are specified with a format descriptor. The format descriptor is provided as the mechanism parameter to the `CKM_DES3_ECB` mechanism. This descriptor consists of a 32-bit format version, followed by a set of field element descriptors. Each field element descriptor consists of a 32-bit Field Type Identifier and optionally some additional data. The SafeNet firmware parses the set of field element descriptors and builds the custom layout of the RSA private key in an internal buffer. Once all field element descriptors are processed, the buffer is wrapped with 3-DES and passed out to the calling application. It is the responsibility of the calling application to ensure that the buffer is a multiple of 8 bytes.

The format descriptor version (the first 32-bit value in the format data) must always be set to zero.

The set of supported field element descriptor constants is as follows:

- > #define KM\_APPEND\_STRING 0x00000000
- > #define KM\_APPEND\_ATTRIBUTE 0x00000001
- > #define KM\_APPEND\_REVERSED\_ATTRIBUTE 0x00000002
- > #define KM\_APPEND\_RFC1423\_PADDING 0x00000010
- > #define KM\_APPEND\_ZERO\_PADDING 0x00000011
- > #define KM\_APPEND\_ZERO\_WORD\_PADDING 0x00000012
- > #define KM\_APPEND\_INV\_XOR\_CHECKSUM 0x00000020
- > #define KM\_DEFINE\_IV\_FOR\_CBC 0x00000030

The meanings of the field element descriptors is as follows:

Field element descriptor	Description
KM_APPEND_STRING	<p>Appends an arbitrary string of bytes to the custom layout buffer.</p> <p>The field type identifier is followed by a 32-bit length field defining the number of bytes to append. The length field is followed by the bytes to append.</p> <p>There is no restriction of the length of data that may be appended, as long as the total buffer length does not exceed 3072 bytes.</p>
KM_APPEND_ATTRIBUTE	<p>Appends an RSA private key component into the buffer in big endian representation.</p> <p>The field type identifier is followed by a 32-bit CK_ATTRIBUTE_TYPE value set to one of the following: CKA_PRIVATE_EXPONENT, CKA_PRIME_1, CKA_PRIME_2, CKA_EXPONENT_1, CKA_EXPONENT_2, or CKA_COEFFICIENT..</p> <p>The key component is padded with leading zeros such that the length is equal to the modulus length in the case of the private exponent, or equal to half of the modulus length in the case of the other 5 components.</p>
KM_APPEND_REVERSED_ATTRIBUTE	<p>Appends an RSA private key component into the buffer in little endian representation.</p> <p>The field type identifier is followed by a 32-bit CK_ATTRIBUTE_TYPE value set to one of the following: CKA_PRIVATE_EXPONENT, CKA_PRIME_1, CKA_PRIME_2, CKA_EXPONENT_1, CKA_EXPONENT_2, or CKA_COEFFICIENT.</p> <p>The key component is padded with trailing zeros such that the length is equal to the modulus length in the case of the private exponent, or equal to half of the modulus length in the case of the other 5 components.</p>
KM_APPEND_RFC1423_PADDING	<p>Applies RFC 1423 padding to the buffer (appends 1 to 8 bytes with values equal to the number of bytes, such that the total buffer length becomes a multiple of 8).</p> <p>This would typically be the last formatting element in a set, but this is not enforced.</p>
KM_APPEND_ZERO_PADDING	<p>Applies Zero padding to the buffer (appends 0 to 7 bytes with values equal to Zero, such that the total buffer length becomes a multiple of 8).</p> <p>This would typically be the last formatting element in a set, but this is not enforced.</p>



Field element descriptor	Description
KM_APPEND_ZERO_WORD_PADDING	Zero pads the buffer to the next 32-bit word boundary.
KM_APPEND_INV_XOR_CHECKSUM	Calculates and adds a checksum byte to the buffer. The checksum is calculated as the complement of the bitwise XOR of the buffer being built.
KM_DEFINE_IV_FOR_CBC	Allows definition of an IV so that 3DES_CBC wrapping can be performed even though the functionality is invoked with the CKM_3DES_ECB mechanism. The field type identifier is followed by a 32-bit length field, which must be set to 8. The length is followed by exactly 8 bytes of data which are used as the IV for the wrapping operation.

## Examples

To wrap just the private exponent of an RSA key in big endian representation, the parameters would appear as follows:

**NOTE** Ensure that the packing alignment for your structures uses one (1) byte boundaries.

```
struct
{
  UInt32 version = 0;
  UInt32 elementType = KM_APPEND_ATTRIBUTE;
  CK_ATTRIBUTE_TYPE attribute = CKA_PRIVATE_EXPONENT;
}
```

To wrap the set of RSA key components Prime1, Prime2, Coefficient, Exponent1, Exponent2 in little endian representation with a leading byte of 0x05 and ending with a CRC byte and then zero padding, the parameters would appear in a packed structure as follows:

```
struct
{
  UInt32 version = 0;
  UInt32 elementType1 = KM_APPEND_STRING;
  UInt32 length = 1;
  UInt8 byteValue = 5;
  UInt32 elementType2 = KM_APPEND_REVERSED_ATTRIBUTE;
  CK_ATTRIBUTE_TYPE attribute1 = CKA_PRIME_1;
  UInt32 elementType3 = KM_APPEND_REVERSED_ATTRIBUTE;
  CK_ATTRIBUTE_TYPE attribute2 = CKA_PRIME_2;
  UInt32 elementType4 = KM_APPEND_REVERSED_ATTRIBUTE;
  CK_ATTRIBUTE_TYPE attribute3 = CKA_COEFFICIENT;
  UInt32 elementType5 = KM_APPEND_REVERSED_ATTRIBUTE;
  CK_ATTRIBUTE_TYPE attribute4 = CKA_EXPONENT_1;
  UInt32 elementType6 = KM_APPEND_REVERSED_ATTRIBUTE;
  CK_ATTRIBUTE_TYPE attribute5 = CKA_EXPONENT_2;
  UInt32 elementType7 = KM_APPEND_INV_XOR_CHECKSUM;
  UInt32 elementType8 = KM_APPEND_ZERO_PADDING;
```

}

## Derivation of Symmetric Keys with 3DES\_ECB

SafeNet supports derivation of symmetric keys by the encryption of "diversification data" with a base key. Access to the derivation functionality is through the PKCS #11 C\_DeriveKey function with the CKM\_DES3\_ECB and CKM\_DES\_ECB mechanism. Diversification data is provided as the mechanism parameter. The derived key can be any type of symmetric key. The encrypted data forms the CKA\_VALUE attribute of the derived key. A template provided as a parameter to the C\_DeriveKey function defines all other attributes.

Rules for the derivation are as follows:

- > The Base Key must be of type CKK\_DES2 or CKK\_DES3 when using CKM\_DES3\_ECB. It must be of type CKK\_DES when using CKM\_DES\_ECB.
- > The base key must have its CKA\_DERIVE attribute set to TRUE.
- > The template for the derived key must identify the key type (CKA\_KEY\_TYPE) and length (CKA\_VALUE\_LEN). The type and length must be compatible. The length can be omitted if the key type supports only one length. (E.g., If key type is CKK\_DES2, the length must either be explicitly defined as 16, or be omitted to allow the value to default to 16). Other attributes in the template must be consistent with the security policy settings of the SafeNet Luna Network HSM.
- > The derivation mechanism must be set to CKM\_DES3\_ECB or CKM\_DES\_ECB, the mechanism parameter pointer must point to the diversification data, and the mechanism parameter length must be set to the diversification data length.
- > The diversification data must be the same length as the key to be derived, with one exception. If the key to be derived is 16 bytes, the base key is CKK\_DES2 and the diversification data is only 8 bytes, then the data is encrypted twice - once with the base key and once with the base key with its halves reversed. Joining the two encrypted pieces forms the derived key.
- > If the derived key is of type CKK\_DES, CKK\_DES2 or CKK\_DES3, odd key parity is applied to the new key value immediately following the encryption of the diversification data. The encrypted data is taken as-is for the formation of all other types of symmetric keys.

## PKCS#11 Extension HA Status Call

A SafeNet extension to the PKCS#11 standard allows query of the HA group state.

### Function Definition

```
CK_RV CK_ENTRY CA_GethASState( CK_SLOT_ID slotId, CK_HA_STATE_PTR pState );
```

The structure definitions for a CK\_HA\_STATE\_PTR and CK\_HA\_MEMBER are:

```
typedef struct CK_HA_MEMBER{
CK_ULONG memberSerial;
CK_RV memberStatus;
}CK_HA_MEMBER;

typedef struct CK_HA_STATUS{
CK_ULONG groupSerial;
CK_HA_MEMBER memberList[CK_HA_MAX_MEMBERS];
CK_USHORT listSize;
```

```
}CK_HA_STATUS;
```

See the JavaDocs included with the software for a description of the Java methods derived from this cryptoki function.

## Pseudorandom Function KDF Mechanisms

The SafeNet Luna Network HSMs support the following two vendor defined mechanisms. They can be used to perform Counter Mode KDF (key derivation functions) using various CMAC algorithms (DES3, AES, ARIA, SEED) as the PRF (pseudo-random function). See NIST SP 800-108.

```
#define CKM_NIST_PRF_KDF                (CKM_VENDOR_DEFINED + 0xA02)
#define CKM_PRF_KDF                    (CKM_VENDOR_DEFINED + 0xA03)

/* Parameter and values used with CKM_PRF_KDF and * CKM_NIST_PRF_KDF. */

typedef CK_ULONG CK_KDF_PRF_TYPE;
typedef CK_ULONG CK_KDF_PRF_ENCODING_SCHEME;

/** PRF KDF types */
#define CK_NIST_PRF_KDF_DES3_CMAC      0x00000001
#define CK_NIST_PRF_KDF_AES_CMAC      0x00000002
#define CK_PRF_KDF_ARIA_CMAC          0x00000003
#define CK_PRF_KDF_SEED_CMAC          0x00000004

#define LUNA_PRF_KDF_ENCODING_SCHEME_1 0x00000000
#define LUNA_PRF_KDF_ENCODING_SCHEME_2 0x00000001

typedef struct CK_KDF_PRF_PARAMS {
    CK_KDF_PRF_TYPE      prfType;
    CK_BYTE_PTR          pLabel;
    CK_ULONG             ulLabelLen;
    CK_BYTE_PTR          pContext;
    CK_ULONG             ulContextLen;
    CK_ULONG             ulCounter;
    CK_KDF_PRF_ENCODING_SCHEME ulEncodingScheme;
} CK_PRF_KDF_PARAMS;

typedef CK_PRF_KDF_PARAMS CK_PTR CK_KDF_PRF_PARAMS_PTR;
```

## Derive Template

The CKA\_DERIVE\_TEMPLATE attribute is an optional extension to the C\_DeriveKey function. This attribute points to an array template which provides additional security by restricting important attributes in the resulting derived key. This derive template, along with the user-supplied application template (called pTemplate in the PKCS#11 specification), determine the attributes of the derived key.

To invoke a derive template, the base key must have the CKA\_DERIVE\_TEMPLATE attribute set, pointing to a user-supplied derive template. When you specify this attribute on the base key and then attempt to derive a key, the derive operation adds the attributes of the application template to the attributes in the derive template. If there are any mismatches between attribute values specified in the two templates, the derive operation fails. Otherwise, the operation succeeds, producing a derived key with the combined attributes of the two templates.


Any and all attributes which are valid for application template of a particular mechanism are also valid for the derive template. For security, the most effective attributes to restrict are those which might allow the derived key to be misused or expose secret information. Broadly these include but are not limited to encryption/decryption capabilities, extractability, the CKA\_SENSITIVE attribute and the CKA\_MODIFIABLE attribute. All mechanisms which support key derivation also support derive templates.

## Examples

The following examples show a successful derivation with a derive template, and a failed derivation.


### Successful Derivation

Here, the base key has the CKA\_DERIVE\_TEMPLATE attribute pointing to the derive template dTmplt. There are no conflicts between dTmplt and the application template. The application template's extra attributes are added to dTmplt's attributes, and the derivation operation produces a derived key containing the attributes in the two templates.

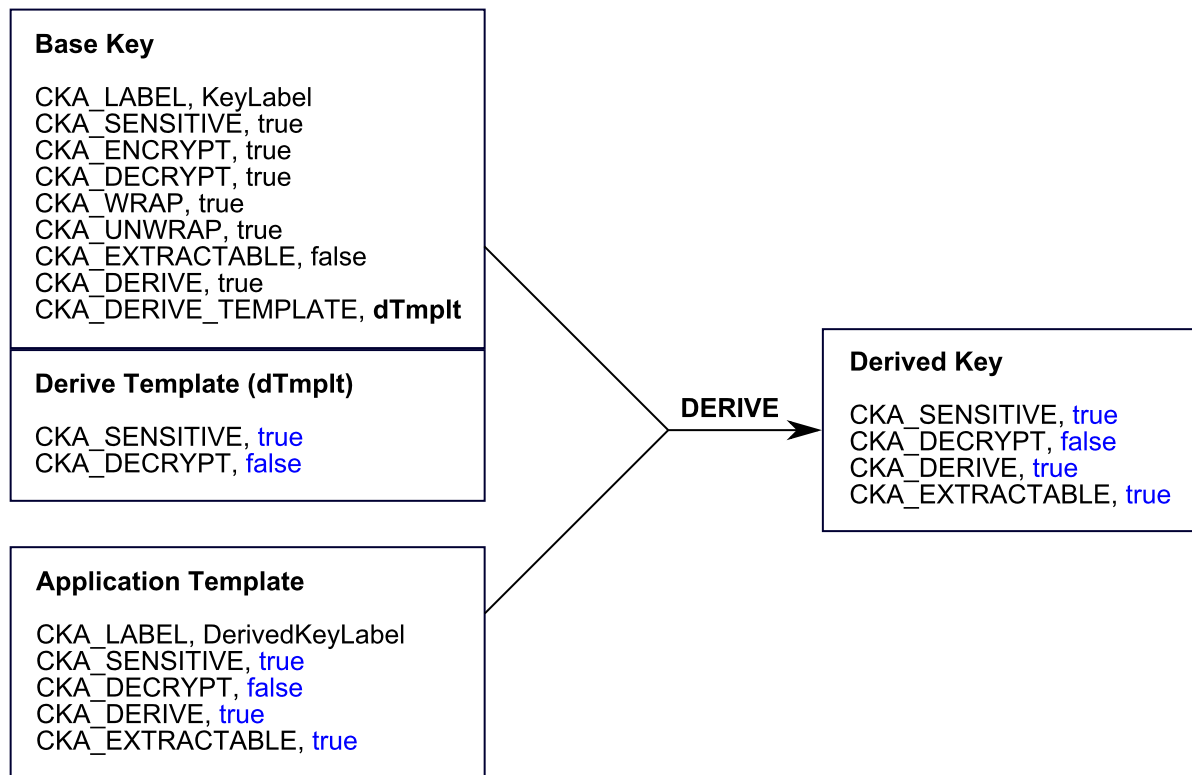

### Failed Derivation

Here, the base key has the CKA\_DERIVE\_TEMPLATE attribute pointing to the derive template dTmplt. Notice that dTmplt has the CKA\_DECRYPT attribute set to false, where the application template has the CKA\_DECRYPT attribute set to true. This conflict causes the derivation operation to fail with the error TEMPLATE\_INCONSISTENT.

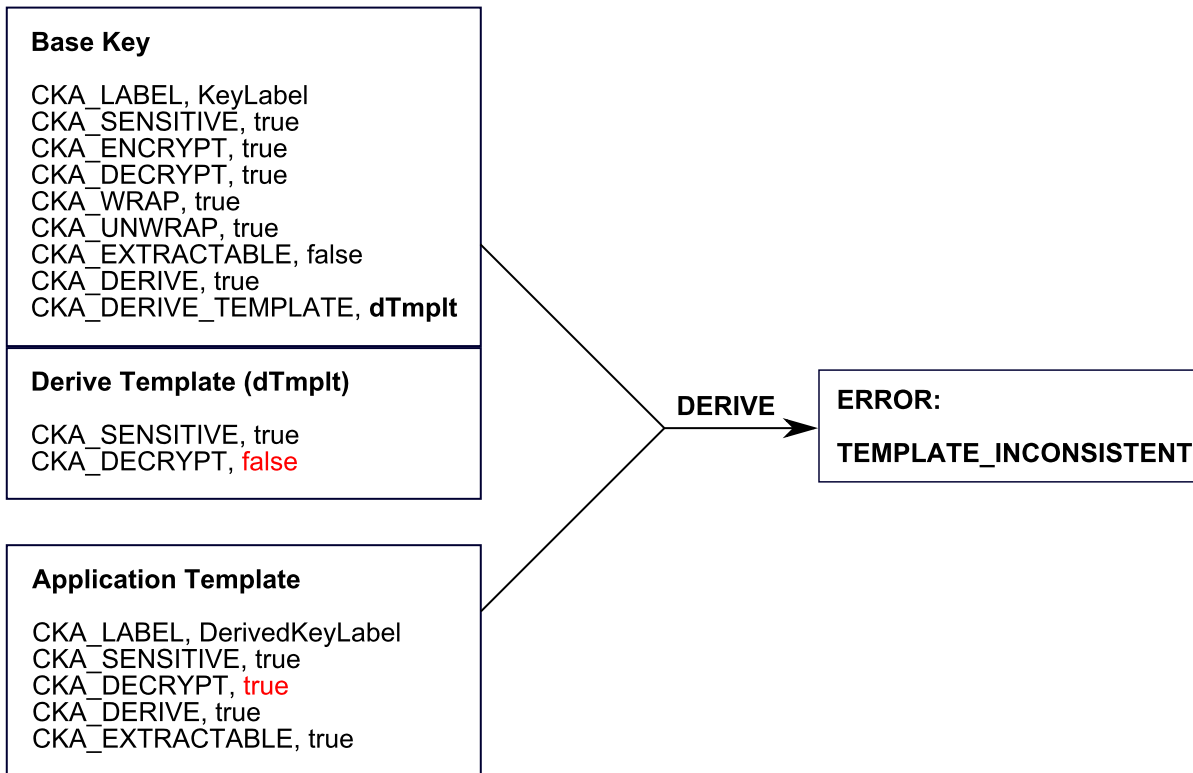

# CHAPTER 4: Supported Mechanisms

This chapter provides an alphabetical listing of the supported PKCS#11 standard mechanisms and SafeNet proprietary mechanisms supported in firmware <FirmwareVersion>.

If you are using RSA keys in FIPS mode, refer to "[Mechanism Remap for FIPS Compliance](#)" below for information about remapping your mechanisms to maintain FIPS compliance.

## Mechanism Remap for FIPS Compliance

Under FIPS 186-3/4, the only RSA methods permitted for generating keys are 186-3 with primes and 186-3 with aux primes. This means that RSA PKCS and X9.31 key generation is no longer approved for operation in a FIPS-compliant HSM.

Supported Mechanisms	FIPS-mode Allowed Mechanisms
PKCS, X9.31, 186-3 with primes, 186-3 with aux primes	186-3 with primes, 186-3 with aux primes

## Mechanism Remap Configuration Settings

Two configuration settings are available in the `Chrystoki.conf` (Linux/UNIX) or `Chrystoki.ini` (Windows) configuration file installed with SafeNet Luna Network HSM Client, to deal with calls to newer-firmware HSMs for outdated mechanisms, or calls to older-firmware HSMs for newer mechanisms that they do not support. The configuration settings control redirecting or mapping of mechanism calls.

### In FIPS mode

#### When `RSAKeyGenMechRemap` is enabled:

1. `CKM_RSA_PKCS_KEY_PAIR_GEN` is inserted into the `C_GetMechanismList` output by the client library, as the HSM does not return it in FIPS mode.
2. `C_GetMechanismInfo` for `CKM_RSA_PKCS_KEY_PAIR_GEN` returns the default Mechanism information from the client library. In FIPS mode, the HSM does not return it.

#### When `RSAKeyGenMechRemap` is disabled:

1. `CKM_RSA_PKCS_KEY_PAIR_GEN` is not returned by `C_GetMechanismList`.
2. `C_GetMechanismInfo` for `CKM_RSA_PKCS_KEY_PAIR_GEN` results in an Invalid Mechanism Attribute error.

## CKM\_AES\_CBC

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Encrypt   Decrypt   Wrap   Unwrap
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	256
<b>Block size</b>	16
<b>Digest size</b>	0
<b>Key types</b>	AES
<b>Algorithms</b>	AES
<b>Modes</b>	CBC
<b>Flags</b>	Extractable

## CKM\_AES\_CBC\_ENCRYPT\_DATA

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Derive
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	256
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	AES
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None



## CKM\_AES\_CBC\_PAD

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Encrypt   Decrypt   Wrap   Unwrap
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	256
<b>Block size</b>	16
<b>Digest size</b>	0
<b>Key types</b>	AES
<b>Algorithms</b>	AES
<b>Modes</b>	CBC_PAD
<b>Flags</b>	Extractable

## CKM\_AES\_CBC\_PAD\_IPSEC

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Encrypt   Decrypt   Wrap   Unwrap
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	256
<b>Block size</b>	16
<b>Digest size</b>	0
<b>Key types</b>	AES
<b>Algorithms</b>	AES
<b>Modes</b>	CBC_PAD_IPSEC
<b>Flags</b>	Extractable

## CKM\_AES\_CFB8

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Encrypt   Decrypt
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	256
<b>Block size</b>	16
<b>Digest size</b>	1
<b>Key types</b>	AES
<b>Algorithms</b>	AES
<b>Modes</b>	CFB
<b>Flags</b>	Extractable

## CKM\_AES\_CFB128

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Encrypt   Decrypt
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	256
<b>Block size</b>	16
<b>Digest size</b>	16
<b>Key types</b>	AES
<b>Algorithms</b>	AES
<b>Modes</b>	CFB
<b>Flags</b>	Extractable

## CKM\_AES\_CMACH

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	256
<b>Block size</b>	16
<b>Digest size</b>	0
<b>Key types</b>	AES
<b>Algorithms</b>	AES
<b>Modes</b>	MAC
<b>Flags</b>	Extractable   CMACH

## CKM\_AES\_CTR

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Encrypt   Decrypt   Wrap   Unwrap
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	256
<b>Block size</b>	16
<b>Digest size</b>	0
<b>Key types</b>	AES
<b>Algorithms</b>	AES
<b>Modes</b>	CTR
<b>Flags</b>	Extractable

## CKM\_AES\_ECB

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Encrypt   Decrypt   Wrap   Unwrap
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	256
<b>Block size</b>	16
<b>Digest size</b>	0
<b>Key types</b>	AES
<b>Algorithms</b>	AES
<b>Modes</b>	ECB
<b>Flags</b>	Extractable

## CKM\_AES\_ECB\_ENCRYPT\_DATA

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Derive
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	256
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	AES
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None



## CKM\_AES\_GCM

GCM is the Galois/Counter Mode of operation of the AES algorithm for symmetric key encryption.

### Usage Notes

#### Data size

The maximum allowed data size for this mechanism is 64KB (64 \* 1024).

#### Initialization Vector (IV)

Random initialization vector (IV) is supported and recommended for GCM and for GMAC. In FIPS mode, the HSM firmware does not accept the IV parameter, and instead returns a generated IV.

The internal IV is a randomly generated 16-byte IV.

#### JCPROV

AES-GMAC and AES-GCM are supported in JCPROV. Use CK\_AES\_CMAC\_PARAMS.java to define the GMAC operation. Implementation is the same as for PKCS#11.

#### Accumulating data

Our GMAC and GCM are single part operations, so even if they are called using multi-part API, we accumulate the data (up to a maximum) and return data only on the “final” operation. That is the meaning of “Accumulating” in the table, below.

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Encrypt   Decrypt
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	256
<b>Block size</b>	16
<b>Digest size</b>	0
<b>Key types</b>	AES
<b>Algorithms</b>	AES

---

<b>Modes</b>	GCM
<b>Flags</b>	Extractable   Accumulating

## CKM\_AES\_GMAC

GCM is the Galois/Counter Mode of operation of the AES algorithm for symmetric key encryption.

GMAC is a variant of GCM for sign/verify operation. If GCM input is confined to data that will not be encrypted, then GMAC is purely an authentication mode on the input data. The SafeNet Luna Network HSM GMAC implementation, formerly invoked only via PKCS#11 interface, can now be accessed via JC PROV and via our Java Provider (see Notes, below).

The GMAC implementation follows NIST SP-800-38D. It supports AES symmetric key sizes of 128, 192, and 256 bits.

### Usage Notes

#### Initialization Vector (IV)

If the HSM is in FIPS mode (see HSM policy 12 at [HSM Capabilities and Policies](#)), the initialization vector (IV) is generated in the HSM and returned to the PKCS#11 function call. The buffer must be large enough to store the GMAC tag plus the generated IV (which has a length of 16 bytes).

If the HSM is **not** in FIPS mode, then the developer is responsible to specify an IV. Random IV is supported and recommended for GCM and GMAC. If you are not using random IV, then the most efficient IV value length is 12 bytes; any other size reduces performance and requires more work (per NIST SP-800-38D).

The internal IV is a randomly generated 16-byte IV.

#### Performance

For authentication, it is possible to use CKM\_AES\_GCM mechanism, when passing no data to encrypt (for strict compliance with NIST specification), and performance in that mode is better than in previous SafeNet releases.

The correlation is not exact but, as a general rule for a given mechanism, invocation by PKCS#11 API always provides the best performance, JSP performance is close but lower due to Java architecture, and JC PROV performance is somewhat lower still than PKCS#11 and JSP performance levels.

#### JC PROV

AES-GMAC and AES-GCM are supported in JC PROV. Use CK\_AES\_CM MAC\_PARAMS.java to define the GMAC operation. Implementation is the same as for PKCS#11.

#### Java Provider (JSP)

Both GMC and GMAC are supported. "GmacAesDemo.java" provides a sample for using GMAC with Java.

Java Parameter Specification class LunaGmacParameterSpec.java defines default values recommended by the NIST specification.

#### Accumulating Data

Our GMAC and GCM are single part operations, so even if they are called using multi-part API, we accumulate the data (up to a maximum) and return data only on the "final" operation. That is the meaning of "Accumulating" in the table, below.

## Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	256
<b>Block size</b>	16
<b>Digest size</b>	0
<b>Key types</b>	AES
<b>Algorithms</b>	AES
<b>Modes</b>	GCM
<b>Flags</b>	Extractable   Accumulating

## CKM\_AES\_KEY\_GEN

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Generate Key
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	256
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	AES
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_AES\_KW

NIST Special Publication 800-38F describes cryptographic methods that are approved for “key wrapping,” that is, the protection of the confidentiality and integrity of cryptographic keys. In addition to describing existing methods, that publication specifies two new, deterministic authenticated-encryption modes of operation of the Advanced Encryption Standard (AES) algorithm: the AES Key Wrap (KW) mode and the AES Key Wrap With Padding (KWP) mode. Gemalto's SafeNet Luna Network HSMs implement the AES Key Wrap (KW) mode at this time, which SP800-38F recommends as more secure than CKM\_AES\_CBC.

**NOTE** NIST Special Publication 800-38F recommends this method as more secure than CKM\_AES\_CBC.

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Encrypt   Decrypt   Wrap   Unwrap
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	256
<b>Block size</b>	8
<b>Digest size</b>	0
<b>Key types</b>	AES
<b>Algorithms</b>	AES
<b>Modes</b>	KEYWRAP
<b>Flags</b>	Extractable   Accumulating

## CKM\_AES\_KWP

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Encrypt   Decrypt   Wrap   Unwrap
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	256
<b>Block size</b>	8
<b>Digest size</b>	0
<b>Key types</b>	AES
<b>Algorithms</b>	AES
<b>Modes</b>	KEYWRAP_PAD
<b>Flags</b>	Extractable   Accumulating

## CKM\_AES\_MAC

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	256
<b>Block size</b>	16
<b>Digest size</b>	0
<b>Key types</b>	AES
<b>Algorithms</b>	AES
<b>Modes</b>	MAC
<b>Flags</b>	Extractable



## CKM\_AES\_OFB

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Encrypt   Decrypt
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	256
<b>Block size</b>	16
<b>Digest size</b>	0
<b>Key types</b>	AES
<b>Algorithms</b>	AES
<b>Modes</b>	OFB
<b>Flags</b>	Extractable

## CKM\_AES\_XTS

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Encrypt   Decrypt
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	256
<b>Block size</b>	16
<b>Digest size</b>	0
<b>Key types</b>	AES
<b>Algorithms</b>	AES
<b>Modes</b>	XTS
<b>Flags</b>	Extractable

## CKM\_ARIA\_CBC

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Encrypt   Decrypt   Wrap   Unwrap
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	256
<b>Block size</b>	16
<b>Digest size</b>	0
<b>Key types</b>	ARIA
<b>Algorithms</b>	ARIA
<b>Modes</b>	CBC
<b>Flags</b>	Extractable

## CKM\_ARIA\_CBC\_ENCRYPT\_DATA

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Derive
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	256
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	ARIA
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_ARIA\_CBC\_PAD

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Encrypt   Decrypt   Wrap   Unwrap
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	256
<b>Block size</b>	16
<b>Digest size</b>	0
<b>Key types</b>	ARIA
<b>Algorithms</b>	ARIA
<b>Modes</b>	CBC_PAD
<b>Flags</b>	Extractable

## CKM\_ARIA\_CFB8

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Encrypt   Decrypt
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	256
<b>Block size</b>	16
<b>Digest size</b>	1
<b>Key types</b>	ARIA
<b>Algorithms</b>	ARIA
<b>Modes</b>	CFB
<b>Flags</b>	Extractable

## CKM\_ARIA\_CFB128

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Encrypt   Decrypt
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	256
<b>Block size</b>	16
<b>Digest size</b>	16
<b>Key types</b>	ARIA
<b>Algorithms</b>	ARIA
<b>Modes</b>	CFB
<b>Flags</b>	Extractable

## CKM\_ARIA\_CMAC

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	256
<b>Block size</b>	16
<b>Digest size</b>	0
<b>Key types</b>	ARIA
<b>Algorithms</b>	ARIA
<b>Modes</b>	MAC
<b>Flags</b>	Extractable   CMAC



## CKM\_ARIA\_CTR

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Encrypt   Decrypt
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	256
<b>Block size</b>	16
<b>Digest size</b>	0
<b>Key types</b>	ARIA
<b>Algorithms</b>	ARIA
<b>Modes</b>	CTR
<b>Flags</b>	Extractable

## CKM\_ARIA\_ECB

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Encrypt   Decrypt   Wrap   Unwrap
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	256
<b>Block size</b>	16
<b>Digest size</b>	0
<b>Key types</b>	ARIA
<b>Algorithms</b>	ARIA
<b>Modes</b>	ECB
<b>Flags</b>	Extractable

## CKM\_ARIA\_ECB\_ENCRYPT\_DATA

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Derive
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	256
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	ARIA
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_ARIA\_KEY\_GEN

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Generate Key
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	256
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	ARIA
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_ARIA\_L\_CBC

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Decrypt   Unwrap
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	256
<b>Block size</b>	16
<b>Digest size</b>	0
<b>Key types</b>	ARIA
<b>Algorithms</b>	ARIA
<b>Modes</b>	CBC
<b>Flags</b>	Extractable

## CKM\_ARIA\_L\_CBC\_PAD

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Decrypt   Unwrap
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	256
<b>Block size</b>	16
<b>Digest size</b>	0
<b>Key types</b>	ARIA
<b>Algorithms</b>	ARIA
<b>Modes</b>	CBC_PAD
<b>Flags</b>	Extractable

## CKM\_ARIA\_L\_ECB

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Decrypt   Unwrap
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	256
<b>Block size</b>	16
<b>Digest size</b>	0
<b>Key types</b>	ARIA
<b>Algorithms</b>	ARIA
<b>Modes</b>	ECB
<b>Flags</b>	Extractable

## CKM\_ARIA\_L\_MAC

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Verify
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	256
<b>Block size</b>	16
<b>Digest size</b>	0
<b>Key types</b>	ARIA
<b>Algorithms</b>	ARIA
<b>Modes</b>	MAC
<b>Flags</b>	Extractable



## CKM\_ARIA\_MAC

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	256
<b>Block size</b>	16
<b>Digest size</b>	0
<b>Key types</b>	ARIA
<b>Algorithms</b>	ARIA
<b>Modes</b>	MAC
<b>Flags</b>	Extractable

## CKM\_ARIA\_OFB

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Encrypt   Decrypt
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	256
<b>Block size</b>	16
<b>Digest size</b>	0
<b>Key types</b>	ARIA
<b>Algorithms</b>	ARIA
<b>Modes</b>	OFB
<b>Flags</b>	Extractable

## CKM\_BIP32\_CHILD\_DERIVE

This mechanism is used to derive child keys from a parent key, and can generate both the private and public part of the key pair, accepting a BIP32 public or private key as input.

Cloning (or backup) of BIP32 keys can be performed only between PCIe and/or Network HSMs containing firmware versions that support BIP32.

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Derive
<b>Minimum key length (bits)</b>	256
<b>Minimum key length for FIPS use (bits)</b>	256
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	256
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	BIP32
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	Extractable

## CKM\_BIP32\_MASTER\_DERIVE

This mechanism is used to derive the master key pair from a seed. The input key must have the type `CKK_GENERIC_SECRET` (size between 128 and 512 bits).

Only curve `secp256k1` is supported. Key type `CKK_BIP32` is introduced; existing ECDSA keys cannot be used with the BIP32 mechanisms. All mechanisms supported by ECDSA keys are supported for BIP32 keys.

Cloning (or backup) of BIP32 keys can be performed only between PCIe and/or Network HSMs containing firmware versions that support BIP32.

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Derive
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	512
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	GENERIC_SECRET
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	Extractable

## CKM\_CAST3\_CBC

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Encrypt   Decrypt   Wrap   Unwrap
<b>Minimum key length (bits)</b>	64
<b>Minimum key length for FIPS use (bits)</b>	64
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	64
<b>Block size</b>	8
<b>Digest size</b>	0
<b>Key types</b>	CAST3
<b>Algorithms</b>	CAST3
<b>Modes</b>	CBC
<b>Flags</b>	Extractable

## CKM\_CAST3\_CBC\_PAD

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Encrypt   Decrypt   Wrap   Unwrap
<b>Minimum key length (bits)</b>	64
<b>Minimum key length for FIPS use (bits)</b>	64
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	64
<b>Block size</b>	8
<b>Digest size</b>	0
<b>Key types</b>	CAST3
<b>Algorithms</b>	CAST3
<b>Modes</b>	CBC_PAD
<b>Flags</b>	Extractable

## CKM\_CAST3\_ECB

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Encrypt   Decrypt   Wrap   Unwrap
<b>Minimum key length (bits)</b>	64
<b>Minimum key length for FIPS use (bits)</b>	64
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	64
<b>Block size</b>	8
<b>Digest size</b>	0
<b>Key types</b>	CAST3
<b>Algorithms</b>	CAST3
<b>Modes</b>	ECB
<b>Flags</b>	Extractable

## CKM\_CAST3\_KEY\_GEN

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Generate Key
<b>Minimum key length (bits)</b>	64
<b>Minimum key length for FIPS use (bits)</b>	64
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	64
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	CAST3
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None



## CKM\_CAST3\_MAC

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	64
<b>Minimum key length for FIPS use (bits)</b>	64
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	64
<b>Block size</b>	8
<b>Digest size</b>	0
<b>Key types</b>	CAST3
<b>Algorithms</b>	CAST3
<b>Modes</b>	MAC
<b>Flags</b>	Extractable

## CKM\_CAST5\_CBC

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Encrypt   Decrypt   Wrap   Unwrap
<b>Minimum key length (bits)</b>	64
<b>Minimum key length for FIPS use (bits)</b>	64
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	128
<b>Block size</b>	8
<b>Digest size</b>	0
<b>Key types</b>	CAST5
<b>Algorithms</b>	CAST5
<b>Modes</b>	CBC
<b>Flags</b>	Extractable

## CKM\_CAST5\_CBC\_PAD

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Encrypt   Decrypt   Wrap   Unwrap
<b>Minimum key length (bits)</b>	64
<b>Minimum key length for FIPS use (bits)</b>	64
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	128
<b>Block size</b>	8
<b>Digest size</b>	0
<b>Key types</b>	CAST5
<b>Algorithms</b>	CAST5
<b>Modes</b>	CBC_PAD
<b>Flags</b>	Extractable

## CKM\_CAST5\_ECB

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Encrypt   Decrypt   Wrap   Unwrap
<b>Minimum key length (bits)</b>	64
<b>Minimum key length for FIPS use (bits)</b>	64
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	128
<b>Block size</b>	8
<b>Digest size</b>	0
<b>Key types</b>	CAST5
<b>Algorithms</b>	CAST5
<b>Modes</b>	ECB
<b>Flags</b>	Extractable

## CKM\_CAST5\_KEY\_GEN

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Generate Key
<b>Minimum key length (bits)</b>	64
<b>Minimum key length for FIPS use (bits)</b>	64
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	128
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	CAST5
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_CAST5\_MAC

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	64
<b>Minimum key length for FIPS use (bits)</b>	64
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	128
<b>Block size</b>	8
<b>Digest size</b>	0
<b>Key types</b>	CAST5
<b>Algorithms</b>	CAST5
<b>Modes</b>	MAC
<b>Flags</b>	Extractable

## CKM\_DES\_CBC

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Encrypt   Decrypt   Wrap   Unwrap
<b>Minimum key length (bits)</b>	64
<b>Minimum key length for FIPS use (bits)</b>	64
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	64
<b>Block size</b>	8
<b>Digest size</b>	0
<b>Key types</b>	DES
<b>Algorithms</b>	DES
<b>Modes</b>	CBC
<b>Flags</b>	Extractable

## CKM\_DES\_CBC\_ENCRYPT\_DATA

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Derive
<b>Minimum key length (bits)</b>	64
<b>Minimum key length for FIPS use (bits)</b>	64
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	64
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	Symmetric
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None



## CKM\_DES\_CBC\_PAD

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Encrypt   Decrypt   Wrap   Unwrap
<b>Minimum key length (bits)</b>	64
<b>Minimum key length for FIPS use (bits)</b>	64
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	64
<b>Block size</b>	8
<b>Digest size</b>	0
<b>Key types</b>	DES
<b>Algorithms</b>	DES
<b>Modes</b>	CBC_PAD
<b>Flags</b>	Extractable

## CKM\_DES\_ECB

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Encrypt   Decrypt   Wrap   Unwrap
<b>Minimum key length (bits)</b>	64
<b>Minimum key length for FIPS use (bits)</b>	64
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	64
<b>Block size</b>	8
<b>Digest size</b>	0
<b>Key types</b>	DES
<b>Algorithms</b>	DES
<b>Modes</b>	ECB
<b>Flags</b>	Extractable

## CKM\_DES\_ECB\_ENCRYPT\_DATA

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Derive
<b>Minimum key length (bits)</b>	64
<b>Minimum key length for FIPS use (bits)</b>	64
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	64
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	Symmetric
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_DES\_KEY\_GEN

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Generate Key
<b>Minimum key length (bits)</b>	64
<b>Minimum key length for FIPS use (bits)</b>	64
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	64
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	DES
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_DES\_MAC

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	64
<b>Minimum key length for FIPS use (bits)</b>	64
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	64
<b>Block size</b>	8
<b>Digest size</b>	0
<b>Key types</b>	DES
<b>Algorithms</b>	DES
<b>Modes</b>	MAC
<b>Flags</b>	Extractable

## CKM\_DES2\_DUKPT\_DATA

The CKM\_DES2\_DUKPT family of key derive mechanisms create keys used to protect EFTPOS terminal sessions. The mechanisms implement the algorithm for server side DUKPT derivation as defined by ANSI X9.24 part 1.

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Derive
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	192
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	Symmetric
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

### Usage

This mechanism has the following attributes:

- > Only CKK\_DES2 keys can be derived. The mechanism will force the CKA\_KEY\_TYPE attribute of the derived object to equal CKK\_DES2. If the template does specify a CKA\_KEY\_TYPE attribute then it must be CKK\_DES2.
- > The mechanism takes a CK\_KEY\_DERIVATION\_STRING\_DATA structure as a parameter.
- > The pData field of the parameter must point to a 10 byte array which holds the 80 bit Key Sequence Number (KSN).
- > This mechanism contributes the CKA\_CLASS and CKA\_KEY\_TYPE and CKA\_VALUE to the resulting object.

The DUKPT MAC and DATA versions will default to the appropriate usage mechanism as described in the following table:

Mechanism	CKA_SIGN	CKA_VERIFY	CKA_DECRYPT	CKA_ENCRYPT
CKM_DES2_DUKPT_MAC	True	True		
CKM_DES2_DUKPT_MAC_RESP	True			
CKM_DES2_DUKPT_DATA			True	True
CKM_DES2_DUKPT_DATA_RESP				True

## Example

```
#define CKM_DES2_DUKPT_PIN                (CKM_VENDOR_DEFINED + 0x611)
#define CKM_DES2_DUKPT_MAC                (CKM_VENDOR_DEFINED + 0x612)
#define CKM_DES2_DUKPT_MAC_RESP           (CKM_VENDOR_DEFINED + 0x613)
#define CKM_DES2_DUKPT_DATA               (CKM_VENDOR_DEFINED + 0x614)
#define CKM_DES2_DUKPT_DATA_RESP          (CKM_VENDOR_DEFINED + 0x615)

CK_OBJECT_HANDLE hBDKey; // handle of CKK_DES2 or CKK_DES2 Base Derive Key
CK_OBJECT_HANDLE hMKey;  // handle of CKK_DES2 MAC session Key
CK_MECHANISM svMech = { CKM_DES3_X919_MAC , NULL, 0};

CK_KEY_DERIVATION_STRING_DATA param;
CK_MECHANISM kdMech = { CKM_DES2_DUKPT_MAC , NULL, 0};
CK_CHAR ksn[10];
CK_CHAR inp[any length];
CK_CHAR mac[4];
CK_SIZE len;

// Derive MAC verify session key
param.pData=ksn;
param.ulLen = 10;

kdMech.mechanism = CKM_DES2_DUKPT_MAC;
kdMech.pParameter = &param;
kdMech.ulParameterLen = sizeof parram;

C_DeriveKey(hSes, &kdMech, hBDKey , NULL, 0, &hMKey);

// Single part verify operation

C_VerifyInit(hSes, &svMech, hMKey);
len = sizeof mac;
C_Verify(hSes, inp, sizeof inp, mac, len);

// clean up

C_DestroyObject(hSes, hMKey);

// Test vectors
```

## CKM\_DES2\_DUKPT\_DATA\_RESP

The CKM\_DES2\_DUKPT family of key derive mechanisms create keys used to protect EFTPOS terminal sessions. The mechanisms implement the algorithm for server side DUKPT derivation as defined by ANSI X9.24 part 1.

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Derive
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	192
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	Symmetric
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

### Usage

This mechanism has the following attributes:

- > Only CKK\_DES2 keys can be derived. The mechanism will force the CKA\_KEY\_TYPE attribute of the derived object to equal CKK\_DES2. If the template does specify a CKA\_KEY\_TYPE attribute then it must be CKK\_DES2.
- > The mechanism takes a CK\_KEY\_DERIVATION\_STRING\_DATA structure as a parameter.
- > The pData field of the parameter must point to a 10 byte array which holds the 80 bit Key Sequence Number (KSN).
- > This mechanism contributes the CKA\_CLASS and CKA\_KEY\_TYPE and CKA\_VALUE to the resulting object.

The DUKPT MAC and DATA versions will default to the appropriate usage mechanism as described in the following table:



Mechanism	CKA_SIGN	CKA_VERIFY	CKA_DECRYPT	CKA_ENCRYPT
CKM_DES2_DUKPT_MAC	True	True		
CKM_DES2_DUKPT_MAC_RESP	True			
CKM_DES2_DUKPT_DATA			True	True
CKM_DES2_DUKPT_DATA_RESP				True

## Example

```
#define CKM_DES2_DUKPT_PIN                (CKM_VENDOR_DEFINED + 0x611)
#define CKM_DES2_DUKPT_MAC                (CKM_VENDOR_DEFINED + 0x612)
#define CKM_DES2_DUKPT_MAC_RESP           (CKM_VENDOR_DEFINED + 0x613)
#define CKM_DES2_DUKPT_DATA               (CKM_VENDOR_DEFINED + 0x614)
#define CKM_DES2_DUKPT_DATA_RESP          (CKM_VENDOR_DEFINED + 0x615)

CK_OBJECT_HANDLE hBDKey; // handle of CKK_DES2 or CKK_DES2 Base Derive Key
CK_OBJECT_HANDLE hMKey;  // handle of CKK_DES2 MAC session Key
CK_MECHANISM svMech = { CKM_DES3_X919_MAC , NULL, 0};

CK_KEY_DERIVATION_STRING_DATA param;
CK_MECHANISM kdMech = { CKM_DES2_DUKPT_MAC , NULL, 0};
CK_CHAR ksn[10];
CK_CHAR inp[any length];
CK_CHAR mac[4];
CK_SIZE len;

// Derive MAC verify session key
param.pData=ksn;
param.ulLen = 10;

kdMech.mechanism = CKM_DES2_DUKPT_MAC;
kdMech.pParameter = &param;
kdMech.ulParameterLen = sizeof parram;

C_DeriveKey(hSes, &kdMech, hBDKey , NULL, 0, &hMKey);

// Single part verify operation

C_VerifyInit(hSes, &svMech, hMKey);
len = sizeof mac;
C_Verify(hSes, inp, sizeof inp, mac, len);

// clean up

C_DestroyObject(hSes, hMKey);

// Test vectors
```

## CKM\_DES2\_DUKPT\_MAC

The CKM\_DES2\_DUKPT family of key derive mechanisms create keys used to protect EFTPOS terminal sessions. The mechanisms implement the algorithm for server side DUKPT derivation as defined by ANSI X9.24 part 1.

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Derive
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	192
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	Symmetric
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

### Usage

This mechanism has the following attributes:

- > Only CKK\_DES2 keys can be derived. The mechanism will force the CKA\_KEY\_TYPE attribute of the derived object to equal CKK\_DES2. If the template does specify a CKA\_KEY\_TYPE attribute then it must be CKK\_DES2.
- > The mechanism takes a CK\_KEY\_DERIVATION\_STRING\_DATA structure as a parameter.
- > The pData field of the parameter must point to a 10 byte array which holds the 80 bit Key Sequence Number (KSN).
- > This mechanism contributes the CKA\_CLASS and CKA\_KEY\_TYPE and CKA\_VALUE to the resulting object.

The DUKPT MAC and DATA versions will default to the appropriate usage mechanism as described in the following table:

Mechanism	CKA_SIGN	CKA_VERIFY	CKA_DECRYPT	CKA_ENCRYPT
CKM_DES2_DUKPT_MAC	True	True		
CKM_DES2_DUKPT_MAC_RESP	True			
CKM_DES2_DUKPT_DATA			True	True
CKM_DES2_DUKPT_DATA_RESP				True

## Example

```
#define CKM_DES2_DUKPT_PIN                (CKM_VENDOR_DEFINED + 0x611)
#define CKM_DES2_DUKPT_MAC                (CKM_VENDOR_DEFINED + 0x612)
#define CKM_DES2_DUKPT_MAC_RESP           (CKM_VENDOR_DEFINED + 0x613)
#define CKM_DES2_DUKPT_DATA               (CKM_VENDOR_DEFINED + 0x614)
#define CKM_DES2_DUKPT_DATA_RESP         (CKM_VENDOR_DEFINED + 0x615)

CK_OBJECT_HANDLE hBDKey; // handle of CKK_DES2 or CKK_DES2 Base Derive Key
CK_OBJECT_HANDLE hMKey;  // handle of CKK_DES2 MAC session Key
CK_MECHANISM svMech = { CKM_DES3_X919_MAC , NULL, 0};

CK_KEY_DERIVATION_STRING_DATA param;
CK_MECHANISM kdMech = { CKM_DES2_DUKPT_MAC , NULL, 0};
CK_CHAR ksn[10];
CK_CHAR inp[any length];
CK_CHAR mac[4];
CK_SIZE len;

// Derive MAC verify session key
param.pData=ksn;
param.ulLen = 10;

kdMech.mechanism = CKM_DES2_DUKPT_MAC;
kdMech.pParameter = &param;
kdMech.ulParameterLen = sizeof parram;

C_DeriveKey(hSes, &kdMech, hBDKey , NULL, 0, &hMKey);

// Single part verify operation

C_VerifyInit(hSes, &svMech, hMKey);
len = sizeof mac;
C_Verify(hSes, inp, sizeof inp, mac, len);

// clean up

C_DestroyObject(hSes, hMKey);

// Test vectors
```

## CKM\_DES2\_DUKPT\_MAC\_RESP

The CKM\_DES2\_DUKPT family of key derive mechanisms create keys used to protect EFTPOS terminal sessions. The mechanisms implement the algorithm for server side DUKPT derivation as defined by ANSI X9.24 part 1.

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Derive
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	192
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	Symmetric
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

### Usage

This mechanism has the following attributes:

- > Only CKK\_DES2 keys can be derived. The mechanism will force the CKA\_KEY\_TYPE attribute of the derived object to equal CKK\_DES2. If the template does specify a CKA\_KEY\_TYPE attribute then it must be CKK\_DES2.
- > The mechanism takes a CK\_KEY\_DERIVATION\_STRING\_DATA structure as a parameter.
- > The pData field of the parameter must point to a 10 byte array which holds the 80 bit Key Sequence Number (KSN).
- > This mechanism contributes the CKA\_CLASS and CKA\_KEY\_TYPE and CKA\_VALUE to the resulting object.

The DUKPT MAC and DATA versions will default to the appropriate usage mechanism as described in the following table:

Mechanism	CKA_SIGN	CKA_VERIFY	CKA_DECRYPT	CKA_ENCRYPT
CKM_DES2_DUKPT_MAC	True	True		
CKM_DES2_DUKPT_MAC_RESP	True			
CKM_DES2_DUKPT_DATA			True	True
CKM_DES2_DUKPT_DATA_RESP				True

## Example

```

#define CKM_DES2_DUKPT_PIN                (CKM_VENDOR_DEFINED + 0x611)
#define CKM_DES2_DUKPT_MAC                (CKM_VENDOR_DEFINED + 0x612)
#define CKM_DES2_DUKPT_MAC_RESP           (CKM_VENDOR_DEFINED + 0x613)
#define CKM_DES2_DUKPT_DATA               (CKM_VENDOR_DEFINED + 0x614)
#define CKM_DES2_DUKPT_DATA_RESP          (CKM_VENDOR_DEFINED + 0x615)

CK_OBJECT_HANDLE hBDKey; // handle of CKK_DES2 or CKK_DES2 Base Derive Key
CK_OBJECT_HANDLE hMKey;  // handle of CKK_DES2 MAC session Key
CK_MECHANISM svMech = { CKM_DES3_X919_MAC , NULL, 0};

CK_KEY_DERIVATION_STRING_DATA param;
CK_MECHANISM kdMech = { CKM_DES2_DUKPT_MAC , NULL, 0};
CK_CHAR ksn[10];
CK_CHAR inp[any length];
CK_CHAR mac[4];
CK_SIZE len;

// Derive MAC verify session key
param.pData=ksn;
param.ulLen = 10;

kdMech.mechanism = CKM_DES2_DUKPT_MAC;
kdMech.pParameter = &param;
kdMech.ulParameterLen = sizeof parram;

C_DeriveKey(hSes, &kdMech, hBDKey , NULL, 0, &hMKey);

// Single part verify operation

C_VerifyInit(hSes, &svMech, hMKey);
len = sizeof mac;
C_Verify(hSes, inp, sizeof inp, mac, len);

// clean up

C_DestroyObject(hSes, hMKey);

// Test vectors

```

## CKM\_DES2\_DUKPT\_PIN

The CKM\_DES2\_DUKPT family of key derive mechanisms create keys used to protect EFTPOS terminal sessions. The mechanisms implement the algorithm for server side DUKPT derivation as defined by ANSI X9.24 part 1.

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Derive
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	192
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	Symmetric
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

### Usage

This mechanism has the following attributes:

- > Only CKK\_DES2 keys can be derived. The mechanism will force the CKA\_KEY\_TYPE attribute of the derived object to equal CKK\_DES2. If the template does specify a CKA\_KEY\_TYPE attribute then it must be CKK\_DES2.
- > The mechanism takes a CK\_KEY\_DERIVATION\_STRING\_DATA structure as a parameter.
- > The pData field of the parameter must point to a 10 byte array which holds the 80 bit Key Sequence Number (KSN).
- > This mechanism contributes the CKA\_CLASS and CKA\_KEY\_TYPE and CKA\_VALUE to the resulting object.

The DUKPT MAC and DATA versions will default to the appropriate usage mechanism as described in the following table:

Mechanism	CKA_SIGN	CKA_VERIFY	CKA_DECRYPT	CKA_ENCRYPT
CKM_DES2_DUKPT_MAC	True	True		
CKM_DES2_DUKPT_MAC_RESP	True			
CKM_DES2_DUKPT_DATA			True	True
CKM_DES2_DUKPT_DATA_RESP				True

## Example

```
#define CKM_DES2_DUKPT_PIN                (CKM_VENDOR_DEFINED + 0x611)
#define CKM_DES2_DUKPT_MAC                (CKM_VENDOR_DEFINED + 0x612)
#define CKM_DES2_DUKPT_MAC_RESP           (CKM_VENDOR_DEFINED + 0x613)
#define CKM_DES2_DUKPT_DATA               (CKM_VENDOR_DEFINED + 0x614)
#define CKM_DES2_DUKPT_DATA_RESP          (CKM_VENDOR_DEFINED + 0x615)

CK_OBJECT_HANDLE hBDKey; // handle of CKK_DES2 or CKK_DES2 Base Derive Key
CK_OBJECT_HANDLE hMKey;  // handle of CKK_DES2 MAC session Key
CK_MECHANISM svMech = { CKM_DES3_X919_MAC , NULL, 0};

CK_KEY_DERIVATION_STRING_DATA param;
CK_MECHANISM kdMech = { CKM_DES2_DUKPT_MAC , NULL, 0};
CK_CHAR ksn[10];
CK_CHAR inp[any length];
CK_CHAR mac[4];
CK_SIZE len;

// Derive MAC verify session key
param.pData=ksn;
param.ulLen = 10;

kdMech.mechanism = CKM_DES2_DUKPT_MAC;
kdMech.pParameter = &param;
kdMech.ulParameterLen = sizeof parram;

C_DeriveKey(hSes, &kdMech, hBDKey , NULL, 0, &hMKey);

// Single part verify operation

C_VerifyInit(hSes, &svMech, hMKey);
len = sizeof mac;
C_Verify(hSes, inp, sizeof inp, mac, len);

// clean up

C_DestroyObject(hSes, hMKey);

// Test vectors
```

## CKM\_DES2\_KEY\_GEN

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Generate Key
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	128
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	DES2
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None



## CKM\_DES3\_CBC

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Encrypt   Decrypt   Wrap   Unwrap
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	192
<b>Minimum legacy key length for FIPS use (bits)</b>	128
<b>Maximum key length (bits)</b>	192
<b>Block size</b>	8
<b>Digest size</b>	0
<b>Key types</b>	DES3
<b>Algorithms</b>	DES3
<b>Modes</b>	CBC
<b>Flags</b>	Extractable

## CKM\_DES3\_CBC\_ENCRYPT\_DATA

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Derive
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	192
<b>Minimum legacy key length for FIPS use (bits)</b>	128
<b>Maximum key length (bits)</b>	192
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	Symmetric
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_DES3\_CBC\_PAD

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Encrypt   Decrypt   Wrap   Unwrap
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	192
<b>Minimum legacy key length for FIPS use (bits)</b>	128
<b>Maximum key length (bits)</b>	192
<b>Block size</b>	8
<b>Digest size</b>	0
<b>Key types</b>	DES3
<b>Algorithms</b>	DES3
<b>Modes</b>	CBC_PAD
<b>Flags</b>	Extractable

## CKM\_DES3\_CBC\_PAD\_IPSEC

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Encrypt   Decrypt   Wrap   Unwrap
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	192
<b>Minimum legacy key length for FIPS use (bits)</b>	128
<b>Maximum key length (bits)</b>	192
<b>Block size</b>	8
<b>Digest size</b>	0
<b>Key types</b>	DES3
<b>Algorithms</b>	DES3
<b>Modes</b>	CBC_PAD_IPSEC
<b>Flags</b>	Extractable

## CKM\_DES3\_CFB8

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Encrypt   Decrypt
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	192
<b>Minimum legacy key length for FIPS use (bits)</b>	128
<b>Maximum key length (bits)</b>	192
<b>Block size</b>	8
<b>Digest size</b>	1
<b>Key types</b>	DES3
<b>Algorithms</b>	DES3
<b>Modes</b>	CFB
<b>Flags</b>	Extractable

## CKM\_DES3\_CFB64

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Encrypt   Decrypt
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	192
<b>Minimum legacy key length for FIPS use (bits)</b>	128
<b>Maximum key length (bits)</b>	192
<b>Block size</b>	8
<b>Digest size</b>	8
<b>Key types</b>	DES3
<b>Algorithms</b>	DES3
<b>Modes</b>	CFB
<b>Flags</b>	Extractable

## CKM\_DES3\_CMAC

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	192
<b>Minimum legacy key length for FIPS use (bits)</b>	128
<b>Maximum key length (bits)</b>	192
<b>Block size</b>	8
<b>Digest size</b>	0
<b>Key types</b>	DES3
<b>Algorithms</b>	DES3
<b>Modes</b>	MAC
<b>Flags</b>	Extractable   CMAC

## CKM\_DES3\_CTR

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Encrypt   Decrypt   Wrap   Unwrap
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	192
<b>Minimum legacy key length for FIPS use (bits)</b>	128
<b>Maximum key length (bits)</b>	192
<b>Block size</b>	8
<b>Digest size</b>	0
<b>Key types</b>	DES3
<b>Algorithms</b>	DES3
<b>Modes</b>	CTR
<b>Flags</b>	Extractable



## CKM\_DES3\_ECB

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Encrypt   Decrypt   Wrap   Unwrap
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	192
<b>Minimum legacy key length for FIPS use (bits)</b>	128
<b>Maximum key length (bits)</b>	192
<b>Block size</b>	8
<b>Digest size</b>	0
<b>Key types</b>	DES3
<b>Algorithms</b>	DES3
<b>Modes</b>	ECB
<b>Flags</b>	Extractable

## CKM\_DES3\_ECB\_ENCRYPT\_DATA

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Derive
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	192
<b>Minimum legacy key length for FIPS use (bits)</b>	128
<b>Maximum key length (bits)</b>	192
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	Symmetric
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_DES3\_KEY\_GEN

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Generate Key
<b>Minimum key length (bits)</b>	192
<b>Minimum key length for FIPS use (bits)</b>	192
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	192
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	DES3
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_DES3\_MAC

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	192
<b>Minimum legacy key length for FIPS use (bits)</b>	128
<b>Maximum key length (bits)</b>	192
<b>Block size</b>	8
<b>Digest size</b>	0
<b>Key types</b>	DES3
<b>Algorithms</b>	DES3
<b>Modes</b>	MAC
<b>Flags</b>	Extractable

## CKM\_DES3\_OFB

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Encrypt   Decrypt
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	192
<b>Minimum legacy key length for FIPS use (bits)</b>	128
<b>Maximum key length (bits)</b>	192
<b>Block size</b>	8
<b>Digest size</b>	0
<b>Key types</b>	DES3
<b>Algorithms</b>	DES3
<b>Modes</b>	OFB
<b>Flags</b>	Extractable

## CKM\_DES3\_X919\_MAC

The CKM\_DES3\_X919\_MAC is a signature generation and verification mechanism, as defined ANSI X9.19-1996 Financial Institution Retail Message Authentication annex 1 Cipher Block Chaining Procedure.

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	192
<b>Minimum legacy key length for FIPS use (bits)</b>	128
<b>Maximum key length (bits)</b>	192
<b>Block size</b>	8
<b>Digest size</b>	0
<b>Key types</b>	DES3
<b>Algorithms</b>	DES3
<b>Modes</b>	MAC
<b>Flags</b>	Extractable

### Usage

The CKM\_DES3\_X919\_MAC mechanism is used with the **C\_VerifyInit** and **C\_SignInit** functions. It has the following attributes:

- > Only CKK\_DES2 and CKK\_DES3 keys are supported.
- > The mechanism takes no parameter.
- > Multi-part operation is supported.
- > The total input data length must be at least one byte.
- > The length of result is half the size of the DES block (i.e. 4 bytes).

### Example

```
#define CKM_DES3_X919_MAC (CKM_VENDOR_DEFINED + 0x150)

CK_OBJECT_HANDLE hKey; // handle of CKK_DES2 or CKK_DES3 key
CK_MECHANISM mech = { CKM_DES3_X919_MAC, NULL, 0};
```

```

CK_CHAR inp[any length];
CK_CHAR mac[4];
CK_SIZE len;

// Single-part operation

C_SignInit(hSes, &mech, hKey);
len = sizeof mac;
C_Sign(hSes, inp, sizeof inp, mac, &len);

// Multi-part operation

C_SignInit(hSes, &mech, hKey);
C_SignUpdate(hSes, inp, sizeof inp/2);
C_SignUpdate(hSes, inp+ (sizeof inp)/2, sizeof inp/2);
len = sizeof mac;
C_SignFinal(hSes, mac, &len);

// Test vectors

static const UInt8 retailKey[16] =
{
    0x58, 0x91, 0x25, 0x86, 0x3D, 0x46, 0x10, 0x7F,
    0x46, 0x3E, 0x52, 0x3B, 0xF7, 0x46, 0x9D, 0x52
};

static const UInt8 retailInputAscii[19] =
{
    't','h','e',' ','q','u','i','c','k',' ','b','r','o','w','n',' ','f','o','x'
};

static const UInt8 retailMACAscii[4] =
{
    0x55, 0xA7, 0xBF, 0xBA
};

static const UInt8 retailInputEBCDIC[19] =
{
    // "the quick brown fox" in EBCDIC
    0xA3, 0x88, 0x85, 0x40, 0x98, 0xA4, 0x89, 0x83,
    0x92, 0x40, 0x82, 0x99, 0x96, 0xA6, 0x95, 0x40,
    0x86, 0x96, 0xA7
};

static const UInt8 retailMACEBCDIC[4] =
{
    0x60, 0xAE, 0x2C, 0xD7
};

```

## CKM\_DH\_PKCS\_DERIVE

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Derive
<b>Minimum key length (bits)</b>	512
<b>Minimum key length for FIPS use (bits)</b>	512
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	2048
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	DH
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None



## CKM\_DH\_PKCS\_KEY\_PAIR\_GEN

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Generate Key Pair
<b>Minimum key length (bits)</b>	512
<b>Minimum key length for FIPS use (bits)</b>	512
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	2048
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	DH
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_DH\_PKCS\_PARAMETER\_GEN

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Generate Key
<b>Minimum key length (bits)</b>	512
<b>Minimum key length for FIPS use (bits)</b>	0
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	2048
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	DH
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_DSA

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	1024
<b>Minimum key length for FIPS use (bits)</b>	2048
<b>Minimum legacy key length for FIPS use (bits)</b>	1024
<b>Maximum key length (bits)</b>	3072
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	DSA
<b>Algorithms</b>	DSA
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_DSA\_KEY\_PAIR\_GEN

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Generate Key Pair
<b>Minimum key length (bits)</b>	1024
<b>Minimum key length for FIPS use (bits)</b>	2048
<b>Minimum legacy key length for FIPS use (bits)</b>	1024
<b>Maximum key length (bits)</b>	3072
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	DSA
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_DSA\_PARAMETER\_GEN

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Generate Key
<b>Minimum key length (bits)</b>	1024
<b>Minimum key length for FIPS use (bits)</b>	2048
<b>Minimum legacy key length for FIPS use (bits)</b>	1024
<b>Maximum key length (bits)</b>	3072
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	DSA
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_DSA\_SHA1

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	1024
<b>Minimum key length for FIPS use (bits)</b>	2048
<b>Minimum legacy key length for FIPS use (bits)</b>	1024
<b>Maximum key length (bits)</b>	3072
<b>Block size</b>	64
<b>Digest size</b>	20
<b>Key types</b>	DSA
<b>Algorithms</b>	SHA
<b>Modes</b>	None
<b>Flags</b>	Extractable

## CKM\_DSA\_SHA224

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	1024
<b>Minimum key length for FIPS use (bits)</b>	2048
<b>Minimum legacy key length for FIPS use (bits)</b>	1024
<b>Maximum key length (bits)</b>	3072
<b>Block size</b>	64
<b>Digest size</b>	28
<b>Key types</b>	DSA
<b>Algorithms</b>	SHA224
<b>Modes</b>	None
<b>Flags</b>	Extractable

## CKM\_DSA\_SHA256

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	1024
<b>Minimum key length for FIPS use (bits)</b>	2048
<b>Minimum legacy key length for FIPS use (bits)</b>	1024
<b>Maximum key length (bits)</b>	3072
<b>Block size</b>	64
<b>Digest size</b>	32
<b>Key types</b>	DSA
<b>Algorithms</b>	SHA256
<b>Modes</b>	None
<b>Flags</b>	Extractable



## CKM\_EC\_EDWARDS\_KEY\_PAIR\_GEN

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Generate Key Pair
<b>Minimum key length (bits)</b>	256
<b>Minimum key length for FIPS use (bits)</b>	256
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	256
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	EDDSA
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_EC\_KEY\_PAIR\_GEN

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Generate Key Pair
<b>Minimum key length (bits)</b>	105
<b>Minimum key length for FIPS use (bits)</b>	224
<b>Minimum legacy key length for FIPS use (bits)</b>	160
<b>Maximum key length (bits)</b>	571
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	ECDSA
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_EC\_KEY\_PAIR\_GEN\_W\_EXTRA\_BITS

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Generate Key Pair
<b>Minimum key length (bits)</b>	105
<b>Minimum key length for FIPS use (bits)</b>	224
<b>Minimum legacy key length for FIPS use (bits)</b>	160
<b>Maximum key length (bits)</b>	571
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	ECDSA
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	Extra bits

## CKM\_EC\_MONTGOMERY\_KEY\_PAIR\_GEN

Generate keys over Montgomery curves. Keys generated with this mechanism are of type CKK\_EC\_MONTGOMERY. They can be used with the existing CKM\_ECDH1\_DERIVE mechanism. Given that the ECDH mechanism is the same, and relies on "point multiply" on the given curve, no Montgomery-specific mechanism is provided at this time. Allowed curve is "Curve25519".

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Generate Key Pair
<b>Minimum key length (bits)</b>	256
<b>Minimum key length for FIPS use (bits)</b>	256
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	256
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	EC_MONT
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_ECDH1\_COFACTOR\_DERIVE

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Derive
<b>Minimum key length (bits)</b>	105
<b>Minimum key length for FIPS use (bits)</b>	224
<b>Minimum legacy key length for FIPS use (bits)</b>	160
<b>Maximum key length (bits)</b>	571
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	ECDSA   BIP32
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_ECDH1\_DERIVE

Elliptic Curve Diffie-Hellman is an anonymous key-agreement protocol. CKM\_ECDH1\_DERIVE is the derive function for that protocol.

**NOTE** To enhance performance, we have created a proprietary call CA\_DeriveKeyAndWrap, which is an optimization of C\_DeriveKey with C\_Wrap, merging the two functions into one (the in and out constraints are the same as for the individual functions). A further optimization is applied when mechanism CKM\_ECDH1\_DERIVE is used with CA\_DeriveKeyAndWrap.

If CA\_DeriveKeyAndWrap is called with other mechanisms, those would not be optimized.

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Derive
<b>Minimum key length (bits)</b>	105
<b>Minimum key length for FIPS use (bits)</b>	224
<b>Minimum legacy key length for FIPS use (bits)</b>	160
<b>Maximum key length (bits)</b>	571
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	ECDSA   EC_MONT   BIP32
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_ECDSA

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	105
<b>Minimum key length for FIPS use (bits)</b>	224
<b>Minimum legacy key length for FIPS use (bits)</b>	160
<b>Maximum key length (bits)</b>	571
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	ECDSA   BIP32
<b>Algorithms</b>	ECDSA
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_ECDSA\_GBCS\_SHA256

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	256
<b>Minimum key length for FIPS use (bits)</b>	256
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	256
<b>Block size</b>	64
<b>Digest size</b>	32
<b>Key types</b>	ECDSA   BIP32
<b>Algorithms</b>	SHA256
<b>Modes</b>	None
<b>Flags</b>	Extractable



## CKM\_ECDSA\_SHA1

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	105
<b>Minimum key length for FIPS use (bits)</b>	224
<b>Minimum legacy key length for FIPS use (bits)</b>	160
<b>Maximum key length (bits)</b>	571
<b>Block size</b>	64
<b>Digest size</b>	20
<b>Key types</b>	ECDSA   BIP32
<b>Algorithms</b>	SHA
<b>Modes</b>	None
<b>Flags</b>	Extractable

## CKM\_ECDSA\_SHA224

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	105
<b>Minimum key length for FIPS use (bits)</b>	224
<b>Minimum legacy key length for FIPS use (bits)</b>	160
<b>Maximum key length (bits)</b>	571
<b>Block size</b>	64
<b>Digest size</b>	28
<b>Key types</b>	ECDSA   BIP32
<b>Algorithms</b>	SHA224
<b>Modes</b>	None
<b>Flags</b>	Extractable

## CKM\_ECDSA\_SHA256

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	105
<b>Minimum key length for FIPS use (bits)</b>	224
<b>Minimum legacy key length for FIPS use (bits)</b>	160
<b>Maximum key length (bits)</b>	571
<b>Block size</b>	64
<b>Digest size</b>	32
<b>Key types</b>	ECDSA   BIP32
<b>Algorithms</b>	SHA256
<b>Modes</b>	None
<b>Flags</b>	Extractable

## CKM\_ECDSA\_SHA384

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	105
<b>Minimum key length for FIPS use (bits)</b>	224
<b>Minimum legacy key length for FIPS use (bits)</b>	160
<b>Maximum key length (bits)</b>	571
<b>Block size</b>	128
<b>Digest size</b>	48
<b>Key types</b>	ECDSA   BIP32
<b>Algorithms</b>	SHA384
<b>Modes</b>	None
<b>Flags</b>	Extractable

## CKM\_ECDSA\_SHA512

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	105
<b>Minimum key length for FIPS use (bits)</b>	224
<b>Minimum legacy key length for FIPS use (bits)</b>	160
<b>Maximum key length (bits)</b>	571
<b>Block size</b>	128
<b>Digest size</b>	*
<b>Key types</b>	ECDSA   BIP32
<b>Algorithms</b>	SHA512
<b>Modes</b>	None
<b>Flags</b>	Extractable

## CKM\_ECIES

**NOTE** This is a single part operation, so even if it is called using multi-part API, we accumulate the data (up to a maximum) and return data only on the “final” operation. That is the meaning of "Accumulating" in the table, below.

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Encrypt   Decrypt
<b>Minimum key length (bits)</b>	105
<b>Minimum key length for FIPS use (bits)</b>	224
<b>Minimum legacy key length for FIPS use (bits)</b>	160
<b>Maximum key length (bits)</b>	571
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	ECDSA   EC_MONT   BIP32
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	Accumulating

## CKM\_EDDSA

This mechanism makes use of keys generated by "[CKM\\_EC\\_ED\\_KEY\\_PAIR\\_GEN](#)" on page 1 (using keys generated over Edwards curves) for EDDSA signing. The keys used by this mechanism are of type CKK\_EC\_EDWARDS. For SafeNet HSM, the EDDSA algorithm is compliant with "PureEDDSA" as defined in RFC 8032 and "EdDSA for more curves, July 2015".

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	256
<b>Minimum key length for FIPS use (bits)</b>	256
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	256
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	EDDSA
<b>Algorithms</b>	SHA512
<b>Modes</b>	None
<b>Flags</b>	Extractable

## CKM\_EDDSA\_NACL

Use EDDSA keys in Networking and Cryptography Library ("salt") sign/verify operations.

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	256
<b>Minimum key length for FIPS use (bits)</b>	256
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	256
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	EDDSA
<b>Algorithms</b>	SHA512
<b>Modes</b>	None
<b>Flags</b>	Extractable



## CKM\_GENERIC\_SECRET\_KEY\_GEN

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Generate Key
<b>Minimum key length (bits)</b>	8
<b>Minimum key length for FIPS use (bits)</b>	112
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	4096
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	None
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_HAS160

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Digest
<b>Minimum key length (bits)</b>	0
<b>Minimum key length for FIPS use (bits)</b>	0
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	0
<b>Block size</b>	64
<b>Digest size</b>	20
<b>Key types</b>	None
<b>Algorithms</b>	HAS160
<b>Modes</b>	None
<b>Flags</b>	Extractable   Korean

## CKM\_HAS\_160\_HMAC

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	8
<b>Minimum key length for FIPS use (bits)</b>	112
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	4096
<b>Block size</b>	64
<b>Digest size</b>	20
<b>Key types</b>	Symmetric
<b>Algorithms</b>	HAS160
<b>Modes</b>	HMAC
<b>Flags</b>	Extractable   Korean   Internal

## CKM\_HAS160\_KCDSA

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	1024
<b>Minimum key length for FIPS use (bits)</b>	1024
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	2048
<b>Block size</b>	64
<b>Digest size</b>	20
<b>Key types</b>	KCDSA
<b>Algorithms</b>	HAS160
<b>Modes</b>	None
<b>Flags</b>	Korean

## CKM\_HAS160\_KCDSA\_NO\_PAD

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	1024
<b>Minimum key length for FIPS use (bits)</b>	1024
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	2048
<b>Block size</b>	64
<b>Digest size</b>	20
<b>Key types</b>	KCDSA
<b>Algorithms</b>	HAS160
<b>Modes</b>	None
<b>Flags</b>	Korean

## CKM\_KCDSA\_KEY\_PAIR\_GEN

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Generate Key Pair
<b>Minimum key length (bits)</b>	1024
<b>Minimum key length for FIPS use (bits)</b>	1024
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	2048
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	KCDSA
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	Korean

## CKM\_KCDSA\_PARAMETER\_GEN

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Generate Key
<b>Minimum key length (bits)</b>	1024
<b>Minimum key length for FIPS use (bits)</b>	1024
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	2048
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	KCDSA
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	Korean

## CKM\_KEY\_WRAP\_SET\_OAEP

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Wrap   Unwrap
<b>Minimum key length (bits)</b>	256
<b>Minimum key length for FIPS use (bits)</b>	2048
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	8192
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	RSA
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None



## CKM\_MD2

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Digest
<b>Minimum key length (bits)</b>	0
<b>Minimum key length for FIPS use (bits)</b>	0
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	0
<b>Block size</b>	16
<b>Digest size</b>	16
<b>Key types</b>	None
<b>Algorithms</b>	MD2
<b>Modes</b>	None
<b>Flags</b>	Extractable

## CKM\_MD2\_DES\_CBC

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Generate Key
<b>Minimum key length (bits)</b>	64
<b>Minimum key length for FIPS use (bits)</b>	64
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	64
<b>Block size</b>	16
<b>Digest size</b>	16
<b>Key types</b>	None
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_MD2\_KEY\_DERIVATION

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Derive
<b>Minimum key length (bits)</b>	8
<b>Minimum key length for FIPS use (bits)</b>	112
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	4096
<b>Block size</b>	16
<b>Digest size</b>	16
<b>Key types</b>	Symmetric
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_MD5\_HMAC

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	8
<b>Minimum key length for FIPS use (bits)</b>	112
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	4096
<b>Block size</b>	64
<b>Digest size</b>	16
<b>Key types</b>	Symmetric
<b>Algorithms</b>	MD5
<b>Modes</b>	HMAC
<b>Flags</b>	Extractable

## CKM\_MD5\_KEY\_DERIVATION

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Derive
<b>Minimum key length (bits)</b>	8
<b>Minimum key length for FIPS use (bits)</b>	112
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	4096
<b>Block size</b>	64
<b>Digest size</b>	16
<b>Key types</b>	Symmetric
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_NIST\_PRF\_KDF

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Derive
<b>Minimum key length (bits)</b>	8
<b>Minimum key length for FIPS use (bits)</b>	112
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	4096
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	Symmetric
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

### Usage

The CKM\_NIST\_PRF\_KDF mechanism only supports counter mode. CKM\_NIST\_PRF\_KDF is always allowed. It does not matter if the “allow non-FIPS approved algorithms” HSM policy is on or off. This mechanism can only be used with DES3\_CMAC or AES\_CMAC as the PRF.

The SP 800-108 allows for some variation on what/how the information is encoded and describes some fields as optional. To accommodate that, there are two encoding schemes you can specify:

- > LUNA\_PRF\_KDF\_ENCODING\_SCHEME\_2: the separator byte and the length of the derived key are not encoded in the input data for the PRF.
- > LUNA\_PRF\_KDF\_ENCODING\_SCHEME\_1: both fields are included.

### Example

```
/* Parameter and values used with CKM_PRF_KDF and CKM_NIST_PRF_KDF. */
typedef CK_ULONG CK_KDF_PRF_TYPE;
typedef CK_ULONG CK_KDF_PRF_ENCODING_SCHEME;
/** PRF KDF schemes */
#define CK_NIST_PRF_KDF_DES3_CMAC      0x00000001
#define CK_NIST_PRF_KDF_AES_CMAC      0x00000002
#define CK_PRF_KDF_ARIA_CMAC          0x00000003
```

```
#define CK_PRF_KDF_SEED_CMAC          0x00000004
#define LUNA_PRF_KDF_ENCODING_SCHEME_1  0x00000000
#define LUNA_PRF_KDF_ENCODING_SCHEME_2  0x00000001
typedef struct CK_KDF_PRF_PARAMS {
CK_KDF_PRF_TYPE          prfType;
CK_BYTE_PTR             pLabel;
CK_ULONG                ulLabelLen;
CK_BYTE_PTR             pContext;
CK_ULONG                ulContextLen;
CK_ULONG                ulCounter;
CK_KDF_PRF_ENCODING_SCHEME ulEncodingScheme;
} CK_PRF_KDF_PARAMS;
typedef CK_PRF_KDF_PARAMS CK_PTR CK_KDF_PRF_PARAMS_PTR;
```

## CKM\_PKCS5\_PBKD2

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Generate Key
<b>Minimum key length (bits)</b>	8
<b>Minimum key length for FIPS use (bits)</b>	112
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	4096
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	None
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None



## CKM\_PRF\_KDF

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Derive
<b>Minimum key length (bits)</b>	8
<b>Minimum key length for FIPS use (bits)</b>	112
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	4096
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	Symmetric
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

### Usage

The CKM\_NIST\_PRF mechanism only supports counter mode. CKM\_PRF\_KDF is only allowed when the “allow non-FIPS approved algorithms” HSM policy is on. This mechanism can be used with DES3\_CMAC, AES\_CMAC, ARIA\_CMAC or SEED\_CMAC as the PRF.

The SP 800-108 allows for some variation on what/how the information is encoded and describes some fields as optional. To accommodate that, there are two encoding schemes you can specify:

- > LUNA\_PRF\_KDF\_ENCODING\_SCHEME\_2: the separator byte and the length of the derived key are not encoded in the input data for the PRF.
- > LUNA\_PRF\_KDF\_ENCODING\_SCHEME\_1: both fields are included.

### Example

```
/* Parameter and values used with CKM_PRF_KDF and CKM_NIST_PRF_KDF. */
typedef CK_ULONG CK_KDF_PRF_TYPE;
typedef CK_ULONG CK_KDF_PRF_ENCODING_SCHEME;
/** PRF KDF schemes */
#define CK_NIST_PRF_KDF_DES3_CMAC      0x00000001
#define CK_NIST_PRF_KDF_AES_CMAC      0x00000002
#define CK_PRF_KDF_ARIA_CMAC          0x00000003
```

```
#define CK_PRF_KDF_SEED_CMAC          0x00000004
#define LUNA_PRF_KDF_ENCODING_SCHEME_1 0x00000000
#define LUNA_PRF_KDF_ENCODING_SCHEME_2 0x00000001
typedef struct CK_KDF_PRF_PARAMS {
CK_KDF_PRF_TYPE          prfType;
CK_BYTE_PTR             pLabel;
CK_ULONG                ulLabelLen;
CK_BYTE_PTR             pContext;
CK_ULONG                ulContextLen;
CK_ULONG                ulCounter;
CK_KDF_PRF_ENCODING_SCHEME ulEncodingScheme;
} CK_PRF_KDF_PARAMS;
typedef CK_PRF_KDF_PARAMS CK_PTR CK_KDF_PRF_PARAMS_PTR;
```

## CKM\_RC2\_CBC

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Encrypt   Decrypt   Wrap   Unwrap
<b>Minimum key length (bits)</b>	64
<b>Minimum key length for FIPS use (bits)</b>	64
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	1024
<b>Block size</b>	8
<b>Digest size</b>	0
<b>Key types</b>	RC2
<b>Algorithms</b>	RC2
<b>Modes</b>	CBC
<b>Flags</b>	Extractable

## CKM\_RC2\_CBC\_PAD

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Encrypt   Decrypt   Wrap   Unwrap
<b>Minimum key length (bits)</b>	64
<b>Minimum key length for FIPS use (bits)</b>	64
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	1024
<b>Block size</b>	8
<b>Digest size</b>	0
<b>Key types</b>	RC2
<b>Algorithms</b>	RC2
<b>Modes</b>	CBC_PAD
<b>Flags</b>	Extractable

## CKM\_RC2\_ECB

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Encrypt   Decrypt   Wrap   Unwrap
<b>Minimum key length (bits)</b>	64
<b>Minimum key length for FIPS use (bits)</b>	64
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	1024
<b>Block size</b>	8
<b>Digest size</b>	0
<b>Key types</b>	RC2
<b>Algorithms</b>	RC2
<b>Modes</b>	ECB
<b>Flags</b>	Extractable

## CKM\_RC2\_KEY\_GEN

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Generate Key
<b>Minimum key length (bits)</b>	64
<b>Minimum key length for FIPS use (bits)</b>	64
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	1024
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	RC2
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_RC2\_MAC

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	64
<b>Minimum key length for FIPS use (bits)</b>	64
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	1024
<b>Block size</b>	8
<b>Digest size</b>	0
<b>Key types</b>	RC2
<b>Algorithms</b>	RC2
<b>Modes</b>	MAC
<b>Flags</b>	Extractable

## CKM\_RC4

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Encrypt   Decrypt
<b>Minimum key length (bits)</b>	64
<b>Minimum key length for FIPS use (bits)</b>	64
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	2048
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	RC4
<b>Algorithms</b>	RC4
<b>Modes</b>	STREAM
<b>Flags</b>	Extractable



## CKM\_RC4\_KEY\_GEN

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Generate Key
<b>Minimum key length (bits)</b>	64
<b>Minimum key length for FIPS use (bits)</b>	64
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	2048
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	RC4
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_RC5\_CBC

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Encrypt   Decrypt
<b>Minimum key length (bits)</b>	64
<b>Minimum key length for FIPS use (bits)</b>	64
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	2040
<b>Block size</b>	8
<b>Digest size</b>	0
<b>Key types</b>	RC5
<b>Algorithms</b>	RC5
<b>Modes</b>	CBC
<b>Flags</b>	Extractable

## CKM\_RC5\_CBC\_PAD

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Encrypt   Decrypt
<b>Minimum key length (bits)</b>	64
<b>Minimum key length for FIPS use (bits)</b>	64
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	2040
<b>Block size</b>	8
<b>Digest size</b>	0
<b>Key types</b>	RC5
<b>Algorithms</b>	RC5
<b>Modes</b>	CBC_PAD
<b>Flags</b>	Extractable

## CKM\_RC5\_ECB

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Encrypt   Decrypt
<b>Minimum key length (bits)</b>	64
<b>Minimum key length for FIPS use (bits)</b>	64
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	2040
<b>Block size</b>	8
<b>Digest size</b>	0
<b>Key types</b>	RC5
<b>Algorithms</b>	RC5
<b>Modes</b>	ECB
<b>Flags</b>	Extractable

## CKM\_RC5\_KEY\_GEN

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Generate Key
<b>Minimum key length (bits)</b>	64
<b>Minimum key length for FIPS use (bits)</b>	64
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	2040
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	RC5
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_RC5\_MAC

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	64
<b>Minimum key length for FIPS use (bits)</b>	64
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	2040
<b>Block size</b>	8
<b>Digest size</b>	0
<b>Key types</b>	RC5
<b>Algorithms</b>	RC5
<b>Modes</b>	MAC
<b>Flags</b>	Extractable

## CKM\_RSA\_FIPS\_186\_3\_AUX\_PRIME\_KEY\_PAIR\_GEN

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Generate Key Pair
<b>Minimum key length (bits)</b>	1024
<b>Minimum key length for FIPS use (bits)</b>	2048
<b>Minimum legacy key length for FIPS use (bits)</b>	1024
<b>Maximum key length (bits)</b>	4096
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	RSA
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_RSA\_FIPS\_186\_3\_PRIME\_KEY\_PAIR\_GEN

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Generate Key Pair
<b>Minimum key length (bits)</b>	2048
<b>Minimum key length for FIPS use (bits)</b>	2048
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	4096
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	RSA
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None



## CKM\_RSA\_PKCS

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Sign   Verify   Encrypt   Decrypt   Wrap   Unwrap
<b>Minimum key length (bits)</b>	256
<b>Minimum key length for FIPS use (bits)</b>	2048
<b>Minimum legacy key length for FIPS use (bits)</b>	1024
<b>Maximum key length (bits)</b>	8192
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	RSA
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_RSA\_PKCS\_KEY\_PAIR\_GEN

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Generate Key Pair
<b>Minimum key length (bits)</b>	256
<b>Minimum key length for FIPS use (bits)</b>	2048
<b>Minimum legacy key length for FIPS use (bits)</b>	1024
<b>Maximum key length (bits)</b>	8192
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	RSA
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_RSA\_PKCS\_OAEP

The RSA PKCS OAEP mechanism can now use a supplied hashing mechanism. Previously RSA OAEP would always use SHA1 and returned an error if another was attempted.

With current firmware, PKCS#11 API and ckdemo now accept a new mechanism.

Allowed mechanisms are:

CKM\_SHA1

CKM\_SHA224

CKM\_SHA256

CKM\_SHA384

CKM\_SHA512

0 (use the firmware's default engine, which is currently SHA1)

In ckdemo menu option 98 has a new value 17 - OAEP Hash Params, which can be set to use either default (CKM\_SHA1) or selectable. When it is set to selectable the user is prompted for a hash mechanism when using the OAEP mechanism.

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Encrypt   Decrypt   Wrap   Unwrap
<b>Minimum key length (bits)</b>	256
<b>Minimum key length for FIPS use (bits)</b>	2048
<b>Minimum legacy key length for FIPS use (bits)</b>	1024
<b>Maximum key length (bits)</b>	8192
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	RSA
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_RSA\_PKCS\_PSS

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	256
<b>Minimum key length for FIPS use (bits)</b>	2048
<b>Minimum legacy key length for FIPS use (bits)</b>	1024
<b>Maximum key length (bits)</b>	8192
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	RSA
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None   PSS

## CKM\_RSA\_X\_509

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Encrypt   Decrypt
<b>Minimum key length (bits)</b>	256
<b>Minimum key length for FIPS use (bits)</b>	2048
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	8192
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	RSA
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_RSA\_X9\_31

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	1024
<b>Minimum key length for FIPS use (bits)</b>	2048
<b>Minimum legacy key length for FIPS use (bits)</b>	1024
<b>Maximum key length (bits)</b>	8192
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	RSA
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	Extractable   X9.31

## CKM\_RSA\_X9\_31\_KEY\_PAIR\_GEN

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Generate Key Pair
<b>Minimum key length (bits)</b>	1024
<b>Minimum key length for FIPS use (bits)</b>	2048
<b>Minimum legacy key length for FIPS use (bits)</b>	1024
<b>Maximum key length (bits)</b>	8192
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	RSA
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	X9.31

## CKM\_RSA\_X9\_31\_NON\_FIPS

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	1024
<b>Minimum key length for FIPS use (bits)</b>	2048
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	8192
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	RSA
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	Extractable   X9.31   Non-FIPS X9.31



## CKM\_SEED\_CBC

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Encrypt   Decrypt   Wrap   Unwrap
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	128
<b>Block size</b>	16
<b>Digest size</b>	0
<b>Key types</b>	SEED
<b>Algorithms</b>	SEED
<b>Modes</b>	CBC
<b>Flags</b>	Extractable   Korean

## CKM\_SEED\_CBC\_PAD

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Encrypt   Decrypt   Wrap   Unwrap
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	128
<b>Block size</b>	16
<b>Digest size</b>	0
<b>Key types</b>	SEED
<b>Algorithms</b>	SEED
<b>Modes</b>	CBC_PAD
<b>Flags</b>	Extractable   Korean

## CKM\_SEED\_CMAC

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	128
<b>Block size</b>	16
<b>Digest size</b>	0
<b>Key types</b>	SEED
<b>Algorithms</b>	SEED
<b>Modes</b>	MAC
<b>Flags</b>	Extractable   Korean   CMAC

## CKM\_SEED\_CTR

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Encrypt   Decrypt
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	128
<b>Block size</b>	16
<b>Digest size</b>	0
<b>Key types</b>	SEED
<b>Algorithms</b>	SEED
<b>Modes</b>	CTR
<b>Flags</b>	Extractable   Korean

## CKM\_SEED\_ECB

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Encrypt   Decrypt   Wrap   Unwrap
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	128
<b>Block size</b>	16
<b>Digest size</b>	0
<b>Key types</b>	SEED
<b>Algorithms</b>	SEED
<b>Modes</b>	ECB
<b>Flags</b>	Extractable   Korean

## CKM\_SEED\_KEY\_GEN

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Generate Key
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	128
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	SEED
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	Korean

## CKM\_SEED\_MAC

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	128
<b>Block size</b>	16
<b>Digest size</b>	0
<b>Key types</b>	SEED
<b>Algorithms</b>	SEED
<b>Modes</b>	MAC
<b>Flags</b>	Extractable   Korean

## CKM\_SHA\_1

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Digest
<b>Minimum key length (bits)</b>	0
<b>Minimum key length for FIPS use (bits)</b>	0
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	0
<b>Block size</b>	64
<b>Digest size</b>	20
<b>Key types</b>	None
<b>Algorithms</b>	SHA
<b>Modes</b>	None
<b>Flags</b>	Extractable



## CKM\_SHA\_1\_80\_HMAC

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	8
<b>Minimum key length for FIPS use (bits)</b>	112
<b>Minimum legacy key length for FIPS use (bits)</b>	80
<b>Maximum key length (bits)</b>	4096
<b>Block size</b>	64
<b>Digest size</b>	20
<b>Key types</b>	Symmetric
<b>Algorithms</b>	SHA
<b>Modes</b>	HMAC
<b>Flags</b>	Extractable

## CKM\_SHA\_1\_HMAC

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	8
<b>Minimum key length for FIPS use (bits)</b>	112
<b>Minimum legacy key length for FIPS use (bits)</b>	80
<b>Maximum key length (bits)</b>	4096
<b>Block size</b>	64
<b>Digest size</b>	20
<b>Key types</b>	Symmetric
<b>Algorithms</b>	SHA
<b>Modes</b>	HMAC
<b>Flags</b>	Extractable

## CKM\_SHA1\_CAST5\_CBC

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Generate Key
<b>Minimum key length (bits)</b>	64
<b>Minimum key length for FIPS use (bits)</b>	64
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	128
<b>Block size</b>	64
<b>Digest size</b>	20
<b>Key types</b>	None
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_SHA1\_DES2\_CBC

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Generate Key
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	128
<b>Block size</b>	64
<b>Digest size</b>	20
<b>Key types</b>	None
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_SHA1\_DES2\_CBC\_OLD

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Generate Key
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	128
<b>Block size</b>	64
<b>Digest size</b>	20
<b>Key types</b>	None
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_SHA1\_DES3\_CBC

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Generate Key
<b>Minimum key length (bits)</b>	192
<b>Minimum key length for FIPS use (bits)</b>	192
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	192
<b>Block size</b>	64
<b>Digest size</b>	20
<b>Key types</b>	None
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_SHA1\_DES3\_CBC\_OLD

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Generate Key
<b>Minimum key length (bits)</b>	192
<b>Minimum key length for FIPS use (bits)</b>	192
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	192
<b>Block size</b>	64
<b>Digest size</b>	20
<b>Key types</b>	None
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_SHA1\_EDDSA

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	256
<b>Minimum key length for FIPS use (bits)</b>	256
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	256
<b>Block size</b>	64
<b>Digest size</b>	20
<b>Key types</b>	EDDSA
<b>Algorithms</b>	SHA
<b>Modes</b>	None
<b>Flags</b>	Extractable



## CKM\_SHA1\_EDDSA\_NACL

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	256
<b>Minimum key length for FIPS use (bits)</b>	256
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	256
<b>Block size</b>	64
<b>Digest size</b>	20
<b>Key types</b>	EDDSA
<b>Algorithms</b>	SHA
<b>Modes</b>	None
<b>Flags</b>	Extractable

## CKM\_SHA1\_KCDSA

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	1024
<b>Minimum key length for FIPS use (bits)</b>	1024
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	2048
<b>Block size</b>	64
<b>Digest size</b>	20
<b>Key types</b>	KCDSA
<b>Algorithms</b>	SHA
<b>Modes</b>	None
<b>Flags</b>	Korean

## CKM\_SHA1\_KCDSA\_NO\_PAD

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	1024
<b>Minimum key length for FIPS use (bits)</b>	1024
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	2048
<b>Block size</b>	64
<b>Digest size</b>	20
<b>Key types</b>	KCDSA
<b>Algorithms</b>	SHA
<b>Modes</b>	None
<b>Flags</b>	Korean

## CKM\_SHA1\_KEY\_DERIVATION

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Derive
<b>Minimum key length (bits)</b>	8
<b>Minimum key length for FIPS use (bits)</b>	112
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	4096
<b>Block size</b>	64
<b>Digest size</b>	20
<b>Key types</b>	Symmetric
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_SHA1\_RC2\_40\_CBC

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Generate Key
<b>Minimum key length (bits)</b>	40
<b>Minimum key length for FIPS use (bits)</b>	40
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	40
<b>Block size</b>	64
<b>Digest size</b>	20
<b>Key types</b>	None
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_SHA1\_RC2\_128\_CBC

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Generate Key
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	128
<b>Block size</b>	64
<b>Digest size</b>	20
<b>Key types</b>	None
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_SHA1\_RC4\_40

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Generate Key
<b>Minimum key length (bits)</b>	40
<b>Minimum key length for FIPS use (bits)</b>	40
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	40
<b>Block size</b>	64
<b>Digest size</b>	20
<b>Key types</b>	None
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_SHA1\_RC4\_128

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Generate Key
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	128
<b>Block size</b>	64
<b>Digest size</b>	20
<b>Key types</b>	None
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None



## CKM\_SHA1\_RSA\_PKCS

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	256
<b>Minimum key length for FIPS use (bits)</b>	2048
<b>Minimum legacy key length for FIPS use (bits)</b>	1024
<b>Maximum key length (bits)</b>	8192
<b>Block size</b>	64
<b>Digest size</b>	20
<b>Key types</b>	RSA
<b>Algorithms</b>	SHA
<b>Modes</b>	None
<b>Flags</b>	Extractable

## CKM\_SHA1\_RSA\_PKCS\_PSS

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	256
<b>Minimum key length for FIPS use (bits)</b>	2048
<b>Minimum legacy key length for FIPS use (bits)</b>	1024
<b>Maximum key length (bits)</b>	8192
<b>Block size</b>	64
<b>Digest size</b>	20
<b>Key types</b>	RSA
<b>Algorithms</b>	SHA
<b>Modes</b>	None
<b>Flags</b>	Extractable   PSS

## CKM\_SHA1\_RSA\_X9\_31

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	1024
<b>Minimum key length for FIPS use (bits)</b>	2048
<b>Minimum legacy key length for FIPS use (bits)</b>	1024
<b>Maximum key length (bits)</b>	8192
<b>Block size</b>	64
<b>Digest size</b>	20
<b>Key types</b>	RSA
<b>Algorithms</b>	SHA
<b>Modes</b>	None
<b>Flags</b>	Extractable   X9.31

## CKM\_SHA1\_RSA\_X9\_31\_NON\_FIPS

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	1024
<b>Minimum key length for FIPS use (bits)</b>	2048
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	8192
<b>Block size</b>	64
<b>Digest size</b>	20
<b>Key types</b>	RSA
<b>Algorithms</b>	SHA
<b>Modes</b>	None
<b>Flags</b>	Extractable   X9.31   Non-FIPS X9.31

## CKM\_SHA224

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Digest
<b>Minimum key length (bits)</b>	0
<b>Minimum key length for FIPS use (bits)</b>	0
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	0
<b>Block size</b>	64
<b>Digest size</b>	28
<b>Key types</b>	None
<b>Algorithms</b>	SHA224
<b>Modes</b>	None
<b>Flags</b>	Extractable

## CKM\_SHA224\_EDDSA

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	256
<b>Minimum key length for FIPS use (bits)</b>	256
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	256
<b>Block size</b>	64
<b>Digest size</b>	28
<b>Key types</b>	EDDSA
<b>Algorithms</b>	SHA224
<b>Modes</b>	None
<b>Flags</b>	Extractable

## CKM\_SHA224\_EDDSA\_NACL

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	256
<b>Minimum key length for FIPS use (bits)</b>	256
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	256
<b>Block size</b>	64
<b>Digest size</b>	28
<b>Key types</b>	EDDSA
<b>Algorithms</b>	SHA224
<b>Modes</b>	None
<b>Flags</b>	Extractable

## CKM\_SHA224\_HMAC

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	8
<b>Minimum key length for FIPS use (bits)</b>	112
<b>Minimum legacy key length for FIPS use (bits)</b>	80
<b>Maximum key length (bits)</b>	4096
<b>Block size</b>	64
<b>Digest size</b>	28
<b>Key types</b>	Symmetric
<b>Algorithms</b>	SHA224
<b>Modes</b>	HMAC
<b>Flags</b>	Extractable



## CKM\_SHA224\_KCDSA

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	1024
<b>Minimum key length for FIPS use (bits)</b>	1024
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	2048
<b>Block size</b>	64
<b>Digest size</b>	28
<b>Key types</b>	KCDSA
<b>Algorithms</b>	SHA224
<b>Modes</b>	None
<b>Flags</b>	Korean

## CKM\_SHA224\_KCDSA\_NO\_PAD

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	1024
<b>Minimum key length for FIPS use (bits)</b>	1024
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	2048
<b>Block size</b>	64
<b>Digest size</b>	28
<b>Key types</b>	KCDSA
<b>Algorithms</b>	SHA224
<b>Modes</b>	None
<b>Flags</b>	Korean

## CKM\_SHA224\_KEY\_DERIVATION

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Derive
<b>Minimum key length (bits)</b>	8
<b>Minimum key length for FIPS use (bits)</b>	112
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	4096
<b>Block size</b>	64
<b>Digest size</b>	28
<b>Key types</b>	Symmetric
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_SHA224\_RSA\_PKCS

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	256
<b>Minimum key length for FIPS use (bits)</b>	2048
<b>Minimum legacy key length for FIPS use (bits)</b>	1024
<b>Maximum key length (bits)</b>	8192
<b>Block size</b>	64
<b>Digest size</b>	28
<b>Key types</b>	RSA
<b>Algorithms</b>	SHA224
<b>Modes</b>	None
<b>Flags</b>	Extractable

## CKM\_SHA224\_RSA\_PKCS\_PSS

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	512
<b>Minimum key length for FIPS use (bits)</b>	2048
<b>Minimum legacy key length for FIPS use (bits)</b>	1024
<b>Maximum key length (bits)</b>	8192
<b>Block size</b>	64
<b>Digest size</b>	28
<b>Key types</b>	RSA
<b>Algorithms</b>	SHA224
<b>Modes</b>	None
<b>Flags</b>	Extractable   PSS

## CKM\_SHA224\_RSA\_X9\_31

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	1024
<b>Minimum key length for FIPS use (bits)</b>	2048
<b>Minimum legacy key length for FIPS use (bits)</b>	1024
<b>Maximum key length (bits)</b>	8192
<b>Block size</b>	64
<b>Digest size</b>	28
<b>Key types</b>	RSA
<b>Algorithms</b>	SHA224
<b>Modes</b>	None
<b>Flags</b>	Extractable   X9.31

## CKM\_SHA224\_RSA\_X9\_31\_NON\_FIPS

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	1024
<b>Minimum key length for FIPS use (bits)</b>	2048
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	8192
<b>Block size</b>	64
<b>Digest size</b>	28
<b>Key types</b>	RSA
<b>Algorithms</b>	SHA224
<b>Modes</b>	None
<b>Flags</b>	Extractable   X9.31   Non-FIPS X9.31

## CKM\_SHA256

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Digest
<b>Minimum key length (bits)</b>	0
<b>Minimum key length for FIPS use (bits)</b>	0
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	0
<b>Block size</b>	64
<b>Digest size</b>	32
<b>Key types</b>	None
<b>Algorithms</b>	SHA256
<b>Modes</b>	None
<b>Flags</b>	Extractable



## CKM\_SHA256\_EDDSA

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	256
<b>Minimum key length for FIPS use (bits)</b>	256
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	256
<b>Block size</b>	64
<b>Digest size</b>	32
<b>Key types</b>	EDDSA
<b>Algorithms</b>	SHA256
<b>Modes</b>	None
<b>Flags</b>	Extractable

## CKM\_SHA256\_EDDSA\_NACL

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	256
<b>Minimum key length for FIPS use (bits)</b>	256
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	256
<b>Block size</b>	128
<b>Digest size</b>	48
<b>Key types</b>	EDDSA
<b>Algorithms</b>	SHA384
<b>Modes</b>	None
<b>Flags</b>	Extractable

## CKM\_SHA256\_HMAC

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	8
<b>Minimum key length for FIPS use (bits)</b>	112
<b>Minimum legacy key length for FIPS use (bits)</b>	80
<b>Maximum key length (bits)</b>	4096
<b>Block size</b>	64
<b>Digest size</b>	32
<b>Key types</b>	Symmetric
<b>Algorithms</b>	SHA256
<b>Modes</b>	HMAC
<b>Flags</b>	Extractable

## CKM\_SHA256\_KCDSA

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	1024
<b>Minimum key length for FIPS use (bits)</b>	1024
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	2048
<b>Block size</b>	64
<b>Digest size</b>	32
<b>Key types</b>	KCDSA
<b>Algorithms</b>	SHA256
<b>Modes</b>	None
<b>Flags</b>	Korean

## CKM\_SHA256\_KCDSA\_NO\_PAD

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	1024
<b>Minimum key length for FIPS use (bits)</b>	1024
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	2048
<b>Block size</b>	64
<b>Digest size</b>	32
<b>Key types</b>	KCDSA
<b>Algorithms</b>	SHA256
<b>Modes</b>	None
<b>Flags</b>	Korean

## CKM\_SHA256\_KEY\_DERIVATION

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Derive
<b>Minimum key length (bits)</b>	8
<b>Minimum key length for FIPS use (bits)</b>	112
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	4096
<b>Block size</b>	64
<b>Digest size</b>	32
<b>Key types</b>	Symmetric
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_SHA256\_RSA\_PKCS

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	256
<b>Minimum key length for FIPS use (bits)</b>	2048
<b>Minimum legacy key length for FIPS use (bits)</b>	1024
<b>Maximum key length (bits)</b>	8192
<b>Block size</b>	64
<b>Digest size</b>	32
<b>Key types</b>	RSA
<b>Algorithms</b>	SHA256
<b>Modes</b>	None
<b>Flags</b>	Extractable

## CKM\_SHA256\_RSA\_PKCS\_PSS

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	512
<b>Minimum key length for FIPS use (bits)</b>	2048
<b>Minimum legacy key length for FIPS use (bits)</b>	1024
<b>Maximum key length (bits)</b>	8192
<b>Block size</b>	64
<b>Digest size</b>	32
<b>Key types</b>	RSA
<b>Algorithms</b>	SHA256
<b>Modes</b>	None
<b>Flags</b>	Extractable   PSS



## CKM\_SHA256\_RSA\_X9\_31

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	1024
<b>Minimum key length for FIPS use (bits)</b>	2048
<b>Minimum legacy key length for FIPS use (bits)</b>	1024
<b>Maximum key length (bits)</b>	8192
<b>Block size</b>	64
<b>Digest size</b>	32
<b>Key types</b>	RSA
<b>Algorithms</b>	SHA256
<b>Modes</b>	None
<b>Flags</b>	Extractable   X9.31

## CKM\_SHA256\_RSA\_X9\_31\_NON\_FIPS

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	1024
<b>Minimum key length for FIPS use (bits)</b>	2048
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	8192
<b>Block size</b>	64
<b>Digest size</b>	32
<b>Key types</b>	RSA
<b>Algorithms</b>	SHA256
<b>Modes</b>	None
<b>Flags</b>	Extractable   X9.31   Non-FIPS X9.31

## CKM\_SHA384

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Digest
<b>Minimum key length (bits)</b>	0
<b>Minimum key length for FIPS use (bits)</b>	0
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	0
<b>Block size</b>	128
<b>Digest size</b>	48
<b>Key types</b>	None
<b>Algorithms</b>	SHA384
<b>Modes</b>	None
<b>Flags</b>	Extractable

## CKM\_SHA384\_EDDSA

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	256
<b>Minimum key length for FIPS use (bits)</b>	256
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	256
<b>Block size</b>	128
<b>Digest size</b>	48
<b>Key types</b>	EDDSA
<b>Algorithms</b>	SHA384
<b>Modes</b>	None
<b>Flags</b>	Extractable

## CKM\_SHA384\_EDDSA\_NACL

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	256
<b>Minimum key length for FIPS use (bits)</b>	256
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	256
<b>Block size</b>	128
<b>Digest size</b>	48
<b>Key types</b>	EDDSA
<b>Algorithms</b>	SHA384
<b>Modes</b>	None
<b>Flags</b>	Extractable

## CKM\_SHA384\_HMAC

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	8
<b>Minimum key length for FIPS use (bits)</b>	112
<b>Minimum legacy key length for FIPS use (bits)</b>	80
<b>Maximum key length (bits)</b>	4096
<b>Block size</b>	128
<b>Digest size</b>	48
<b>Key types</b>	Symmetric
<b>Algorithms</b>	SHA384
<b>Modes</b>	HMAC
<b>Flags</b>	Extractable

## CKM\_SHA384\_KCDSA

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	1024
<b>Minimum key length for FIPS use (bits)</b>	1024
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	2048
<b>Block size</b>	128
<b>Digest size</b>	48
<b>Key types</b>	KCDSA
<b>Algorithms</b>	SHA384
<b>Modes</b>	None
<b>Flags</b>	Korean

## CKM\_SHA384\_KCDSA\_NO\_PAD

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	1024
<b>Minimum key length for FIPS use (bits)</b>	1024
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	2048
<b>Block size</b>	128
<b>Digest size</b>	48
<b>Key types</b>	KCDSA
<b>Algorithms</b>	SHA384
<b>Modes</b>	None
<b>Flags</b>	Korean



## CKM\_SHA384\_KEY\_DERIVATION

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Derive
<b>Minimum key length (bits)</b>	8
<b>Minimum key length for FIPS use (bits)</b>	112
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	4096
<b>Block size</b>	128
<b>Digest size</b>	48
<b>Key types</b>	Symmetric
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_SHA384\_RSA\_PKCS

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	256
<b>Minimum key length for FIPS use (bits)</b>	2048
<b>Minimum legacy key length for FIPS use (bits)</b>	1024
<b>Maximum key length (bits)</b>	8192
<b>Block size</b>	128
<b>Digest size</b>	48
<b>Key types</b>	RSA
<b>Algorithms</b>	SHA384
<b>Modes</b>	None
<b>Flags</b>	Extractable

## CKM\_SHA384\_RSA\_PKCS\_PSS

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	512
<b>Minimum key length for FIPS use (bits)</b>	2048
<b>Minimum legacy key length for FIPS use (bits)</b>	1024
<b>Maximum key length (bits)</b>	8192
<b>Block size</b>	128
<b>Digest size</b>	48
<b>Key types</b>	RSA
<b>Algorithms</b>	SHA384
<b>Modes</b>	None
<b>Flags</b>	Extractable   PSS

## CKM\_SHA384\_RSA\_X9\_31

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	1024
<b>Minimum key length for FIPS use (bits)</b>	2048
<b>Minimum legacy key length for FIPS use (bits)</b>	1024
<b>Maximum key length (bits)</b>	8192
<b>Block size</b>	128
<b>Digest size</b>	48
<b>Key types</b>	RSA
<b>Algorithms</b>	SHA384
<b>Modes</b>	None
<b>Flags</b>	Extractable   X9.31

## CKM\_SHA384\_RSA\_X9\_31\_NON\_FIPS

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	1024
<b>Minimum key length for FIPS use (bits)</b>	2048
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	8192
<b>Block size</b>	128
<b>Digest size</b>	48
<b>Key types</b>	RSA
<b>Algorithms</b>	SHA384
<b>Modes</b>	None
<b>Flags</b>	Extractable   X9.31   Non-FIPS X9.31

## CKM\_SHA512

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Digest
<b>Minimum key length (bits)</b>	0
<b>Minimum key length for FIPS use (bits)</b>	0
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	0
<b>Block size</b>	128
<b>Digest size</b>	*
<b>Key types</b>	None
<b>Algorithms</b>	SHA512
<b>Modes</b>	None
<b>Flags</b>	Extractable

## CKM\_SHA512\_EDDSA

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	256
<b>Minimum key length for FIPS use (bits)</b>	256
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	256
<b>Block size</b>	128
<b>Digest size</b>	*
<b>Key types</b>	EDDSA
<b>Algorithms</b>	SHA512
<b>Modes</b>	None
<b>Flags</b>	Extractable

## CKM\_SHA512\_EDDSA\_NACL

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	256
<b>Minimum key length for FIPS use (bits)</b>	256
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	256
<b>Block size</b>	128
<b>Digest size</b>	*
<b>Key types</b>	EDDSA
<b>Algorithms</b>	SHA512
<b>Modes</b>	None
<b>Flags</b>	Extractable



## CKM\_SHA512\_HMAC

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	8
<b>Minimum key length for FIPS use (bits)</b>	112
<b>Minimum legacy key length for FIPS use (bits)</b>	80
<b>Maximum key length (bits)</b>	4096
<b>Block size</b>	128
<b>Digest size</b>	*
<b>Key types</b>	Symmetric
<b>Algorithms</b>	SHA512
<b>Modes</b>	HMAC
<b>Flags</b>	Extractable

## CKM\_SHA512\_KCDSA

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	1024
<b>Minimum key length for FIPS use (bits)</b>	1024
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	2048
<b>Block size</b>	128
<b>Digest size</b>	*
<b>Key types</b>	KCDSA
<b>Algorithms</b>	SHA512
<b>Modes</b>	None
<b>Flags</b>	Korean

## CKM\_SHA512\_KCDSA\_NO\_PAD

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	1024
<b>Minimum key length for FIPS use (bits)</b>	1024
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	2048
<b>Block size</b>	128
<b>Digest size</b>	*
<b>Key types</b>	KCDSA
<b>Algorithms</b>	SHA512
<b>Modes</b>	None
<b>Flags</b>	Korean

## CKM\_SHA512\_KEY\_DERIVATION

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Derive
<b>Minimum key length (bits)</b>	8
<b>Minimum key length for FIPS use (bits)</b>	112
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	4096
<b>Block size</b>	128
<b>Digest size</b>	*
<b>Key types</b>	Symmetric
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_SHA512\_RSA\_PKCS

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	256
<b>Minimum key length for FIPS use (bits)</b>	2048
<b>Minimum legacy key length for FIPS use (bits)</b>	1024
<b>Maximum key length (bits)</b>	8192
<b>Block size</b>	128
<b>Digest size</b>	*
<b>Key types</b>	RSA
<b>Algorithms</b>	SHA512
<b>Modes</b>	None
<b>Flags</b>	Extractable

## CKM\_SHA512\_RSA\_PKCS\_PSS

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	1024
<b>Minimum key length for FIPS use (bits)</b>	2048
<b>Minimum legacy key length for FIPS use (bits)</b>	1024
<b>Maximum key length (bits)</b>	8192
<b>Block size</b>	128
<b>Digest size</b>	*
<b>Key types</b>	RSA
<b>Algorithms</b>	SHA512
<b>Modes</b>	None
<b>Flags</b>	Extractable   PSS

## CKM\_SHA512\_RSA\_X9\_31

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	1024
<b>Minimum key length for FIPS use (bits)</b>	2048
<b>Minimum legacy key length for FIPS use (bits)</b>	1024
<b>Maximum key length (bits)</b>	8192
<b>Block size</b>	128
<b>Digest size</b>	*
<b>Key types</b>	RSA
<b>Algorithms</b>	SHA512
<b>Modes</b>	None
<b>Flags</b>	Extractable   X9.31

## CKM\_SHA512\_RSA\_X9\_31\_NON\_FIPS

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	1024
<b>Minimum key length for FIPS use (bits)</b>	2048
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	8192
<b>Block size</b>	128
<b>Digest size</b>	*
<b>Key types</b>	RSA
<b>Algorithms</b>	SHA512
<b>Modes</b>	None
<b>Flags</b>	Extractable   X9.31   Non-FIPS X9.31



## CKM\_SM3

SM3 is a hash function published by the Chinese Commercial Cryptography Administration Office for the use of electronic authentication service system. The design of SM3 builds upon the design of the SHA-2 hash function, but introduces additional strengthening features. For SafeNet Luna Network HSMs, the available mechanisms are CKM\_SM3, the hash function, and CKM\_SM3\_KEY\_DERIVATION, and CKM\_HMAC\_SM3.

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Digest
<b>Minimum key length (bits)</b>	0
<b>Minimum key length for FIPS use (bits)</b>	0
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	0
<b>Block size</b>	64
<b>Digest size</b>	32
<b>Key types</b>	None
<b>Algorithms</b>	SM3
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_SM3\_HMAC

SM3 is a hash function published by the Chinese Commercial Cryptography Administration Office for the use of electronic authentication service system. The design of SM3 builds upon the design of the SHA-2 hash function, but introduces additional strengthening features. For SafeNet Luna Network HSMs, the available mechanisms are CKM\_SM3, the hash function, and CKM\_SM3\_KEY\_DERIVATION, and CKM\_SM3\_HMAC.

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	8
<b>Minimum key length for FIPS use (bits)</b>	8
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	4096
<b>Block size</b>	64
<b>Digest size</b>	32
<b>Key types</b>	Symmetric
<b>Algorithms</b>	SM3
<b>Modes</b>	HMAC
<b>Flags</b>	None

## CKM\_SM3\_KEY\_DERIVATION

SM3 is a hash function published by the Chinese Commercial Cryptography Administration Office for the use of electronic authentication service system. The design of SM3 builds upon the design of the SHA-2 hash function, but introduces additional strengthening features. For SafeNet Luna Network HSMs, the available mechanisms are CKM\_SM3, the hash function, and CKM\_SM3\_KEY\_DERIVATION, and CKM\_HMAC\_SM3.

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Derive
<b>Minimum key length (bits)</b>	8
<b>Minimum key length for FIPS use (bits)</b>	8
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	4096
<b>Block size</b>	64
<b>Digest size</b>	32
<b>Key types</b>	Symmetric
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_SSL3\_KEY\_AND\_MAC\_DERIVE

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Derive
<b>Minimum key length (bits)</b>	384
<b>Minimum key length for FIPS use (bits)</b>	384
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	384
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	Symmetric
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_SSL3\_MASTER\_KEY\_DERIVE

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Derive
<b>Minimum key length (bits)</b>	384
<b>Minimum key length for FIPS use (bits)</b>	384
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	384
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	Symmetric
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_SSL3\_MD5\_MAC

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	128
<b>Minimum key length for FIPS use (bits)</b>	128
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	128
<b>Block size</b>	64
<b>Digest size</b>	16
<b>Key types</b>	Symmetric
<b>Algorithms</b>	MD5
<b>Modes</b>	HMAC
<b>Flags</b>	Extractable

## CKM\_SSL3\_PRE\_MASTER\_KEY\_GEN

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Generate Key
<b>Minimum key length (bits)</b>	384
<b>Minimum key length for FIPS use (bits)</b>	384
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	384
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	None
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_SSL3\_SHA1\_MAC

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Sign   Verify
<b>Minimum key length (bits)</b>	160
<b>Minimum key length for FIPS use (bits)</b>	160
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	160
<b>Block size</b>	64
<b>Digest size</b>	20
<b>Key types</b>	Symmetric
<b>Algorithms</b>	SHA
<b>Modes</b>	HMAC
<b>Flags</b>	Extractable



## CKM\_X9\_42\_DH\_DERIVE

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Derive
<b>Minimum key length (bits)</b>	1024
<b>Minimum key length for FIPS use (bits)</b>	2048
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	4096
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	X9_42_DH
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_X9\_42\_DH\_HYBRID\_DERIVE

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Derive
<b>Minimum key length (bits)</b>	1024
<b>Minimum key length for FIPS use (bits)</b>	2048
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	4096
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	X9_42_DH
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_X9\_42\_DH\_KEY\_PAIR\_GEN

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Generate Key Pair
<b>Minimum key length (bits)</b>	1024
<b>Minimum key length for FIPS use (bits)</b>	2048
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	4096
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	X9_42_DH
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_X9\_42\_DH\_PARAMETER\_GEN

### Summary

<b>FIPS approved?</b>	Yes
<b>Supported functions</b>	Generate Key
<b>Minimum key length (bits)</b>	1024
<b>Minimum key length for FIPS use (bits)</b>	2048
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	4096
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	X9_42_DH
<b>Algorithms</b>	None
<b>Modes</b>	None
<b>Flags</b>	None

## CKM\_XOR\_BASE\_AND\_DATA\_W\_KDF

### Summary

<b>FIPS approved?</b>	No
<b>Supported functions</b>	Encrypt   Decrypt
<b>Minimum key length (bits)</b>	8
<b>Minimum key length for FIPS use (bits)</b>	112
<b>Minimum legacy key length for FIPS use (bits)</b>	N/A
<b>Maximum key length (bits)</b>	4096
<b>Block size</b>	0
<b>Digest size</b>	0
<b>Key types</b>	Symmetric
<b>Algorithms</b>	None
<b>Modes</b>	OFB
<b>Flags</b>	None

# CHAPTER 5: Using the SafeNet SDK

This chapter describes how to use the SDK to develop applications that exercise the HSM. It contains the following topics:

- > ["Libraries and Applications" below](#)
- > ["Application IDs" on page 298](#)
- > ["Named Curves and User-Defined Parameters" on page 302](#)
- > ["Curve Names By Organization" on page 309](#)
- > ["Capability and Policy Configuration Control Using the SafeNet API" on page 311](#)
- > ["Connection Timeout" on page 314](#)

## Libraries and Applications

---

This section explains how to make the Chrystoki library available to the other components of the SafeNet Software Development Kit.

An application has no knowledge of which library is to be loaded nor does the application know the library's location. For these reasons, a special scheme must be employed to tell the application, while it is running, where to find the library. The next paragraphs describe how applications connect to Chrystoki.

### SafeNet SDK Applications General Information

All applications provided in SafeNet Luna Network HSM Software Development Kit have been compiled with a component called CkBridge, which uses a configuration file to find the library it is intended to load. Ckbridge first uses the environment variable "ChrystokiConfigurationPath" to locate the corresponding configuration file. If this environment variable is not set, it attempts to locate the configuration file in a default location depending on the product platform (/etc on Unix, and c:\Program Files\SafeNet\LunaClient on Windows).

Configuration files differ from one platform to the next - refer to the appropriate sub-section for the operating system and syntax applicable to your development platform.

#### Windows

In Windows, an initialization file called **crystoki.ini** specifies which library is to be loaded. The syntax of this file is standard to Windows.

The following example shows proper configuration files for Windows:

```
[Chrystoki2]
LibNT=C:\Program Files\SafeNet\LunaClient\cryptoki.dll
[LunaSA Client]
SSLConfigFile=C:\Program Files\SafeNet\LunaClient\openssl.cnf
ReceiveTimeout=20000
NetClient=1
ServerCAFile=C:\Program Files\SafeNet\LunaClient\cert\server\CAFile.pem
ClientCertFile=C:\Program Files\SafeNet\LunaClient\cert\client\ClientNameCert.pem
```

```
ClientPrivKeyFile=C:\Program Files\SafeNet\LunaClient\cert\client\ClientNameKey.pem
[Luna]
DefaultTimeOut=500000
PEDTimeout1=100000
PEDTimeout2=200000
PEDTimeout3=10000
[CardReader]
RemoteCommand=1
```

**CAUTION!** Never insert TAB characters into the `crystoki.ini` (Windows) or `chrystoki.conf` (UNIX) file.

## UNIX

In UNIX, a configuration file called "Chrystoki.conf" is used to guide CkBridge in finding the appropriate library.

The configuration file is a regular text file with a special format. It is made up of a number of sections, each section containing one or multiple entries. The following example shows a typical UNIX configuration file:

```
Chrystoki2 = {
LibUNIX=/usr/lib/libCryptoki2.so;
}
Luna = {
DefaultTimeOut=500000;
PEDTimeout1=100000;
PEDTimeout2=200000;
PEDTimeout3=10000;
KeypairGenTimeOut=2700000;
CloningCommandTimeOut=300000;
}
CardReader = {
RemoteCommand=1;
}
LunaSA Client = {
NetClient = 1;
ServerCAFile = /usr/safenet/lunaclient/cert/server/CAFile.pem;
ClientCertFile = /usr/safenet/lunaclient/cert/client/ClientNameCert.pem;
ClientPrivKeyFile = /usr/safenet/lunaclient/cert/client/ClientNameKey.pem;
SSLConfigFile = /usr/safenet/lunaclient/bin/openssl.cnf;
ReceiveTimeout = 20000;
}
```

The shared object "libcrystoki2.so" is a library supporting version 2.2.0 of the PKCS#11 standard.

**CAUTION!** Never insert TAB characters into the `crystoki.ini` (Windows) or `crystoki.conf` (UNIX) file.

## Compiler Tools

Tools used for SafeNet development are platform specific tools/development environments, where applicable (e.g., Visual C++ on Windows, or Workshop on Solaris). Current version information is provided in the Customer Release Notes.

**NOTE** Contact SafeNet for information about the availability of newer versions of compilers.

## Using CKlog

SafeNet Software Development Kit provides a facility which can record all interactions between an application and the PKCS#11-compliant library. It allows a developer to debug an application by viewing what the library receives.

This tool is known as the Cryptoki Logging Facility or cklog. Cklog is a shim library that an application accesses when seeking our PKCS#11 library. When cklog receives a call it does not service the request. Instead, it logs the call to a file and passes the request to the originally intended library.

### To configure CkLog:

Perform these steps:

1. Direct the application to use the cklog library instead of the regular Chrystoki library. Do this by modifying the configuration file to instruct CkBridge to load the Cklog library.

#### Windows

```
[Chrystoki2]
LibNT=c:\Program Files\SafeNet\LunaClient\cklog201.dll
```

#### Linux/UNIX

```
Chrystoki2 = {
LibUNIX=/usr/lib/libcklog2.so;
```

2. Instruct the cklog library where to access the regular cryptoki library.

#### Windows

```
[CkLog2]
LibNT=c:\Program Files\SafeNet\LunaClient\cryptoki.dll
```

#### Linux/UNIX

```
CkLog2 = {
LibUNIX=/usr/lib/libCryptoki2.so;
}
```

3. Add appropriate entries to the CkLog2 section for the desired level of operation. See the examples and explanations of entries, below.

### Windows Example

The following example shows a typical initialization file under Windows where cklog is in use:

```
[Chrystoki2]
LibNT=c:\Program Files\SafeNet\LunaClient\cklog201.dll
[CkLog2]
LibNT=c:\Program Files\SafeNet\LunaClient\cryptoki.dll
Enabled=1
File=c:\Program Files\SafeNet\LunaClient\cklog2.txt
Error=c:\Program Files\SafeNet\LunaClient\error2.txt
NewFormat=1
LoggingMask=ALL_FUNC
```

### UNIX Example

The following example shows a typical configuration file under UNIX where cklog is in use:



```

Chrystoki2 = {
LibUNIX=/usr/lib/libcklog2.so;
}
CkLog2 = {
LibUNIX=/usr/lib/libCryptoki2.so;
Enabled=1;
File=/tmp/cklog.txt;
Error=/tmp/error.txt;
NewFormat=1;
LoggingMask=ALL_FUNC;
}

```

Here are descriptions of entries that might be applicable:

- > LibNT - references to a Cryptoki library for Windows.
- > LibUNIX - references to a Cryptoki library for UNIX (meaning Solaris, Linux, and AIX).
- > Enabled - 0 or 1. Allows turning the logging facility off or on.
- > File - references the file to which the requests should be logged.
- > Error - references a file where the logging facility can record fatal errors.
- > NewFormat - 0 or 1 disables/enables a more compact output format, which is the format preferred by SafeNet Customer Support

### Selective Logging

When logging is turned on, all functions are logged, by default. If you wish to restrict logging to particular functions of interest only, you can edit the “LoggingMask=” parameter in the `crystoki.ini` [Windows] or `Chrystoki.conf` [UNIX] file to include flags for the desired logging.

### LoggingMask= Flags

Here is the list of possible flags for `cklog`:

Flag	Description
GEN_FUNCS	General functions
SLOT_TOKEN_FUNC	Slot/Token related functions
SESSION_FUNC	Session related functions
OBJ_MNGMNT_FUNC	Object Management functions
ENC_DEC_FUNC	Encrypt/Decrypt related functions
DIGEST_FUNC	Digest Related functions
SIGN_VERIFY_FUNC	Signing/Verifying related functions
KEY_MNGMNT_FUNC	Key Management related functions

Flag	Description
MISC_FUNC	Misc functions
CHRYSALIS_FUNC	SafeNet Extensions functions
ALL_FUNC	All functions logged;

You can mix and match any or all of the flags, using the “|” operator. For example, the following:  
 LoggingMask=GEN\_FUNC | SLOT\_TOKEN\_FUNC | ENC\_DEC\_FUNC | SIGN\_VERIFY\_FUNC;  
 would be valid.

**NOTE** You can use the flags in any order. Using the ALL\_FUNC flag overrides any other flag.  
 If you have the “LoggingMask=” parameter, with NO flags set, then nothing is logged. If logging capability is enabled (cklog), but there is no “LoggingMask=” line, then default behavior prevails and everything is logged.

## Application IDs

Within Chrystoki, each application has an application ID, a 64-bit integer, normally specified in two 32-bit parts. When an application invokes **C\_Initialize**, the Chrystoki library automatically generates a default application ID. The default value is based on the application's process ID, so different applications will always have different application IDs. The application ID is also associated with each session created by the application.

### Shared Login State and Application IDs

PKCS#11 specifies that sessions within an application (a single address space and all threads that execute within it) share a login state, meaning that if one session is logged in, all are logged in. If one logs out, all are logged out. Thus, if process A spawns multiple threads, and all of those threads open sessions on Token #1, then all of those sessions share a login state. If process B also has sessions open on Token #1, they are independent from the sessions of process A. The login state of process B sessions does not affect process A sessions, unless they conflict with one another (e.g. process A logs in as USER when process B is already logged in as SO).

Within Chrystoki and SafeNet tokens, login states are shared by sessions with the same application ID. This means that sessions within an application share a login state, but sessions across separate applications do not. However, Chrystoki does provides functionality allowing applications to alter their application IDs, so that separate applications can share a login state.

**CAUTION!** The ability to share login states through the use of application IDs is a legacy feature. It can eliminate the need for repeated PED authentication across multiple applications, but this is not ideal for security reasons. To avoid these risks, it is recommended to use auto-activation in conjunction with a PED challenge password instead (see "[Activation and Auto-Activation on PED-Authenticated Partitions](#)" on page 1 in the *Administration Guide*).

To change application IDs manually using the LunaCM **appid** command, see "[appid](#)" on page 1 in the *LunaCM Reference Guide*.

### Why Share Login State Between Applications?

For most applications, this is unnecessary. If an application consists of a single perpetual process, unshared session states are sufficient. If the application supports multiple, separately-validated processes, unshared session states are also sufficient. Generally, applications that validate (login) separately are more secure.

It is only necessary to share login state between processes if *all* of the following conditions are true:

- > the application designer wants to require only one login action by the user
- > the application consists of multiple processes, each with their own sessions
- > the system uses SafeNet CA3 tokens

The SafeNet CA3 token provides FIPS 140-1 level 3 security by using a separate port for password entry (where PINs take the form of special data keys). Use of these keys prevents an application from caching a password and using it to log in with multiple sessions. To log in to separate processes simultaneously, login state between those processes must be shared.

### Login State Sharing Overview

The simplest form of the Chrystoki state-sharing functionality is the **CA\_SetApplicationID** function. This function should be invoked after **C\_Initialize**, but before any sessions are opened. Two separate applications can use this function to set their application IDs to the same value, and thus allow them to share login states between their sessions.

Alternatively, set the **AppIdMajor** and **AppIdMinor** fields in the Misc section of the Chrystoki configuration file. This causes default application IDs for all applications to be generated from these fields, rather than from each application's process ID. When these fields are set, all applications on a host system will share login state between their sessions, unless individual applications use the **CA\_SetApplicationID** function.

### Example

A sample configuration file (**crystoki.ini** for Windows) using explicit application IDs is duplicated here:

```
[Chrystoki2]
LibNT=D:\Program Files\SafeNet\LunaClient\cryptoki.dll
[Luna]
DefaultTimeOut=500000
PEDTimeout1=100000
PEDTimeout2=200000
[CardReader]
RemoteCommand=1
[Misc]
AppIdMajor=2
AppIdMinor=4
```

Problems may still arise. When all sessions of a particular application ID are closed, that application ID reverts to a dormant state. When another session for that application ID is created, the application ID is recreated, but always in the logged-out state, regardless of the state it was in when it went dormant.

For example, consider an application where a parent process sets its application ID, opens a session, logs the session in, then closes the session and terminates. Several child processes then set their application IDs, open sessions and try to use them. However, since the application ID went dormant when the parent process closed its session, the child processes find their sessions logged out. The logged-in state of the parent process's session was lost when it closed its session.

The **CA\_OpenApplicationID** function can ensure that the login state of an application ID is maintained, even when no sessions belonging to that application ID exist. When **CA\_OpenApplicationID** is invoked, the application ID is tagged so that it never goes dormant, even if no open sessions exist.

**NOTE** Running **CA\_OpenApplication\_ID** does not set the application ID for the current process. You must first explicitly run **CA\_SetApplicationID** to do this.

### Login State Sharing Functions

Use the following functions to configure and manage login state sharing:

#### CA\_SetApplicationID

```
CK_RV CK_ENTRY CA_SetApplicationID(
    CK_ULONG ulHigh,
    CK_ULONG ulLow
);
```

The **CA\_SetApplicationID** function allows an application to set its own application ID, rather than letting the application ID be generated automatically from the application's process ID. **CA\_SetApplicationID** should be invoked after **C\_Initialize**, but before any session manipulation functions are invoked. If **CA\_SetApplicationID** is invoked after sessions have been opened, results will be unpredictable.

**CA\_SetApplicationID** always returns **CKR\_OK**.

#### CA\_OpenApplicationID

```
CK_RV CK_ENTRY CA_OpenApplicationID(
    CK_SLOT_ID slotID,
    CK_ULONG ulHigh,
    CK_ULONG ulLow
);
```

The **CA\_OpenApplicationID** function forces a given application ID on a given token to remain active, even when all sessions belonging to the application ID have been closed. Normally, an application ID on a token goes dormant when the last session that belongs to the application ID is closed. When an application ID goes dormant, login state is lost, so when a new session is created within the application ID, it starts in the logged-out state. However, if **CA\_OpenApplicationID** is used, the application ID is prevented from going dormant, so login state is maintained even when all sessions for an application ID are closed.

**NOTE** Running **CA\_OpenApplicationID** does not set the application ID for the current process. You must first explicitly run **CA\_SetApplicationID** to do this.

**CA\_OpenApplicationID** can return **CKR\_SLOT\_ID\_INVALID** or **CKR\_TOKEN\_NOT\_PRESENT**.

### CA\_CloseApplicationID

```
CK_RV CK_ENTRY CA_CloseApplicationID(
    CK_SLOT_ID slotID,
    CK_ULONG ulHigh,
    CK_ULONG ulLow
);
```

The **CA\_CloseApplicationID** function removes the property of an application ID that prevents it from going dormant. **CA\_CloseApplicationID** also closes any open sessions owned by the given application ID. Thus, when **CA\_CloseApplicationID** returns, all open sessions owned by the given application ID have been closed and the application ID has gone dormant.

**CA\_CloseApplicationID** can return **CKR\_SLOT\_ID\_INVALID** or **CKR\_TOKEN\_NOT\_PRESENT**.

### Application ID Examples

The following code fragments show how two separate applications might share a single application ID:

```
app 1:          app 2:
C_Initialize()
CA_SetApplicationID(3,4)
C_OpenSession()
C_Login()

                C_Initialize()
                CA_SetApplicationID(3,4)
                C_OpenSession()
                C_GetSessionInfo()
                // Session info shows session
                // already logged in.
                <perform work, no login
                necessary>

C_Logout()

                C_GetSessionInfo()
                // Session info shows session
                // logged out.

C_CloseSession()
                C_CloseSession()
C_Finalize()
                C_Finalize()
```

The following code fragments show how one process might login for others:

#### Setup app:

```
C_Initialize()
CA_SetApplicationID(7,9)
CA_OpenApplicationID(slot,7,9)
C_OpenSession(slot)
C_Login()
C_CloseSession()
```

#### Spawn many child applications:

```
C_Finalize()
```

Terminate each child app:

```
C_Initialize()
CA_SetApplicationID(7,9)
C_OpenSession(slot)
<perform work, no login necessary>
```

Takedown app:

Terminate child applications:

```
C_CloseSession()
C_Finalize()
C_Initialize()
CA_CloseApplicationID(slot,7,9)
C_Finalize()
```

## Named Curves and User-Defined Parameters

SafeNet Luna Network HSM is a PKCS#11-oriented device. The HSM firmware statically defines NIST named curve OIDs and curve parameters by default. You can also define other non-NIST curve OIDs and parameters such as Brainpool. SafeNet Luna Network HSM can decode and use the `ecParameters` structure for key generation, signing, and verification.

### Curve Validation Limitations

The HSM can validate the curve parameters, but domain parameter validation guarantees only the consistency/sanity of the parameters and the most basic, well-known security properties. The HSM has no way of judging the quality of a user-specified curve.

It is therefore important that you perform Known Answer Tests to verify the operation of the HSM for any new Domain Parameter.set. To maintain NIST-FIPS compatibility the feature is selectively enabled with the feature being disabled by default. Therefore the Administrator must 'opt-in' by actively choosing to enable the appropriate HSM policy. Among other effects, this causes the HSM to display a shell/console message to the effect that the HSM is not operating in FIPS mode.

### Storing Domain Parameters

Under PKCS#11 v2.20, Domain Parameters are stored in object attribute `CKA_EC_PARAMS`. The value of this parameter is the DER encoding of an ANSI X9.62 Parameters value.

```
Parameters ::= CHOICE {
ecParameters ECParameters,
namedCurve CURVES.&id({CurveNames}),
implicitlyCA NULL
}
```

Because PKCS#11 states that the `implicitlyCA` is not supported by cryptoki, therefore the `CKA_EC_PARAMS` attribute must contain the encoding of an `ecParameters` or a `namedCurve`. Cryptoki holds ECC key pairs in separate Private and Public key objects. Each object has its own `CKA_EC_PARAMS` attribute which must be provided when the object is created and cannot be subsequently changed.

Cryptoki also supports CKO\_DOMAIN\_PARAMETERS objects. These store Domain Parameters but perform no cryptographic operations. A Domain Parameters object is really only for storage. To generate a key pair, you must extract the attributes from the Domain Parameters object and insert them in the CKA\_EC\_PARAMS attribute of the Public key template. Cryptoki can create new ECC Public and Private key objects and Domain Parameters objects in the following ways:

- > Objects can be directly stored using the C\_CreateObject command.
- > Public and private key objects can be generated internally with the C\_GenerateKeyPair command and the CKM\_EC\_KEY\_PAIR\_GEN mechanism.
- > Objects can be imported in encrypted form using C\_UnwrapKey command.

## Using Domain Parameters

ECC keys may be used for Signature Generation and Verification with the CKM\_ECDSA and CKM\_ECDSA\_SHA1 mechanism and Encryption and Decryption with the CKM\_ECIES mechanism. These three mechanism are enhanced so that they fetch the Domain Parameters from the CKA\_EC\_PARAMS attribute for both ecParameters and namedCurve choice and not just namedCurve choice.

## User Friendly Encoder

Using ECC with Cryptoki to create or generate ECC keys requires that the CKA\_EC\_PARAMS attribute be specified. This is a DER encoded binary array. Usually in public documents describing ECC curves the Domain Parameters are specified as a series of printable strings so the programmer faces the problem of converting these to the correct format for Cryptoki use.

The cryptoki library is extended to support functions called CA\_EncodeECPrimeParams and CA\_EncodeECChar2Params which allow an application to specify the parameter details of a new curve. These functions implement DER encoders to build the CKA\_EC\_PARAMS attribute from large integer presentations of the Domain Parameter values.

Refer to "[Sample Domain Parameter Files](#)" on page 306.

## Application Interfaces

### CA\_EncodeECPrimeParams

```
#include "cryptoki.h"
```

```
CK_RV CA_EncodeECPrimeParams (
    CK_BYTE_PTR DerECParams, CK_ULONG_PTR DerECParams Len
    CK_BYTE_PTR prime, CK_USHORT primelen,
    CK_BYTE_PTR a, CK_USHORT alen,
    CK_BYTE_PTR b, CK_USHORT blen,
    CK_BYTE_PTR seed, CK_USHORT seedlen,
    CK_BYTE_PTR x, CK_USHORT xlen,
    CK_BYTE_PTR y, CK_USHORT ylen,
    CK_BYTE_PTR order, CK_USHORT orderlen,
    CK_BYTE_PTR cofactor, CK_USHORT cofactorlen,
);
```

Do DER enc of ECC Domain Parameters Prime

**Parameters**

<b>DerECPParams</b>	Resultant Encoding (length prediction supported if NULL).
<b>DerECPParamsLen</b>	Buffer len/Length of resultant encoding
<b>prime</b>	Prime modulus
<b>primelen</b>	Prime modulus len
<b>a</b>	Elliptic Curve coefficient a
<b>alen</b>	Elliptic Curve coefficient a length
<b>b</b>	Elliptic Curve coefficient b
<b>blen</b>	Elliptic Curve coefficient b length
<b>seed</b>	Seed (optional may be NULL)
<b>seedlen</b>	Seed length
<b>x</b>	Elliptic Curve point X coord
<b>xlen</b>	Elliptic Curve point X coord length
<b>y</b>	Elliptic Curve point Y coord
<b>ylen</b>	Elliptic Curve point Y coord length
<b>order</b>	Order n of the Base Point
<b>orderlen</b>	Order n of the Base Point length
<b>cofactor</b>	The integer $h = \#E(F_q)/n$ (optional)
<b>cofactorlen</b>	h length
<b>Return</b>	Status of operation. CKR_OK if ok.

**CA\_EncodeECChar2Params**

```
#include "cryptoki.h"
CK_RV CA_EncodeECChar2Params (
    CK_BYTE_PTR DerECPParams,    CK_ULONG_PTR DerECPParams Len
    CK_USHORT m,
    CK_USHORT k1,
    CK_USHORT k2,
    CK_USHORT k3,
    CK_BYTE_PTR a, CK_USHORT alen,
    CK_BYTE_PTR b, CK_USHORT blen,
```



```

CK_BYTE_PTR seed,CK_USHORT seedlen,
CK_BYTE_PTR x,CK_USHORT xlen,
CK_BYTE_PTR y,CK_USHORT ylen,
CK_BYTE_PTR order,CK_USHORT orderlen,
CK_BYTE_PTR cofactor,CK_USHORT cofactorlen,
);

```

Do DER enc of ECC Domain Parameters  $2^M$

## Parameters

<b>DerECPParams</b>	Resultant Encoding (length prediction supported if NULL).
<b>DerECPParamsLen</b>	Buffer len/Length of resultant encoding
<b>M</b>	Degree of field
<b>k1</b>	parameter in trinomial or pentanomial basis polynomial
<b>k2</b>	parameter in pentanomial basis polynomial
<b>k3</b>	parameter in pentanomial basis polynomial
<b>a</b>	Elliptic Curve coefficient a
<b>alen</b>	Elliptic Curve coefficient a length
<b>b</b>	Elliptic Curve coefficient b
<b>blen</b>	Elliptic Curve coefficient b length
<b>seed</b>	Seed (optional may be NULL)
<b>seedlen</b>	Seed length
<b>x</b>	Elliptic Curve point X coord
<b>xlen</b>	Elliptic Curve point X coord length
<b>y</b>	Elliptic Curve point Y coord
<b>ylen</b>	Elliptic Curve point Y coord length
<b>order</b>	Order n of the Base Point
<b>orderlen</b>	Order n of the Base Point length
<b>cofactor</b>	The integer $h = \#E(F_q)/n$ (optional)





```
# Curve name brainpoolP160r1

p      = E95E4A5F737059DC60DFC7AD95B3D8139515620F
a      = 340E7BE2A280EB74E2BE61BADA745D97E8F7C300
b      = 1E589A8595423412134FAA2DBDEC95C8D8675E58
x      = BED5AF16EA3F6A4F62938C4631EB5AF7BDBCDBC3
y      = 1667CB477A1A8EC338F94741669C976316DA6321
q      = E95E4A5F737059DC60DF5991D45029409E60FC09
h      = 1
```

### brainpoolP512r1

```
#
#This file describes the domain parameters of an EC curve
#
#File contains lines of text. All lines not of the form key=value are ignored.
#All values must be Hexidecimal numbers except m, k, k1, k2 and k3 which are decimal.
#Lines starting with '#' are comments.
#
#Keys recognised for fieldID values are -
#p          - only if the Curve is based on a prime field
#m          - only if the curve is based on a 2^M field
#k1, k2, k3 - these three only if 2^M field
#
#You should have these combinations of fieldID values -
#p          - if Curve is based on a prime field
#m,k1,k2,k3 - if curve is based on 2^M
#
#These are the values common to prime fields and polynomial fields.
#a          - field element A
#b          - field element B
#s          - this one is optional
#x          - field element Xg of the point G
#y          - field element Yg of the point G
#q          - order n of the point G
#h          - (optional) cofactor h
#
#
# Curve name brainpoolP512r1

p=AADD9DB8DBE9C48B3FD4E6AE33C9FC07CB308DB3B3C9D20ED6639CCA703308717D4D9B009BC66842AECDA12AE6A380E
62881FF2F2D82C68528AA6056583A48F3
a=7830A3318B603B89E2327145AC234CC594CBDD8D3DF91610A83441CAEA9863BC2DED5D5AA8253AA10A2EF1C98B9AC8B
57F1117A72BF2C7B9E7C1AC4D77FC94CA
b=3DF91610A83441CAEA9863BC2DED5D5AA8253AA10A2EF1C98B9AC8B57F1117A72BF2C7B9E7C1AC4D77FC94CADC083E6
7984050B75EBAE5DD2809BD638016F723
x=81AEE4BDD82ED9645A21322E9C4C6A9385ED9F70B5D916C1B43B62EEF4D0098EFF3B1F78E2D0D48D50D1687B93B97D5
F7C6D5047406A5E688B352209BCB9F822
y=7DDE385D566332ECC0EABFA9CF7822FDF209F70024A57B1AA000C55B881F8111B2DCDE494A5F485E5BCA4BD88A2763A
ED1CA2B2FA8F0540678CD1E0F3AD80892
q=AADD9DB8DBE9C48B3FD4E6AE33C9FC07CB308DB3B3C9D20ED6639CCA70330870553E5C414CA92619418661197FAC104
71DB1D381085DDADDB58796829CA90069
h      = 1
```

### Bad Parameter File

```
#
#This file describes the domain parameters of an EC curve
#
```



SECG	ANSI X9.62	NIST
sect233k1		NIST K-233
sect233r1		NIST B-233
sect239k1		
sect283k1		NIST K-283
sect283r1		NIST B-283
sect409k1		NIST K-409
sect409r1		NIST B-409
sect571k1		NIST K-571
sect571r1		NIST B-571
secp160k1		
secp160r1		
secp160r2		
secp192k1		
secp192r1	prime192v1	NIST P-192
secp224k1		
secp224r1		NIST P-224
secp256k1		
secp256r1	prime256v1	NIST P-256
secp256r1		NIST P-384
secp521r1		NIST P-521

For additional information about the Elliptic Curve specification, see this article:

<http://www.ietf.org/rfc/rfc4492.txt>

## Capability and Policy Configuration Control Using the SafeNet API

The configuration and control of the SafeNet Luna Network HSM is provided by a set of capabilities and policies which you can query and set using the SafeNet API. See for more information.

### HSM Capabilities and Policies

Each HSM has a set of capabilities. An HSM's capability set defines and controls the behavior of the HSM.

HSM behavior can be further modified through changing policies. The HSM Admin can refine the behavior of an HSM by changing the policy settings.

### HSM Partition Capabilities and Policies

Each HSM can support one-or-more virtual HSMs called HSM Partitions (may also be called “containers” in some areas of the API), which are used by properly authenticated remote clients to perform cryptographic operations.

Each HSM Partition has a set of capabilities. An HSM Partition's capability set defines and controls the behavior of the HSM partition.

HSM Partition behavior can be further modified through changing policies. The HSM Admin can refine the behavior of an HSM Partition by changing the policy settings. Different partitions can have different values for the configuration elements which apply to specific HSM Partitions – in other words, if a policy is set to a given value for one HSM Partition, the policy can be set to a different value for another HSM Partition on the same HSM.

In some cases, a partition policy change is destructive.

### Policy Refinement

For every policy set element, there is a corresponding capability set element (the reverse is not true – there can be some capability set elements that do not have corresponding policy set elements). The value of a policy set element can be modified by the HSM Admin, but only within the limitations imposed by the corresponding capability set element.

For example, there is a policy set element which determines how many failed login attempts may be made before a Partition is deleted or locked out. There is also a corresponding capability set element for the same purpose. The policy element may be modified by the HSM Admin, but may only be set to a value less than or equal to that of the capability set element. So if the capability set element has a value of 10, the HSM Admin can set the policy to a value less than or equal to 10.

In general, the HSM Admin may modify policy set elements to make the HSM or partition policy more restrictive than that imposed by the capability set elements. The HSM Admin can not make the HSM or HSM Partition policy less restrictive or enable functionality that is disabled through capability settings.

### Policy Types

There are three types of policy elements, as follows:

<b>Normal policy elements</b>	May be set at any time by the HSM Admin. The values which may be set are limited only by the corresponding capability element as described in the previous section (i.e. the policy element can be set only to a value less than or equal to the capability set element).
<b>Destructive policy elements</b>	May be set at any time, but setting them results in the erasure of any partitions and their contents. Policy elements are destructive if changing them significantly affects the security policy of the HSM.
<b>Write-restricted policy elements</b>	Cannot be modified directly, but instead are affected by other actions that can be taken.

## Querying and Modifying HSM Configuration

The following are the relevant functions (found in **sfnt\_extensions.h**):

- > CK\_RV CK\_ENTRY CA\_GetConfigurationElementDescription(
- > CK\_SLOT\_ID slotID,
- > CK\_ULONG ullsContainerElement,
- > CK\_ULONG ullsCapabilityElement,
- > CK\_ULONG ulElementId,
- > CK\_ULONG\_PTR pulElementBitLength,
- > CK\_ULONG\_PTR pulElementDestructive,
- > CK\_ULONG\_PTR pulElementWriteRestricted,
- > CK\_CHAR\_PTR pDescription);
- > CK\_RV CK\_ENTRY CA\_GetHSMCapabilitySet(
- > CK\_SLOT\_ID uPhysicalSlot,
- > CK\_ULONG\_PTR pulCapIdArray,
- > CK\_ULONG\_PTR pulCapIdSize,
- > CK\_ULONG\_PTR pulCapValArray,
- > CK\_ULONG\_PTR pulCapValSize );
- > CK\_RV CK\_ENTRY CA\_GetHSMCapabilitySetting (
- > CK\_SLOT\_ID slotID,
- > CK\_ULONG ulPolicyId,
- > CK\_ULONG\_PTR pulPolicyValue);
- > CK\_RV CK\_ENTRY CA\_GetHSMPolicySet(
- > CK\_SLOT\_ID uPhysicalSlot,
- > CK\_ULONG\_PTR pulPolicyIdArray,
- > CK\_ULONG\_PTR pulPolicyIdSize,



```
> CK_ULONG_PTR pulPolicyValArray,  
> CK_ULONG_PTR pulPolicyValSize );  
> CK_RV CK_ENTRY CA_GetHSMPolicySetting (  
> CK_SLOT_ID slotID,  
> CK_ULONG ulPolicyId,  
> CK_ULONG_PTR pulPolicyValue);  
> CK_RV CK_ENTRY CA_GetContainerCapabilitySet(  
> CK_SLOT_ID uPhysicalSlot,  
> CK_ULONG ulContainerNumber,  
> CK_ULONG_PTR pulCapIdArray,  
> CK_ULONG_PTR pulCapIdSize,  
> CK_ULONG_PTR pulCapValArray,  
> CK_ULONG_PTR pulCapValSize );  
> CK_RV CK_ENTRY CA_GetContainerCapabilitySetting (  
> CK_SLOT_ID slotID,  
> CK_ULONG ulContainerNumber,  
> CK_ULONG ulPolicyId,  
> CK_ULONG_PTR pulPolicyValue);  
> CK_RV CK_ENTRY CA_GetContainerPolicySet(  
> CK_SLOT_ID uPhysicalSlot,  
> CK_ULONG ulContainerNumber,  
> CK_ULONG_PTR pulPolicyIdArray,  
> CK_ULONG_PTR pulPolicyIdSize,  
> CK_ULONG_PTR pulPolicyValArray,  
> CK_ULONG_PTR pulPolicyValSize );  
> CK_RV CK_ENTRY CA_GetContainerPolicySetting(  
> CK_SLOT_ID uPhysicalSlot,  
> CK_ULONG ulContainerNumber,  
> CK_ULONG ulPolicyId,  
> CK_ULONG_PTR pulPolicyValue);  
> CK_RV CK_ENTRY CA_SetHSMPolicy (  
> CK_SESSION_HANDLE hSession,  
> CK_ULONG ulPolicyId,  
> CK_ULONG ulPolicyValue);  
> CK_RV CK_ENTRY CA_SetDestructiveHSMPolicy (  

```

- > CK\_SESSION\_HANDLE hSession,
- > CK\_ULONG ulPolicyId,
- > CK\_ULONG ulPolicyValue);
- > CK\_RV CK\_ENTRY CA\_SetContainerPolicy (
- > CK\_SESSION\_HANDLE hSession,
- > CK\_ULONG ulContainer,
- > CK\_ULONG ulPolicyId,
- > CK\_ULONG ulPolicyValue);

### The CA\_GetConfigurationElementDescription() Function

The **CA\_GetConfigurationElementDescription()** function requires that you pass in a zero or one value to indicate whether the element you are querying is an HSM Partition (container) element or an HSM element, and another zero/one value to define whether it is a capability or policy that you are interested in. You also pass in the id of the element and a character buffer of at least 60 characters. The function then returns the size of the element value (in bits), an indication of whether the element is destructive, an indication of whether the policy (if it is a policy) is write-restricted, and it also writes the description string into the buffer that you provided.

### The CA\_Get{HSM|Container}{Capability|Policy}Set() Functions

The various **CA\_Get{HSM|Container}{Capability|Policy}Set()** functions all return (in the word arrays provided) a complete list of element id/value pairs for the set specified. For example, **CA\_GetHSMCapabilitySet()** returns a list of all HSM capability elements and their values. The parameters for these functions include a list pointer and length pointer for each of the element ids and element values. On calling the function, you should provide a buffer or a null pointer for each of the lists, and the length value should be initialized to the size of the buffer. On return, the buffer (if given) is populated, and the length is updated to the real length of the list. If the buffer is given but is not large enough, an error results.

Typically you would invoke the function twice: call the function the first time with null buffer pointers so that the real length necessary is returned, then allocate the necessary buffers and call the function a second time, giving the real buffers.

The various **CA\_Get{HSM|Container}{Capability|Policy}Setting()** functions allow you to query a specific element value. Provide the element id and the function returns the value.

### The CA\_Set...() Functions

The various **CA\_Set...()** functions allow you to set individual HSM and HSM Partition policies. There are two varieties for setting HSM policies, because changing the value of a destructive HSM policy results in the HSM being cleared of any Partitions and their contents. To make it clear when this is going to happen, the appropriate set function must be called based on whether the HSM policy is destructive or not (which you can determine with the **CA\_GetConfigurationElementDescription()** function).

## Connection Timeout

The connection timeout is not configurable.

## Linux and Unix Connection Timeout

On Unix platforms, the client performs a **connect** on the socket. If the socket is busy or unavailable, the client performs a **select** on the socket with the timeout set to 10 seconds (hardcoded). If the **select** call returns before the timeout, then the client is able to connect. If not then it fails. This prevents the situation where some Unix operating systems can block for several minutes when SafeNet Luna Network HSM is unavailable.

## Windows Connection Timeout

On Windows platforms, **connect** is called without **select**, relying upon the default Windows timeout of approximately 20 seconds.

# CHAPTER 6: Design Considerations

This chapter provides guidance for creating applications that use specific SafeNet Luna Network HSM configurations or features. It contains the following topics:

- > ["PED-Authenticated HSMs" below](#)
- > ["High Availability \(HA\) Implementations" on page 318](#)
- > ["Key Attribute Defaults" on page 320](#)
- > ["Object Usage Count" on page 322](#)
- > ["Migrating Keys From Software to a SafeNet Luna Network HSM" on page 325](#)
- > ["Audit Logging" on page 349](#)

## PED-Authenticated HSMs

---

In systems or applications using SafeNet Luna Network HSMs, Luna PED is required for FIPS 140-2 level 3 security. In normal use, Luna PED supplies PINs and certain other critical security parameters to the token/HSM, invisibly to the user. This prevents other persons from viewing PINs, etc. on a computer screen or watching them typed on a keyboard, which in turn prevents such persons from illicitly cloning token or HSM contents.

Two classes of users operate Luna PED: the ordinary HSM Partition Owner, and the HSM Administrator, (also called Security Officer or SO). The person handling new HSMs and using Luna PED is normally the HSM SO, who:

- > Initializes the HSM
- > Conducts HSM maintenance, such as firmware and capability upgrades
- > Initializes HSM Partitions and tokens
- > Creates users (sets PINs)
- > Changes policy settings
- > Changes passwords

Following these initial activities, the Luna PED may be required to present the HSM Partition Owner's PED key or keys (in case of MofN operations) to enable ordinary signing cryptographic operations carried out by your applications.

With the combination of Activation and AutoActivation, the black PED key is required only upon initial authentication and then not again unless the authentication is interrupted by power failure or by deliberate action on the part of the PED key holders.

## About CKDemo with Luna PED

As its name suggests, CKDemo (CryptoKi Demonstration) is a demonstration program, allowing you to explore the capabilities and functions of several SafeNet products. The demo program breaks out a number of PKCS 11 functions, as well as the SafeNet extensions to Cryptoki that allow the enhanced capabilities of our HSMs. However the flexibility, combined with the bare-bones nature of the program, can result in some confusion as to whether certain operations and combinations are permissible. Where these come up, in the explanation of CKDemo with SafeNet Luna Network HSM with PED [Trusted Path] Authentication, and Luna PED, they are mentioned and explained if necessary.

The demo program appears to make it optional to permit several of the security operations via the keyboard and program interface, or to require that they be done only via the Luna PED keypad. In fact, the option is dictated by the SafeNet Luna Network HSM, as it was configured and shipped from the factory, and cannot be changed by you. That is, you can use CKDemo to work/experiment with either type of SafeNet Luna Network HSM (i.e., SafeNet Luna Network HSM with Password Authentication or SafeNet Luna Network HSM with PED Authentication, requiring Luna PED), but you cannot make one type behave like the other.

Security and design requirements, enforced by the SafeNet Luna Network HSM with PED Authentication HSM, dictate that use of Luna PED be mandatory within the applications that you develop for it.

## Interchangeability

As mentioned above, several secrets and security parameters related to HSMs are imprinted on PED keys which provide "something you have" access control, as opposed to the "something you know" access control provided by password-authenticated HSMs. The HSM can create each type of secret, which is then also imprinted on a suitably labeled PED key. Alternatively, the secret can be accepted from a PED key (previously imprinted by another HSM) and imprinted on the current HSM. This is mandatory for the cloning domain, when HSMs (or HSM partitions) are to clone objects one to the other. It is optional for the other HSM secrets, as a matter of convenience or of your security policy, allowing more than one HSM to be accessed for administration by a single SO (blue PED key holder) or more than one HSM Partition to be administered by a single Partition Owner/User.

PED keys that have never been imprinted are completely interchangeable. They can be used with any modern SafeNet Luna Network HSM, and can be imprinted with any of the various secrets. The self-stick labels are provided as a visual identifier of which type of secret has been imprinted on a PED key, or is about to be imprinted. Imprinted PED keys are tied to their associated HSMs and cannot be used to access HSMs or partitions that have been imprinted with different secrets.

Any Luna PED2 can be used with any SafeNet Luna Network HSM - the PED itself contains no secrets; it simply provides the interface between you and your HSM(s). The exception is that only some Luna PEDs have the capability to be used remotely from the HSM. Any Remote-capable Luna PED2 is interchangeable with any other Remote-capable Luna PED2, and any Luna PED2 (remote-capable or not) is interchangeable with any other when locally connected to a SafeNet Luna Network HSM.

HSM Partitions and Backup Tokens and PED keys can be "re-cycled" for use in different combinations, but this reuse requires re-initializing the HSM(s) and re-imprinting the PED keys with new secrets or security parameters. Re-initializing a token or HSM wipes previous information from it. Re-imprinting a PED key overwrites any previous information it carried (PIN, domain, etc.).

## Startup

Luna PED expects to be connected to a SafeNet Luna Network HSM with Trusted Path Authentication. At power-up, it presents a message showing its firmware version. After a few seconds, the message changes to "Awaiting command..." The Luna PED is waiting for a command from the token/HSM.

The Luna PED screen remains in this status until the CKDemo program, or your own application, initiates a command through the token/HSM.

For the purposes of demonstration, you would now go ahead and create some objects and perform other transactions with the HSM.

**NOTE** To perform most actions you must be logged in. CKDemo may not remind you before you perform actions out-of-order, but it generates error messages after such attempts. If you receive an error message from the program, review your recent actions to determine if you have logged out or closed sessions and then not formally logged into a new session before attempting to create an object or perform other token/HSM actions. When you do wish to end activities, be sure to formally log out and close sessions. An orderly shutdown of your application should include logging out any users and closing all sessions on HSMs.

## Cloning of Tokens

To securely copy the contents of a SafeNet Luna Network HSM Partition to another SafeNet Luna Network HSM Partition (on the same SafeNet Luna Network HSM or on another), you must perform a backup to a SafeNet Luna Backup HSM from the source HSM Partition followed by a restore operation from the Backup HSM to the new destination HSM Partition. This is done via LunaSH command line, and cannot be accomplished via CKDemo.

## High Availability (HA) Implementations

If you use the SafeNet Luna Network HSM HA feature then the calls to the SafeNet Luna Network HSMs are load-balanced. The session handle that the application receives when it opens a session is a virtual one and is managed by the HA code in the library. The actual sessions with the HSM are established by the HA code in the library and hidden from the application and will come and go as necessary to fulfill application level requests.

Before the introduction of HA AutoRecovery, bringing a failed/lost group member back into the group (recovery) was a manual procedure.

The Administration & Maintenance section contains a general description of the how the HA AutoRecovery function works, in practice.

For every PKCS#11 call, the HA recover logic will check to see if we need to perform auto recovery to a disconnected appliance. If there is a disconnected appliance then it will try to reconnect to that appliance before it proceeds with the current PKCS#11 call.

The HA recovery logic is designed in such a way that it will try to reconnect to an appliance only every X secs and N number of times where X is pre-set to one minute, and N is configurable via the VTL utility.

For HA recovery attempts:

- > The default retry interval is 60 seconds.
- > The default number of retries is effectively infinite.

- > The HA configuration section in the **Chrystoki.conf/crystoki.ini** file is created and populated when either the interval or the number of retries is specified in the LunaCM commands ["hagroup retry" on page 1](#) and ["hagroup interval" on page 1](#).

The following is the pseudo code of the HA logic

```
if (disconnected_member > 0 and recover_attempt_count < N and time_now - last_recover_attempt >
X) then
  performance auto recovery
  set last_recover_attempt equal to time_now
  if (recovery failed) then
    increment recover_attempt_count by 1
  else
    decrement disconnected_member by 1
    reset recover_attempt_count to 0
  end if
end if
```

The HA auto recovery design runs within a PKCS#11 call. The responsiveness of recovering a disconnected member is greatly influenced by the frequency of PKCS#11 calls from the user application. Although the logic shows that it will attempt to recover a disconnected client in X secs, in reality, it will not run until the user application makes the next PKCS#11 call.

## Detecting the Failure of an HA Member

When an HA Group member first fails, the HA status for the group shows "device error" for the failed member. All subsequent calls return "token not present", until the member (HSM Partition or PKI token) is returned to service.

Here is an example of two such calls using CKDemo:

```
Enter your choice : 52
Slots available:
  slot#1 - LunaNet Slot
  slot#2 - LunaNet Slot
  slot#3 - HA Virtual Card Slot

Select a slot: 3

HA group 1599447001 status:
  HSM 599447001      - CKR_DEVICE_ERROR
  HSM 78665001      - CKR_OK
Status: Doing great, no errors (CKR_OK)

TOKEN FUNCTIONS
( 1) Open Session   ( 2) Close Session   ( 3) Login
( 4) Logout         ( 5) Change PIN      ( 6) Init Token
( 7) Init Pin       ( 8) Mechanism List  ( 9) Mechanism Info
(10) Get Info       (11) Slot Info       (12) Token Info
(13) Session Info  (14) Get Slot List  (15) Wait for Slot Event
(16) InitToken(ind) (17) InitPin (ind)  (18) Login (ind)
(19) CloneMofN

OBJECT MANAGEMENT FUNCTIONS
(20) Create object (21) Copy object    (22) Destroy object
(23) Object size   (24) Get attribute  (25) Set attribute
(26) Find object   (27) Display Object
```

## SECURITY FUNCTIONS

```
(40) Encrypt file (41) Decrypt file (42) Sign
(43) Verify (44) Hash file (45) Simple Generate Key
(46) Digest Key
```

## HIGH AVAILABILITY RECOVERY FUNCTIONS

```
(50) HA Init (51) HA Login (52) HA Status
```

## KEY FUNCTIONS

```
(60) Wrap key (61) Unwrap key (62) Generate random number
(63) Derive Key (64) PBE Key Gen (65) Create known keys
(66) Seed RNG (67) EC User Defined Curves
```

## CA FUNCTIONS

```
(70) Set Domain (71) Clone Key (72) Set MofN
(73) Generate MofN (74) Activate MofN (75) Generate Token Keys
(76) Get Token Cert (77) Sign Token Cert (78) Generate CertCo Cert
(79) Modify MofN (86) Dup. MofN Keys (87) Deactivate MofN
```

## CCM FUNCTIONS

```
(80) Module List (81) Module Info (82) Load Module
(83) Load Enc Mod (84) Unload Module (85) Module function Call
```

## OTHERS

```
(90) Self Test (94) Open Access (95) Close Access
(97) Set App ID (98) Options
```

## OFFBOARD KEY STORAGE:

```
(101) Extract Masked Object (102) Insert Masked Object
(103) Multisign With Value (104) Clone Object
(105) SIMExtract (106) SIMInsert
(107) SimMultiSign
```

## SCRIPT EXECUTION:

```
(108) Execute Script
(109) Execute Asynchronous Script
(110) Execute Single Part Script
(0) Quit demo
```

Enter your choice : 52

## Slots available:

```
slot#1 - LunaNet Slot
slot#2 - LunaNet Slot
slot#3 - HA Virtual Card Slot
```

Select a slot: 3

## HA group 1599447001 status:

```
HSM 599447001 - CKR_TOKEN_NOT_PRESENT
HSM 78665001 - CKR_OK
```

Status: Doing great, no errors (CKR\_OK)

--- end ---

## Key Attribute Defaults

The following default attribute settings are applied to generated keys/keypairs, and to unwrapped private/secret keys, unless your application specifies different values.



## Management Attributes

Attribute	Default Value			
	Generated Public Keys	Generated Private Keys	Unwrapped Private/Secret Keys	Derived Secret Keys
CKA_TOKEN	0 (FALSE)	0 (FALSE)	0 (FALSE)	0 (FALSE)
CKA_PRIVATE	1 (TRUE) if Crypto Officer logged in 0 (FALSE) if Crypto Officer not logged in	1 (TRUE) if Crypto Officer logged in 0 (FALSE) if Crypto Officer not logged in	1 (TRUE) if Crypto Officer logged in 0 (FALSE) if Crypto Officer not logged in	1 (TRUE) if Crypto Officer logged in 0 (FALSE) if Crypto Officer not logged in
CKA_SENSITIVE	N/A	1 (TRUE)	1 (TRUE)	0 (FALSE)
CKA_MODIFIABLE	1 (TRUE)	1 (TRUE)	1 (TRUE)	1 (TRUE)
CKA_EXTRACTABLE	N/A	0 (FALSE)	0 (FALSE)	0 (FALSE)
CKA_ALWAYS_SENSITIVE	N/A	Always the same value as CKA_SENSITIVE	Always 0 (FALSE)	Inherited from base key(s) depending on CKA_SENSITIVE history*
CKA_NEVER_EXTRACTABLE	N/A	Always the opposite value of CKA_EXTRACTABLE	Always 0 (FALSE)	Inherited from base key(s) depending on CKA_EXTRACTABLE history**

\* CKA\_ALWAYS\_SENSITIVE=1 assures that the key and the key(s) from which it was derived have always been sensitive (CKA\_SENSITIVE=1). If a newly-derived key has CKA\_ALWAYS\_SENSITIVE=0, it means the key(s) from which it derives has had CKA\_SENSITIVE=0 at some point.

\*\* CKA\_NEVER\_EXTRACTABLE=1 assures that the key and the key(s) from which it was derived have never been extractable (CKA\_EXTRACTABLE has always been set to 0). If a newly-derived key has CKA\_NEVER\_EXTRACTABLE=0, it means the key(s) from which it derives has had CKA\_EXTRACTABLE=1 at some point.

## Key Usage Attributes

Attribute	Default Value			
	Generated Public Keys	Generated Private Keys	Unwrapped Private/Secret Keys	Derived Secret Keys
CKA_ENCRYPT	0 (FALSE)	N/A	0 (FALSE)	0 (FALSE)
CKA_DECRYPT	N/A	0 (FALSE)	0 (FALSE)	0 (FALSE)
CKA_WRAP	0 (FALSE)	N/A	0 (FALSE)	0 (FALSE)
CKA_UNWRAP	N/A	0 (FALSE)	0 (FALSE)	0 (FALSE)
CKA_SIGN	N/A	0 (FALSE)	0 (FALSE)	0 (FALSE)
CKA_VERIFY	0 (FALSE)	N/A	0 (FALSE)	0 (FALSE)
CKA_DERIVE	0 (FALSE)	N/A	0 (FALSE)	0 (FALSE)

## Vendor-defined key attributes

KEY ATTRIBUTE	DESCRIPTION
CKA_CCM_PRIVATE	Not used by the Luna HSM; it does not affect any of the HSM functionality. This is an old attribute that was used in the firmware 3.x HSMs, the Luna CA and Luna CA3 products.
CKA_OUID	This is a 12-byte unique identifier for the object, unique across all Luna HSMs. It can be used to identify the object across multiple HSM.
CKA_EKM_UID	This is not used by the Luna HSM, it does not affect any of the HSM functionality. It is intended to be used by our EKM Key Manager SHIM to store a KEY ID, so that the key manager can track keys efficiently. Customer applications should not use this (they should use the CKA_GENERIC_1/2/3 attributes defined below).
CKA_GENERIC_1/2/3	These are not used by the Luna HSM, and do not affect any of the HSM functionality. They are variable length attributes that store an array of CK_BYTE and are provided for customer applications to make use of, to store whatever data they want.

## Object Usage Count

You may wish to create keys that have a limited number of uses. You can set attributes on a key object to track and limit the number of cryptographic operations that object may perform. The relevant attributes are:

- > CKA\_USAGE\_COUNT: the number of operations that have been performed using the key
- > CKA\_USAGE\_LIMIT: the maximum number of operations allowed for the key.

When the limit set by CKA\_USAGE\_LIMIT is reached, attempts to use the key for operations like encrypt/decrypt, sign/verify, etc. will return an error (CKR\_KEY\_NOT\_ACTIVE).

## Setting CKA\_USAGE\_LIMIT on a key using CKDEMO

You can use CKDEMO to set this limit for a specific key on the HSM.

### To set CKA\_USAGE\_LIMIT on a key:

1. Navigate to the SafeNet LunaClient directory and run CKDEMO.
2. Select **Option 1 (Open Session)**.
3. Select **Option 3 (Login)**, select the partition where the key is located, and present the Crypto Officer login credential.
4. If you do not know the key's object handle, select **Option 27 (Display Object)** and enter 0 to view a list of available objects.
5. Select **Option 25 (Set Attribute)** and enter the key's object handle when prompted.
6. Select **Sub-option 1 (Add Attribute)**, and **53 (CKA\_USAGE\_LIMIT)** from the list of attributes.
7. Enter the desired maximum number of uses in hexadecimal (Allowable range: 1 - FFFFFFFF).
8. Select **Option 27** and enter the key's object handle to view the key attributes. When you set CKA\_USAGE\_LIMIT in step 7, CKA\_USAGE\_COUNT is also set, with a value of 0:

```
Enter your choice: 27
```

```
Enter handle of object to display (0 to list available objects) : 247
Object handle=247
CKA_CLASS=0003 (3)
CKA_TOKEN=01
CKA_PRIVATE=01
CKA_LABEL=Generated RSA Private Key
CKA_KEY_TYPE=0000 (0)
CKA_SUBJECT=
CKA_ID=
CKA_SENSITIVE=01
CKA_DECRYPT=01
CKA_UNWRAP=01
CKA_SIGN=01
CKA_SIGN_RECOVER=00
CKA_DERIVE=00
CKA_START_DATE=
CKA_END_DATE=
CKA_MODULUS=bc613525ae8c5b30ca086c0e688f2f0ed6928805bf007d4fc...
CKA_MODULUS_BITS=0400 (1024)
CKA_PUBLIC_EXPONENT=010001
CKA_LOCAL=01
CKA_MODIFIABLE=01
CKA_EXTRACTABLE=01
CKA_ALWAYS_SENSITIVE=01
CKA_NEVER_EXTRACTABLE=00
CKA_CCM_PRIVATE=00
CKA_FINGERPRINT_SHA1=6beddef34f9f5c8023e3422daecd6bd91c2dc40d
CKA_OUID=b00800000300000d1b030100
```

```

CKA_X9_31_GENERATED=00
CKA_EKM_UID=
CKA_USAGE_LIMIT=000e (15)
CKA_USAGE_COUNT=0000 (0)
CKA_GENERIC_1=
CKA_GENERIC_2=
CKA_GENERIC_3=
CKA_FINGERPRINT_SHA256=a8293ea9ddb578bccca644279c9753de4df772958563d259bed28c5d2a2e04e7d

```

```
Status: Doing great, no errors (CKR_OK)
```

Using this key to perform cryptographic operations will now increment the value of CKA\_USAGE\_COUNT.

## Creating multiple keys with CKA\_USAGE\_LIMIT using CKDEMO

If you are creating multiple, usage-limited keys in CKDEMO, you can simplify this procedure by changing a CKDEMO setting. You will then have the option to set a usage limit for all new keys created in that session.

### To create multiple keys with CKA\_USAGE\_LIMIT set:

1. Navigate to the SafeNet LunaClient directory and run CKDEMO.
2. Select **Option 98 (Options)**.
3. Select **Option 10 (Object Usage Counters)**.  
Note that the option value has changed from "disabled" to "selectable".
4. Enter **0** to exit the **(Options)** menu.
5. Open a session and begin creating your new keys. In addition to setting the attributes governing key capabilities, you will be prompted to enter a value for CKA\_USAGE\_LIMIT (in hexadecimal):

```

Select type of key to generate
[ 1] DES      [ 2] DES2   [ 3] DES3      [ 5] CAST3
[ 6] Generic [ 7] RSA    [ 8] DSA      [ 9] DH      [10] CAST5
[11] RC2     [12] RC4    [13] RC5     [14] SSL3   [15] ECDSA
[16] AES     [17] SEED   [18] KCDSA-1024 [19] KCDSA-2048
[20] DSA Domain Param [21] KCDSA Domain Param
[22] RSA X9.31 [23] DH X9.42 [24] ARIA
[25] DH PKCS Domain Param [26] RSA 186-3 Aux Primes
[27] RSA 186-3 Primes [28] DH X9.42 Domain Param
[29] ECDSA with Extra Bits [30] EC Edwards
[31] EC Montgomery
> 7

```

```
Enter Key Length in bits: 1024
```

```
Enter Is Token Attribute [0-1]: 1
```

```
Enter Is Sensitive Attribute [0-1]: 1
```

```
Enter Is Private Attribute [0-1]: 1
```

```
Enter Is Modifiable Attribute [0-1]: 1
```

```
Enter Extractable Attribute [0-1]: 1
```

```
Enter Encrypt/Decrypt Attribute [0-1]: 1
```

```
Enter Sign/Verify Attribute [0-1]: 1
```

```

Enter Wrap/Unwrap Attribute [0-1]: 1

Enter Derive Attribute [0-1]: 1

Would you like to specify a usage count limit? [0-no, 1-yes]: 1

Please enter the limit in HEX: 0E
Generated RSA Public Key:      160 (0x000000a0)
Generated RSA Private Key:     247 (0x000000f7)

Status: Doing great, no errors (CKR_OK)

```

## Migrating Keys From Software to a SafeNet Luna Network HSM

SafeNet Luna Network HSMs expect key material to be in PKCS#8 format. PKCS#8 format follows BER (Basic encoding rules)/DER (distinguished encoding rules) encoding. An example of this format can be found in the document "Some examples of PKCS standards" produced by RSA, and available on their web site (<http://www.rsasecurity.com/rsalabs/pkcs/index.html> at the bottom of the page, under "Related Documents").

Here is an example of a formatted key:

```

0x30,
0x82, 0x04, 0xbc, 0x02, 0x01, 0x00, 0x30, 0x0d, 0x06, 0x09, 0x2a, 0x86,
0x48, 0x86, 0xf7, 0x0d, 0x01, 0x01, 0x01, 0x05, 0x00, 0x04, 0x82, 0x04,
0xa6, 0x30, 0x82, 0x04, 0xa2, 0x02, 0x01, 0x00, 0x02, 0x82, 0x01, 0x01,
0x00, 0xb8, 0xb5, 0x0f, 0x49, 0x46, 0xb5, 0x5d, 0x58, 0x04, 0x8e, 0x52,
0x59, 0x39, 0xdf, 0xd6, 0x29, 0x45, 0x6b, 0x6c, 0x96, 0xbb, 0xab, 0xa5,
0x6f, 0x72, 0x1b, 0x16, 0x96, 0x74, 0xd5, 0xf9, 0xb4, 0x41, 0xa3, 0x7c,
0xe1, 0x94, 0x73, 0x4b, 0xa7, 0x23, 0xff, 0x61, 0xeb, 0xce, 0x5a, 0xe7,
0x7f, 0xe3, 0x74, 0xe8, 0x52, 0x5b, 0xd6, 0x5d, 0x5c, 0xdc, 0x98, 0x49,
0xfe, 0x51, 0xc2, 0x7e, 0x8f, 0x3b, 0x37, 0x5c, 0xb3, 0x11, 0xed, 0x85,
0x91, 0x15, 0x92, 0x24, 0xd8, 0xf1, 0x7b, 0x3d, 0x2f, 0x8b, 0xcd, 0x1b,
0x30, 0x14, 0xa3, 0x6b, 0x1b, 0x4d, 0x27, 0xff, 0x6a, 0x58, 0x84, 0x9e,
0x79, 0x94, 0xca, 0x78, 0x64, 0x01, 0x33, 0xc3, 0x58, 0xfc, 0xd3, 0x83,
0xeb, 0x2f, 0xab, 0x6f, 0x85, 0x5a, 0x38, 0x41, 0x3d, 0x73, 0x20, 0x1b,
0x82, 0xbc, 0x7e, 0x76, 0xde, 0x5c, 0xfe, 0x42, 0xd6, 0x7b, 0x86, 0x4f,
0x79, 0x78, 0x29, 0x82, 0x87, 0xa6, 0x24, 0x43, 0x39, 0x74, 0xfe, 0xf2,
0x0c, 0x08, 0xbe, 0xfa, 0x1e, 0x0a, 0x48, 0x6f, 0x14, 0x86, 0xc5, 0xcd,
0x9a, 0x98, 0x09, 0x2d, 0xf3, 0xf3, 0x5a, 0x7a, 0xa4, 0xe6, 0x8a, 0x2e,
0x49, 0x8a, 0xde,
0x73, 0xe9, 0x37, 0xa0, 0x5b, 0xef, 0xd0, 0xe0, 0x13, 0xac, 0x88, 0x5f,
0x59, 0x47, 0x96, 0x7f, 0x78, 0x18, 0x0e, 0x44, 0x6a, 0x5d, 0xec,
0x6e, 0xed, 0x4f, 0xf6, 0x6a, 0x7a, 0x58, 0x6b, 0xfe, 0x6c, 0x5a, 0xb9,
0xd2, 0x22, 0x3a, 0x1f, 0xdf, 0xc3, 0x09, 0x3f, 0x6b, 0x2e, 0xf1, 0x6d,
0xc3, 0xfb, 0x4e, 0xd4, 0xf2, 0xa3, 0x94, 0x13, 0xb0, 0xbf, 0x1e, 0x06,
0x2e, 0x29, 0x55, 0x00, 0xaa, 0x98, 0xd9, 0xe8, 0x77, 0x84, 0x8b, 0x3f,
0x5f, 0x5e, 0xf7, 0xf8, 0xa7, 0xe6, 0x02, 0xd2, 0x18, 0xb0, 0x52, 0xd0,
0x37, 0x2e, 0x53, 0x02, 0x03, 0x01, 0x00, 0x01, 0x02, 0x82, 0x01, 0x00,
0x0c, 0xdf, 0xd1, 0xe8, 0xf1, 0x9c, 0xc2, 0x9c, 0xd7, 0xf4, 0x73, 0x98,
0xf4, 0x87, 0xbd, 0x8d, 0xb2, 0xe1, 0x01, 0xf8, 0x9f, 0xac, 0x1f, 0x23,
0xdd, 0x78, 0x35, 0xe2, 0xd6, 0xd1, 0xf3, 0x4d, 0xb5, 0x25, 0x88, 0x16,
0xd1, 0x1a, 0x18, 0x33, 0xd6, 0x36, 0x7e, 0xc4, 0xc8, 0xe5, 0x5d, 0x2d,
0x74, 0xd5, 0x39, 0x3c, 0x44, 0x5a, 0x74, 0xb7, 0x7c, 0x48, 0xc1, 0x1f,
0x90, 0xe3, 0x55, 0x9e, 0xf6, 0x29, 0xad, 0xb4, 0x6d, 0x93, 0x78, 0xb3,
0xdc, 0x25, 0x0b, 0x9c, 0x73, 0x78, 0x7b, 0x93, 0x4c, 0xd3, 0x47, 0x09,
0xda, 0xe6, 0x69, 0x18, 0xc6, 0x0f, 0xfb, 0xa5, 0x95, 0xf5, 0xe8, 0x75,

```

0xe1, 0x01, 0x1b, 0xd3, 0x1c, 0xa2, 0x57, 0x03, 0x64, 0xdb, 0xf9, 0x5d,  
 0xf3, 0x3c, 0xa7, 0xd1, 0x4b, 0xb0, 0x90, 0x1b, 0x90, 0x62, 0xb4, 0x88,  
 0x30, 0x4b, 0x40, 0x4d, 0xcf, 0x7d, 0x89, 0x7a, 0xfb, 0x29, 0xc9, 0x64,  
 0x34, 0x0a, 0x52, 0xf6, 0x70, 0x7c, 0x76, 0x5a, 0x2e, 0x8f, 0x50, 0xd4,  
 0x92, 0x15, 0x97, 0xed, 0x4c, 0x2e, 0xf2, 0x3a, 0xd0, 0x58, 0x7e, 0xdb,  
 0xf1, 0xf4, 0xdd, 0x07, 0x76, 0x04, 0xf0, 0x55, 0x8b, 0x72, 0x2b, 0xa7,  
 0xa8, 0x78, 0x78, 0x67, 0xe6, 0xd8, 0xa5, 0xde, 0xe7, 0xc9, 0x1f, 0x5a,  
 0xa0, 0x89, 0xc7, 0x24, 0xa2, 0x71, 0xb6, 0x7b, 0x3b, 0xe6, 0x92, 0x69,  
 0x22, 0xaa, 0xe2, 0x47, 0x4b, 0x80, 0x3f, 0x6a, 0xab, 0xce, 0x4e, 0xcd,  
 0xe8, 0x94, 0x6c, 0xf7, 0x84, 0x73, 0x85, 0xfd, 0x85, 0x1d, 0xae, 0x81,  
 0xf7, 0xec, 0x12, 0x31, 0x7d, 0xc1, 0x99, 0xc0, 0x3c, 0x51, 0xb0, 0xdc,  
 0xb0, 0xba, 0x9c, 0x84, 0xb8, 0x70, 0xc2, 0x09, 0x7f, 0x96, 0x3d, 0xa1,  
 0xe2, 0x64, 0x27, 0x7a, 0x22, 0xb8, 0x75, 0xb9, 0xd1, 0x5f, 0xa5, 0x23,  
 0xf9, 0x62, 0xe0, 0x41, 0x02, 0x81, 0x81, 0x00, 0xf4, 0xf3, 0x08, 0xcf,  
 0x83, 0xb0, 0xab, 0xf2, 0x0f, 0x1a, 0x08, 0xaf, 0xc2, 0x42, 0x29, 0xa7,  
 0x9c, 0x5e, 0x52, 0x19, 0x69, 0x8d, 0x5b, 0x52, 0x29, 0x9c, 0x06, 0x6a,  
 0x5a, 0x32, 0x8f, 0x08, 0x45, 0x6c, 0x43, 0xb5, 0xac, 0xc3, 0xbb, 0x90,  
 0x7b, 0xec, 0xbb, 0x5d, 0x71, 0x25, 0x82, 0xf8, 0x40, 0xbf, 0x38, 0x00,  
 0x20, 0xf3, 0x8a, 0x38, 0x43, 0xde, 0x04, 0x41, 0x19, 0x5f, 0xeb, 0xb0,  
 0x50, 0x59, 0x10, 0xe1, 0x54, 0x62, 0x5c, 0x93, 0xd9, 0xdc, 0x63, 0x24,  
 0xd0, 0x17, 0x00, 0xc0, 0x44, 0x3e, 0xfc, 0xd1, 0xda, 0x4b, 0x24, 0xf7,  
 0xcb, 0x16, 0x35, 0xe6, 0x9f, 0x67, 0x96, 0x5f, 0xb0, 0x94, 0xde, 0xfa,  
 0xa1, 0xfd, 0x8c, 0x8a, 0xd1, 0x5c, 0x02, 0x8d, 0xe0, 0xa0, 0xa0, 0x02,  
 0x1d, 0x56, 0xaf, 0x13, 0x3a, 0x65, 0x5e, 0x8e, 0xde, 0xd1, 0xa8, 0x28,  
 0x8b, 0x71, 0xc9, 0x65, 0x02, 0x81, 0x81, 0x00, 0xc1, 0x0a, 0x47,  
 0x39, 0x91, 0x06, 0x1e, 0xb9, 0x43, 0x7c, 0x9e, 0x97, 0xc5, 0x09, 0x08,  
 0xbc, 0x22, 0x47, 0xe2, 0x96, 0x8e, 0x1c, 0x74, 0x80, 0x50, 0x6c, 0x9f,  
 0xef, 0x2f, 0xe5, 0x06, 0x3e, 0x73, 0x66, 0x76, 0x02, 0xbd, 0x9a, 0x1c,  
 0xfc, 0xf9, 0x6a, 0xb8, 0xf9, 0x36, 0x15, 0xb5, 0x20, 0x0b, 0x6b, 0x54,  
 0x83, 0x9c, 0x86, 0xba, 0x13, 0xb7, 0x99, 0x54, 0xa0, 0x93, 0x0d, 0xd6,  
 0x1e, 0xc1, 0x12, 0x72, 0x0d, 0xea, 0xb0, 0x14, 0x30, 0x70, 0x73, 0xef,  
 0x6b, 0x4c, 0xae, 0xb6, 0xff, 0xd4, 0xbb, 0x89, 0xa1, 0xec, 0xca, 0xa6,  
 0xe9, 0x95, 0x56, 0xac, 0xe2, 0x9b, 0x97, 0x2f, 0x2c, 0xdf, 0xa3, 0x6e,  
 0x59, 0xff, 0xcd, 0x3c, 0x6f, 0x57, 0xcc, 0x6e, 0x44, 0xc4, 0x27, 0xbf,  
 0xc3, 0xdd, 0x19, 0x9e, 0x81, 0x16, 0xe2, 0x8f, 0x65, 0x34, 0xa7, 0x0f,  
 0x22, 0xba, 0xbf, 0x79, 0x57, 0x02, 0x81, 0x80, 0x2e, 0x21, 0x0e, 0xc9,  
 0xb5, 0xad, 0x31, 0xd4, 0x76, 0x0f, 0x9b, 0x0f, 0x2e, 0x70, 0x33, 0x54,  
 0x03, 0x58, 0xa7, 0xf1, 0x6d, 0x35, 0x57, 0xbb, 0x53, 0x66, 0xb4, 0xb6,  
 0x96, 0xa1, 0xea, 0xd9, 0xcd, 0xe9, 0x23, 0x9f, 0x35, 0x17, 0xef, 0x5c,  
 0xb8, 0x59, 0xce, 0xb7, 0x3c, 0x35, 0xaa, 0x42, 0x82, 0x3f, 0x00, 0x96,  
 0xd5, 0x9d, 0xc7, 0xab, 0xec, 0xec, 0x04, 0xb5, 0x15, 0xc8, 0x40, 0xa4,  
 0x85, 0x9d, 0x20, 0x56, 0xaf, 0x03, 0x8f, 0x17, 0xb0, 0xf1, 0x96, 0x22,  
 0x3a, 0xa5, 0xfa, 0x58, 0x3b, 0x01, 0xf9, 0xae, 0xb3, 0x83, 0x6f, 0x44,  
 0xd3, 0x14, 0x2d, 0xb6, 0x6e, 0xd2, 0x9d, 0x39, 0x0c, 0x12, 0x1d, 0x23,  
 0xea, 0x19, 0xcb, 0xbb, 0xe0, 0xcd, 0x89, 0x15, 0x9a, 0xf5, 0xe4, 0xec,  
 0x41, 0x06, 0x30, 0x16, 0x58, 0xea, 0xfa, 0x31, 0xc1, 0xb8, 0x8e, 0x08,  
 0x84, 0xaa, 0x3b, 0x19, 0x02, 0x81, 0x80, 0x70, 0x4c, 0xf8, 0x6e, 0x86,  
 0xed, 0xd6, 0x85, 0xd4, 0xba, 0xf4, 0xd0, 0x3a, 0x32, 0x2d, 0x40, 0xb5,  
 0x78, 0xb8, 0x5a, 0xf9, 0xc5, 0x98, 0x08, 0xe5, 0xc0, 0xab, 0xb2, 0x4c,  
 0x5c, 0xa2, 0x2b, 0x46, 0x9b, 0x3e, 0xe0, 0x0d, 0x49, 0x50, 0xbf, 0xe2,  
 0xa1, 0xb1, 0x86, 0x59, 0x6e, 0x7b, 0x76, 0x6e, 0xee, 0x3b, 0xb6, 0x6d,  
 0x22, 0xfb, 0xb1, 0x68, 0xc7, 0xec, 0xb1, 0x95, 0x9b, 0x21, 0x0b, 0xb7,  
 0x2a, 0x71, 0xeb, 0xa2, 0xb2, 0x58, 0xac, 0x6d, 0x5f, 0x24, 0xd3, 0x79,  
 0x42, 0xd2, 0xf7, 0x35, 0xdc, 0xfc, 0x0e, 0x95, 0x60, 0xb7, 0x85, 0x7f,  
 0xf9, 0x72, 0x8e, 0x4a, 0x11, 0xc3, 0xc2, 0x09, 0x40, 0x5c, 0x7c, 0x43,  
 0x12, 0x34, 0xac, 0x59, 0x99, 0x76, 0x34, 0xcf,  
 0x20, 0x88, 0xb0, 0xfb, 0x39, 0x62, 0x3a, 0x9b, 0x03, 0xa6, 0x84, 0x2c,  
 0x03, 0x5c, 0x0c, 0xca, 0x33, 0x85, 0xf5, 0x02, 0x81, 0x80, 0x56,

```

0x99, 0xe9, 0x17, 0xdc, 0x33, 0xe1, 0x33, 0x8d, 0x5c, 0xba, 0x17, 0x32,
0xb7, 0x8c, 0xbd, 0x4b, 0x7f, 0x42, 0x3a, 0x79, 0x90, 0xe3, 0x70,
0xe3, 0x27, 0xce, 0x22, 0x59, 0x02, 0xc0, 0xb1, 0x0e, 0x57, 0xf5, 0xdf,
0x07, 0xbf, 0xf8, 0x4e, 0x10, 0xef, 0x2a, 0x62, 0x30, 0x03, 0xd4,
0x80, 0xcf, 0x20, 0x84, 0x25, 0x66, 0x3f, 0xc7, 0x4f, 0x56, 0x8c, 0x1e,
0xe1, 0x18, 0x91, 0xc1, 0xfd, 0x71, 0x5f, 0x65, 0x9b, 0xe4, 0x4f,
0xe0, 0x1a, 0x3a, 0xf8, 0xc1, 0x69, 0xdb, 0xd3, 0xbb, 0x8d, 0x91, 0xd1,
0x11, 0x4f, 0x7e, 0x91, 0x1b, 0xb4, 0x27, 0xa5, 0xab, 0x7c, 0x7b,
0x76, 0xd4, 0x78, 0xfe, 0x63, 0x44, 0x63, 0x7e, 0xe3, 0xa6, 0x60, 0x4f,
0xb9, 0x55, 0x28, 0xba, 0xba, 0x83, 0x1a, 0x2d, 0x43, 0xd5, 0xf7,
0x2e, 0xe0, 0xfc, 0xa8, 0x14, 0x9b, 0x91, 0x2a, 0x36, 0xbf, 0xc7, 0x14

```

The example above contains the exponent, the modulus, and private key material.

## Other Formats of Key Material

The format of key material depends on the application, and is therefore unpredictable. Key material commonly exists in any of the following formats; ASN1, PEM, P12, PFX, etc. Key material in those formats, or in another format, can likely be re-formatted to be acceptable for moving onto the SafeNet Luna Network HSM.

## Sample Program

The sample program below encrypts a known RSA private key, then unwraps the key pair onto the SafeNet Luna Network HSM Partition.

```

/*****\
*
* File: UnwrapKey.cpp*
* Encrypts a PrivateKeyInfo structure with a generated DES
  key and then
* unwraps the RSA key onto a token.
*
* This file is provided as an example only.
*
* Copyright (C) 2017, Gemalto, Inc.
*
* All rights reserved. This file contains information that
  is
* proprietary to SafeNet, Inc. and may not be
* distributed or copied without written consent from
* SafeNet, Inc.
*
\*****/
#ifdef UNIX
#define _POSIX_SOURCE 1
#endif
#ifdef USING_STATIC_CHRYSTOKI
# define STATIC  ckdemo_cpp
#endif
#include <assert.h>
#include <iostream.h>
#include <stdio.h>
#include <stdlib.h>
#include <string.h>
#include <fcntl.h>
#include <sys/stat.h>
#include <time.h>
#ifdef _WINDOWS

```

```

#include <conio.h>
#include <io.h>
#include <windows.h>
#endif
#ifdef UNIX
#include <unistd.h>
#endif
#include "source/cryptoki.h"
#include "source/Ckbridge.h"
#define DIM(a) (sizeof(a)/sizeof(a[0]))
CK_BBOOL no = FALSE;
CK_BBOOL yes = TRUE;
const int MAX =100;
// Function Prototypes
CK_RV Pinlogin(CK_SESSION_HANDLE
  hSession);
int getPinString(CK_CHAR_PTR pw);
// Main
int main( void )
{
  int
      error
= 0;
  CK_RV
      retCode
= CKR_OK;
  CK_SESSION_HANDLE
hSessionHandle;
  CK_CHAR_PTR
      userPIN
= (CK_CHAR_PTR)"default";
  CK_USHORT
      lenuserPIN
= 7;
  CK_CHAR_PTR
      soPIN
= (CK_CHAR_PTR)"default";
  CK_USHORT
      lensoPIN
= 7;
  CK_USHORT
      usNumberOfSlots;
  CK_SLOT_ID_PTR
      pSlotList;
  CK_OBJECT_HANDLE
hKey;
  CK_MECHANISM
mech;
  CK_VERSION
version;
  struct
  {
      CK_INFO
info;
      char
reserved[100]; // This is in case the library that we are
                //
                // talking to requires a larger info structure
                //
                // then the one defined.

```



```

    }
    protectedInfo;
//Disclaimer
    cout
    << "\n\n\n\n";
cout << "THE SOFTWARE IS PROVIDED BY SAFENET INCORPORATED
(SAFENET) ON AN 'AS IS' BASIS, \n";
cout << "WITHOUT ANY OTHER WARRANTIES OR CONDITIONS,
EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED \n";
cout << "TO, WARRANTIES OF MERCHANTABILITY,
SATISFACTORY QUALITY, MERCHANTABILITY OR FITNESS FOR\n";
cout << "A PARTICULAR PURPOSE, OR THOSE ARISING
BY LAW, STATUTE, USAGE OF TRADE, COURSE OF DEALING OR\n";
cout << "OTHERWISE. SAFENET
DOES NOT WARRANT THAT THE SOFTWARE WILL MEET YOUR REQUIREMENTS OR \n";
cout << "THAT OPERATION OF THE SOFTWARE WILL BE
UNINTERRUPTED OR THAT THE SOFTWARE WILL BE ERROR-FREE.\n";
cout << "YOU ASSUME THE ENTIRE RISK AS TO THE
RESULTS AND PERFORMANCE OF THE SOFTWARE. NEITHER
\n";
cout << "SAFENET NOR OUR LICENSORS, DEALERS OR
SUPPLIERS SHALL HAVE ANY LIABILITY TO YOU OR ANY\n";
cout << "OTHER PERSON OR ENTITY FOR ANY INDIRECT,
INCIDENTAL, SPECIAL, CONSEQUENTIAL, PUNITIVE, \n";
cout << "EXEMPLARY OR ANY OTHER DAMAGES WHATSOEVER,
INCLUDING, BUT NOT LIMITED TO, LOSS OF REVENUE OR \n";
cout << "PROFIT, LOST OR DAMAGED DATA, LOSS OF
USE OR OTHER COMMERCIAL OR ECONOMIC LOSS, EVEN IF \n";
cout << "SAFENET HAS BEEN ADVISED OF THE POSSIBILITY
OF SUCH DAMAGES, OR THEY ARE FORESEEABLE. \n";
cout << "SAFENET IS ALSO NOT RESPONSIBLE FOR CLAIMS
BY A THIRD PARTY. THE
MAXIMUM AGGREGATE \n";
cout << "LIABILITY OF SAFENET TO YOU AND THAT
OF SAFENET'S LICENSORS, DEALERS AND SUPPLIERS \n";
cout << "SHALL NOT EXCEED FORTY DOLLARS ($40.00CDN).
THE LIMITATIONS
IN THIS SECTION SHALL APPLY \n";
cout << "WHETHER OR NOT THE ALLEGED BREACH OR
DEFAULT IS A BREACH OF A FUNDAMENTAL CONDITION OR TERM \n";
cout << "OR A FUNDAMENTAL BREACH. SOME
STATES/COUNTRIES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF\n";
cout << "LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL
DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO \n";
cout << "YOU.\n";
cout << "THE LIMITED WARRANTY, EXCLUSIVE REMEDIES
AND LIMITED LIABILITY SET OUT HEREIN ARE FUNDAMENTAL \n";
cout << "ELEMENTS OF THE BASIS OF THE BARGAIN
BETWEEN YOU AND SAFENET. \n";
cout << "NO SUPPORT. YOU
ACKNOWLEDGE AND AGREE THAT THERE ARE NO SUPPORT SERVICES PROVIDED BY SAFENET\n";
cout << "INCORPORATED FOR THIS SOFTWARE\n"
<< endl;
//
Display Generic Warning
    cout
    << "\nInsert a token for the test...";
    cout
    << "\n\nWARNING!!! This test initializes the first ";

```

```

    cout
    << " token detected in the card reader.";
    cout
    << "\nDo not use a token that you don't want erased.";
    cout
    << "\nYou can use CTRL-C to abort now...Otherwise...";
    cout
    << "\n\n... press <Enter> key to continue ...\n";
    cout.flush();
    getchar();
    // Wait for keyboard hit
#ifdef STATIC
    //
    Connect to Chrystoki
    if(!CrystokiConnect())
    {
    cout << "\n" "Unable to connect to Chrystoki.
        Error =
        " << LibError() << "\n";
    error = -1;
        goto
        exit_routine_1;
    }
#endif
    //
    Verify this is the version of the library required
    retCode
    = C_GetInfo(&protectedInfo.info);
    if(
    retCode != CKR_OK )
    {
        cout
        << endl << "Unable to call C_GetInfo() before C_Initialize()\n";
    error = -2;
        goto
        exit_routine_2;
    }
    else
    {
        CK_BYTE
        majorVersion = protectedInfo.info.version.major;
        CK_BYTE
        expectedVersion;
#ifdef PKCS11_2_0
        expectedVersion
        = 1;
#else
        expectedVersion
        = 2;
#endif
        if(
        expectedVersion != majorVersion )
        {
            cout
            << endl << "This version of the program was built for
            Cryptoki version "
            <<
            (int)expectedVersion << ".\n"
            <<
            "The loaded Cryptoki library reports its version to be "

```

```

        <<
(int)majorVersion << ".\n"
        <<
"Program will terminate.\n";
        //
Wait to exit until user read message and acknowledges
        cout
<< endl << "Press <Enter> key to end.";
        getchar();
// Wait for keyboard hit
        error
= -3;
        goto
exit_routine_2;
    }
}
//
Initialize the Library
retCode = C_Initialize(NULL);
if(retCode != CKR_OK)
{
cout << "\n" "Error 0x" <<
    hex << retCode << " initializing cryptoki.\n";
error = -4;
        goto
    exit_routine_3;
}
// Get the number of tokens possibly available
retCode = C_GetSlotList(TRUE, NULL, &usNumberOfSlots);
if(retCode != CKR_OK)
{
cout << "\n" "Error 0x" <<
    hex << retCode << " getting slot list.\n";
error = -5;
        goto
    exit_routine_3;
}
// Are any tokens present?
if(usNumberOfSlots == 0)
{
cout << "\n" "No tokens found\n";
error = -6;
        goto
    exit_routine_3;
}
//
Get a list of slots
pSlotList = new CK_SLOT_ID[usNumberOfSlots];
retCode = C_GetSlotList(TRUE, pSlotList, &usNumberOfSlots);
if(retCode != CKR_OK)
{
cout << "\n" "Error 0x" <<
    hex << retCode << " getting slot list.\n";
error = -7;
        goto
    exit_routine_4;
}
//
Open a session
retCode = C_OpenSession(pSlotList[0], CKF_RW_SESSION | CKF_SERIAL_SESSION,

```

```

        NULL,
        NULL, &hSessionHandle);
if(retCode != CKR_OK)
{
cout << "\n" "Error 0x" <<
    hex << retCode << " opening session.\n";
error = -9;
    goto
        exit_routine_4;
}
Pinlogin(hSessionHandle);
if(retCode != CKR_OK)
{
cout << "\n" "Error 0x" <<
    hex << retCode << " Calling PinLogin fn";
exit(hSessionHandle);
}
//
Encrypt an RSA Key and then unwrap it onto the token
{
    //
    The following is an RSA Key that is formatted as a PrivateKeyInfo structure
    //BER
    encoded format
    const
    CK_BYTE pRsaKey[] = {
    0x30,
    0x82, 0x04, 0xbc, 0x02, 0x01, 0x00, 0x30, 0x0d, 0x06, 0x09, 0x2a, 0x86,
    0x48, 0x86, 0xf7, 0x0d, 0x01, 0x01,
    0x01, 0x05, 0x00, 0x04,
    0x82,
    0x04, 0xa6, 0x30, 0x82, 0x04, 0xa2, 0x02, 0x01, 0x00, 0x02, 0x82, 0x01,
    0x01, 0x00, 0xb8, 0xb5, 0x0f, 0x49,
    0x46, 0xb5, 0x5d, 0x58,
    0x04,
    0x8e, 0x52, 0x59, 0x39, 0xdf, 0xd6, 0x29, 0x45, 0x6b, 0x6c, 0x96, 0xbb,
    0xab, 0xa5, 0x6f, 0x72, 0x1b, 0x16,
    0x96, 0x74, 0xd5, 0xf9,
    0xb4,
    0x41, 0xa3, 0x7c, 0xe1, 0x94, 0x73, 0x4b, 0xa7, 0x23, 0xff, 0x61, 0xeb,
    0xce, 0x5a, 0xe7, 0x7f, 0xe3, 0x74,
    0xe8, 0x52, 0x5b, 0xd6,
    0x5d,
    0x5c, 0xdc, 0x98, 0x49, 0xfe, 0x51, 0xc2, 0x7e, 0x8f, 0x3b, 0x37, 0x5c,
    0xb3, 0x11, 0xed, 0x85, 0x91, 0x15,
    0x92, 0x24, 0xd8, 0xf1,
    0x7b,
    0x3d, 0x2f, 0x8b, 0xcd, 0x1b, 0x30, 0x14, 0xa3, 0x6b, 0x1b, 0x4d, 0x27,
    0xff, 0x6a, 0x58, 0x84, 0x9e, 0x79,
    0x94, 0xca, 0x78, 0x64,
    0x01,
    0x33, 0xc3, 0x58, 0xfc, 0xd3, 0x83, 0xeb, 0x2f, 0xab, 0x6f, 0x85, 0x5a,
    0x38, 0x41, 0x3d, 0x73, 0x20, 0x1b,
    0x82, 0xbc, 0x7e, 0x76,
    0xde,
    0x5c, 0xfe, 0x42, 0xd6, 0x7b, 0x86, 0x4f, 0x79, 0x78, 0x29, 0x82, 0x87,
    0xa6, 0x24, 0x43, 0x39, 0x74, 0xfe,
    0xf2, 0x0c, 0x08, 0xbe,

```

```

0xfa,
0x1e, 0x0a, 0x48, 0x6f, 0x14, 0x86, 0xc5, 0xcd, 0x9a, 0x98, 0x09, 0x2d,
0xf3, 0xf3, 0x5a, 0x7a, 0xa4, 0xe6,
0x8a, 0x2e, 0x49, 0x8a, 0xde, 0x73, 0xe9, 0x37, 0xa0, 0x5b,
0xef,
0xd0,
0xe0, 0x13, 0xac, 0x88, 0x5f, 0x59, 0x47, 0x96, 0x7f, 0x78, 0x18, 0x0e,
0x44, 0x6a, 0x5d, 0xec, 0x6e, 0xed,
0x4f, 0xf6, 0x6a, 0x7a,
0x58,
0x6b, 0xfe, 0x6c, 0x5a, 0xb9, 0xd2, 0x22, 0x3a, 0x1f, 0xdf, 0xc3, 0x09,
0x3f, 0x6b, 0x2e, 0xf1, 0x6d, 0xc3,
0xfb, 0x4e, 0xd4, 0xf2,
0xa3,
0x94, 0x13, 0xb0, 0xbf, 0x1e, 0x06, 0x2e, 0x29, 0x55, 0x00, 0xaa, 0x98,
0xd9, 0xe8, 0x77, 0x84, 0x8b, 0x3f,
0x5f, 0x5e, 0xf7, 0xf8,
0xa7,
0xe6, 0x02, 0xd2, 0x18, 0xb0, 0x52, 0xd0, 0x37, 0x2e, 0x53, 0x02, 0x03,
0x01, 0x00, 0x01, 0x02, 0x82, 0x01,
0x00, 0x0c, 0xdf, 0xd1,
0xe8,
0xf1, 0x9c, 0xc2, 0x9c, 0xd7, 0xf4, 0x73, 0x98, 0xf4, 0x87, 0xbd, 0x8d,
0xb2, 0xe1, 0x01, 0xf8, 0x9f, 0xac,
0x1f, 0x23, 0xdd, 0x78,
0x35,
0xe2, 0xd6, 0xd1, 0xf3, 0x4d, 0xb5, 0x25, 0x88, 0x16, 0xd1, 0x1a, 0x18,
0x33, 0xd6, 0x36, 0x7e, 0xc4, 0xc8,
0xe5, 0x5d, 0x2d, 0x74,
0xd5,
0x39, 0x3c, 0x44, 0x5a, 0x74, 0xb7, 0x7c, 0x48, 0xc1, 0x1f, 0x90, 0xe3,
0x55, 0x9e, 0xf6, 0x29, 0xad, 0xb4,
0x6d, 0x93, 0x78, 0xb3,
0xdc,
0x25, 0x0b, 0x9c, 0x73, 0x78, 0x7b, 0x93, 0x4c, 0xd3, 0x47, 0x09, 0xda,
0xe6, 0x69, 0x18, 0xc6, 0x0f, 0xfb,
0xa5, 0x95, 0xf5, 0xe8,
0x75,
0xe1, 0x01, 0x1b, 0xd3, 0x1c, 0xa2, 0x57, 0x03, 0x64, 0xdb, 0xf9, 0x5d,
0xf3, 0x3c, 0xa7, 0xd1, 0x4b, 0xb0,
0x90, 0x1b, 0x90, 0x62,
0xb4,
0x88, 0x30, 0x4b, 0x40, 0x4d, 0xcf, 0x7d, 0x89, 0x7a, 0xfb, 0x29, 0xc9,
0x64, 0x34, 0x0a, 0x52, 0xf6, 0x70,
0x7c, 0x76, 0x5a, 0x2e,
0x8f,
0x50, 0xd4, 0x92, 0x15, 0x97, 0xed, 0x4c, 0x2e, 0xf2, 0x3a, 0xd0, 0x58,
0x7e, 0xdb, 0xf1, 0xf4, 0xdd, 0x07,
0x76, 0x04, 0xf0, 0x55,
0x8b,
0x72, 0x2b, 0xa7, 0xa8, 0x78, 0x78, 0x67, 0xe6, 0xd8, 0xa5, 0xde, 0xe7,
0xc9, 0x1f, 0x5a, 0xa0, 0x89, 0xc7,
0x24, 0xa2, 0x71, 0xb6,
0x7b,
0x3b, 0xe6, 0x92, 0x69, 0x22, 0xaa, 0xe2, 0x47, 0x4b, 0x80, 0x3f, 0x6a,
0xab, 0xce, 0x4e, 0xcd, 0xe8, 0x94,
0x6c, 0xf7, 0x84, 0x73,
0x85,
0xfd, 0x85, 0x1d, 0xae, 0x81, 0xf7, 0xec, 0x12, 0x31, 0x7d, 0xc1, 0x99,
0xc0, 0x3c, 0x51, 0xb0, 0xdc, 0xb0,

```

```

0xba, 0x9c, 0x84, 0xb8,
0x70,
0xc2, 0x09, 0x7f, 0x96, 0x3d, 0xa1, 0xe2, 0x64, 0x27, 0x7a, 0x22, 0xb8,
0x75, 0xb9, 0xd1, 0x5f, 0xa5, 0x23,
0xf9, 0x62, 0xe0, 0x41,
0x02,
0x81, 0x81, 0x00, 0xf4, 0xf3, 0x08, 0xcf, 0x83, 0xb0, 0xab, 0xf2, 0x0f,
0x1a, 0x08, 0xaf, 0xc2, 0x42, 0x29,
0xa7, 0x9c, 0x5e, 0x52,
0x19,
0x69, 0x8d, 0x5b, 0x52, 0x29, 0x9c, 0x06, 0x6a, 0x5a, 0x32, 0x8f, 0x08,
0x45, 0x6c, 0x43, 0xb5, 0xac, 0xc3,
0xbb, 0x90, 0x7b, 0xec,
0xbb,
0x5d, 0x71, 0x25, 0x82, 0xf8, 0x40, 0xbf, 0x38, 0x00, 0x20, 0xf3, 0x8a,
0x38, 0x43, 0xde, 0x04, 0x41, 0x19,
0x5f, 0xeb, 0xb0, 0x50,
0x59,
0x10, 0xe1, 0x54, 0x62, 0x5c, 0x93, 0xd9, 0xdc, 0x63, 0x24, 0xd0, 0x17,
0x00, 0xc0, 0x44, 0x3e, 0xfc, 0xd1,
0xda, 0x4b, 0x24, 0xf7,
0xcb,
0x16, 0x35, 0xe6, 0x9f, 0x67, 0x96, 0x5f, 0xb0, 0x94, 0xde, 0xfa, 0xa1,
0xfd, 0x8c, 0x8a, 0xd1, 0x5c, 0x02,
0x8d, 0xe0, 0xa0, 0xa0,
0x02,
0x1d, 0x56, 0xaf, 0x13, 0x3a, 0x65, 0x5e, 0x8e, 0xde, 0xd1, 0xa8, 0x28,
0x8b, 0x71, 0xc9, 0x65, 0x02, 0x81,
0x81, 0x00, 0xc1, 0x0a,
0x47,
0x39, 0x91, 0x06, 0x1e, 0xb9, 0x43, 0x7c, 0x9e, 0x97, 0xc5, 0x09, 0x08,
0xbc, 0x22, 0x47, 0xe2, 0x96, 0x8e,
0x1c, 0x74, 0x80, 0x50,
0x6c,
0x9f, 0xef, 0x2f, 0xe5, 0x06, 0x3e, 0x73, 0x66, 0x76, 0x02, 0xbd, 0x9a,
0x1c, 0xfc, 0xf9, 0x6a, 0xb8, 0xf9,
0x36, 0x15, 0xb5, 0x20,
0x0b,
0x6b, 0x54, 0x83, 0x9c, 0x86, 0xba, 0x13, 0xb7, 0x99, 0x54, 0xa0, 0x93,
0x0d, 0xd6, 0x1e, 0xc1, 0x12, 0x72,
0x0d, 0xea, 0xb0, 0x14,
0x30,
0x70, 0x73, 0xef, 0x6b, 0x4c, 0xae, 0xb6, 0xff, 0xd4, 0xbb, 0x89, 0xa1,
0xec, 0xca, 0xa6, 0xe9, 0x95, 0x56,
0xac, 0xe2, 0x9b, 0x97,
0x2f,
0x2c, 0xdf, 0xa3, 0x6e, 0x59, 0xff, 0xcd, 0x3c, 0x6f, 0x57, 0xcc, 0x6e,
0x44, 0xc4, 0x27, 0xbf, 0xc3, 0xdd,
0x19, 0x9e, 0x81, 0x16,
0xe2,
0x8f, 0x65, 0x34, 0xa7, 0x0f, 0x22, 0xba, 0xbf, 0x79, 0x57, 0x02, 0x81,
0x80, 0x2e, 0x21, 0x0e, 0xc9, 0xb5,
0xad, 0x31, 0xd4, 0x76,
0x0f,
0x9b, 0x0f, 0x2e, 0x70, 0x33, 0x54, 0x03, 0x58, 0xa7, 0xf1, 0x6d, 0x35,
0x57, 0xbb, 0x53, 0x66, 0xb4, 0xb6,
0x96, 0xa1, 0xea, 0xd9,
0xcd,
0xe9, 0x23, 0x9f, 0x35, 0x17, 0xef, 0x5c, 0xb8, 0x59, 0xce, 0xb7, 0x3c,
0x35, 0xaa, 0x42, 0x82, 0x3f, 0x00,

```

```

0x96, 0xd5, 0x9d, 0xc7,
  0xab,
  0xec, 0xec, 0x04, 0xb5, 0x15, 0xc8, 0x40, 0xa4, 0x85, 0x9d, 0x20, 0x56,
  0xaf, 0x03, 0x8f, 0x17, 0xb0, 0xf1,
0x96, 0x22, 0x3a, 0xa5,
  0xfa,
  0x58, 0x3b, 0x01, 0xf9, 0xae, 0xb3, 0x83, 0x6f, 0x44, 0xd3, 0x14, 0x2d,
  0xb6, 0x6e, 0xd2, 0x9d, 0x39, 0x0c,
0x12, 0x1d, 0x23, 0xea,
  0x19,
  0xcb, 0xbb, 0xe0, 0xcd, 0x89, 0x15, 0x9a, 0xf5, 0xe4, 0xec, 0x41, 0x06,
  0x30, 0x16, 0x58, 0xea, 0xfa, 0x31,
0xc1, 0xb8, 0x8e, 0x08,
  0x84,
  0xaa, 0x3b, 0x19, 0x02, 0x81, 0x80, 0x70, 0x4c, 0xf8, 0x6e, 0x86, 0xed,
  0xd6, 0x85, 0xd4, 0xba, 0xf4, 0xd0,
0x3a, 0x32, 0x2d, 0x40,
  0xb5,
  0x78, 0xb8, 0x5a, 0xf9, 0xc5, 0x98, 0x08, 0xe5, 0xc0, 0xab, 0xb2, 0x4c,
  0x5c, 0xa2, 0x2b, 0x46, 0x9b, 0x3e,
0xe0, 0x0d, 0x49, 0x50,
  0xbf,
  0xe2, 0xa1, 0xb1, 0x86, 0x59, 0x6e, 0x7b, 0x76, 0x6e, 0xee, 0x3b, 0xb6,
  0x6d, 0x22, 0xfb, 0xb1, 0x68, 0xc7,
0xec, 0xb1, 0x95, 0x9b,
  0x21,
  0x0b, 0xb7, 0x2a, 0x71, 0xeb, 0xa2, 0xb2, 0x58, 0xac, 0x6d, 0x5f, 0x24,
  0xd3, 0x79, 0x42, 0xd2, 0xf7, 0x35,
0xdc, 0xfc, 0x0e, 0x95,
  0x60,
  0xb7, 0x85, 0x7f, 0xf9, 0x72, 0x8e, 0x4a, 0x11, 0xc3, 0xc2, 0x09, 0x40,
  0x5c, 0x7c, 0x43, 0x12, 0x34, 0xac,
0x59, 0x99, 0x76, 0x34,
  0xcf,
  0x20, 0x88, 0xb0, 0xfb, 0x39, 0x62, 0x3a, 0x9b, 0x03, 0xa6, 0x84, 0x2c,
  0x03, 0x5c, 0x0c, 0xca, 0x33, 0x85,
0xf5, 0x02, 0x81, 0x80,
  0x56,
  0x99, 0xe9, 0x17, 0xdc, 0x33, 0xe1, 0x33, 0x8d, 0x5c, 0xba, 0x17, 0x32,
  0xb7, 0x8c, 0xbd, 0x4b, 0x7f, 0x42,
0x3a, 0x79, 0x90, 0xe3,
  0x70,
  0xe3, 0x27, 0xce, 0x22, 0x59, 0x02, 0xc0, 0xb1, 0x0e, 0x57, 0xf5, 0xdf,
  0x07, 0xbf, 0xf8, 0x4e, 0x10, 0xef,
0x2a, 0x62, 0x30, 0x03,
  0xd4,
  0x80, 0xcf, 0x20, 0x84, 0x25, 0x66, 0x3f, 0xc7, 0x4f, 0x56, 0x8c, 0x1e,
  0xe1, 0x18, 0x91, 0xc1, 0xfd, 0x71,
0x5f, 0x65, 0x9b, 0xe4,
  0x4f,
  0xe0, 0x1a, 0x3a, 0xf8, 0xc1, 0x69, 0xdb, 0xd3, 0xbb, 0x8d, 0x91, 0xd1,
  0x11, 0x4f, 0x7e, 0x91, 0x1b, 0xb4,
0x27, 0xa5, 0xab, 0x7c,
  0x7b,
  0x76, 0xd4, 0x78, 0xfe, 0x63, 0x44, 0x63, 0x7e, 0xe3, 0xa6, 0x60, 0x4f,
  0xb9, 0x55, 0x28, 0xba, 0xba, 0x83,
0x1a, 0x2d, 0x43, 0xd5,
  0xf7,
  0x2e, 0xe0, 0xfc, 0xa8, 0x14, 0x9b, 0x91, 0x2a, 0x36, 0xbf, 0xc7, 0x14
};

```

```

CK_BYTE
    knownRSA1Modulus[]
    = {
0xb8, 0xb5, 0x0f, 0x49, 0x46, 0xb5, 0x5d, 0x58, 0x04, 0x8e,
    0x52, 0x59, 0x39, 0xdf, 0xd6,
0x29,
0x45, 0x6b, 0x6c, 0x96, 0xbb, 0xab, 0xa5, 0x6f, 0x72, 0x1b,
    0x16, 0x96, 0x74, 0xd5, 0xf9,
0xb4,
0x41, 0xa3, 0x7c, 0xe1, 0x94, 0x73, 0x4b, 0xa7, 0x23, 0xff,
    0x61, 0xeb, 0xce, 0x5a, 0xe7,
0x7f,
0xe3, 0x74, 0xe8, 0x52, 0x5b, 0xd6, 0x5d, 0x5c, 0xdc, 0x98,
    0x49, 0xfe, 0x51, 0xc2, 0x7e,
0x8f,
0x3b, 0x37, 0x5c, 0xb3, 0x11, 0xed, 0x85, 0x91, 0x15, 0x92,
    0x24, 0xd8, 0xf1, 0x7b, 0x3d,
0x2f,
0x8b, 0xcd, 0x1b, 0x30, 0x14, 0xa3, 0x6b, 0x1b, 0x4d, 0x27,
    0xff, 0x6a, 0x58, 0x84, 0x9e,
0x79,
0x94, 0xca, 0x78, 0x64, 0x01, 0x33, 0xc3, 0x58, 0xfc, 0xd3,
    0x83, 0xeb, 0x2f, 0xab, 0x6f,
0x85,
0x5a, 0x38, 0x41, 0x3d, 0x73, 0x20, 0x1b, 0x82, 0xbc, 0x7e,
    0x76, 0xde, 0x5c, 0xfe, 0x42,
0xd6,
0x7b, 0x86, 0x4f, 0x79, 0x78, 0x29, 0x82, 0x87, 0xa6, 0x24,
    0x43, 0x39, 0x74, 0xfe, 0xf2,
0x0c,
0x08, 0xbe, 0xfa, 0x1e, 0x0a, 0x48, 0x6f, 0x14, 0x86, 0xc5,
    0xcd, 0x9a, 0x98, 0x09, 0x2d,
0xf3,
0xf3, 0x5a, 0x7a, 0xa4, 0xe6, 0x8a, 0x2e, 0x49, 0x8a, 0xde,
    0x73, 0xe9, 0x37, 0xa0, 0x5b,
0xef,
0xd0, 0xe0, 0x13, 0xac, 0x88, 0x5f, 0x59, 0x47, 0x96, 0x7f,
    0x78, 0x18, 0x0e, 0x44, 0x6a,
0x5d,
0xec, 0x6e, 0xed, 0x4f, 0xf6, 0x6a, 0x7a, 0x58, 0x6b, 0xfe,
    0x6c, 0x5a, 0xb9, 0xd2, 0x22,
0x3a,
0x1f, 0xdf, 0xc3, 0x09, 0x3f, 0x6b, 0x2e, 0xf1, 0x6d, 0xc3,
    0xfb, 0x4e, 0xd4, 0xf2, 0xa3,
0x94,
0x13, 0xb0, 0xbf, 0x1e, 0x06, 0x2e, 0x29, 0x55, 0x00, 0xaa,
    0x98, 0xd9, 0xe8, 0x77, 0x84,
0x8b,
0x3f, 0x5f, 0x5e, 0xf7, 0xf8, 0xa7, 0xe6, 0x02, 0xd2, 0x18,
    0xb0, 0x52, 0xd0, 0x37, 0x2e,
0x53,
    },
    knownRSA1PubExponent[]
    = { 0x01, 0x00, 0x01 };
    char
    *pPlainData = 0;
    unsigned
    long ulPlainDataLength;
    char
    *pEncryptedData = 0;

```



```

    unsigned
long ulEncryptedDataLength = 0;
    CK_MECHANISM
mech;
    CK_USHORT
    usStatus=0,
        usKeyLength;
    CK_OBJECT_HANDLE
hKey;
    CK_OBJECT_CLASS
SymKeyClass
    = CKO_SECRET_KEY;
    CK_BBOOL
        bTrue
= 1,
        bFalse
= 0,
        bToken
= bTrue,
        bSensitive
= bTrue,
        bPrivate
= bTrue,
        bEncrypt
= bTrue,
        bDecrypt
= bTrue,
        bSign
= bFalse, // "...
        bVerify
= bFalse, //Will not allow sign/verify operation.
        bWrap
= bTrue,
        bUnwrap
= bTrue,
#ifdef EXTRACTABLE
        bExtract
= bTrue,
#endif //EXTRACTABLE
        bDerive
= bTrue;
    CK_KEY_TYPE
    keyType;
    CK_USHORT
    usValueBits;
    char
        pbPublicKeyLabel[128];
    CK_ATTRIBUTE_PTR
pPublicTemplate;
    CK_USHORT
usPublicTemplateSize = 0;
    char
iv[8] = { '1', '2', '3', '4', '5', '6', '7', '8' };
    CK_ATTRIBUTE
SymKeyTemplate[] = {
        {CKA_CLASS,
0, sizeof(SymKeyClass)},
        {CKA_KEY_TYPE,
0, sizeof(keyType)},

```

```

        {CKA_TOKEN,
0, sizeof(bToken)},
        {CKA_SENSITIVE,
0, sizeof(bSensitive)},
        {CKA_PRIVATE,
0, sizeof(bPrivate)},
        {CKA_ENCRYPT,
0, sizeof(bEncrypt)},
        {CKA_DECRYPT,
0, sizeof(bDecrypt)},
        {CKA_SIGN,
0, sizeof(bSign)},
        {CKA_VERIFY,
0, sizeof(bVerify)},
        {CKA_WRAP,
0, sizeof(bWrap)},
        {CKA_UNWRAP,
0, sizeof(bUnwrap)},
        {CKA_DERIVE,
0, sizeof(bDerive)},
        {CKA_VALUE_LEN, 0,
sizeof(usKeyLength)
},
        {CKA_LABEL,
0, 0} //
Always keep last!!!
#ifdef EXTRACTABLE //Conditional
stuff must be at the end!!!!
        {CKA_EXTRACTABLE,
0, sizeof(bExtract)},
#endif //EXTRACTABLE
    };
    CK_OBJECT_HANDLE
hUnWrappedKey, hPublicRSAKey;
    char
        *pbWrappedKey;
    unsigned
long    ulWrappedKeySize;
    CK_OBJECT_CLASS
privateKey
= CKO_PRIVATE_KEY,
publicKey = CKO_PUBLIC_KEY;
    CK_KEY_TYPE
rsaType
=
CKK_RSA;
    CK_BYTE
pLabel[]
= "RSA
private Key",
pbPublicRSAKeyLabel[] = "RSA Public Key";
    CK_ATTRIBUTE
*pTemplate;
    CK_ULONG
usTemplateSize,
ulPublicRSAKeyTemplateSize;
    CK_ATTRIBUTE
pPublicRSAKeyTemplate[] = {

```

```

        {CKA_CLASS,
0,
sizeof(publicKey) },
        {CKA_KEY_TYPE,
0,    sizeof(rsaType)
    },
        {CKA_TOKEN,
0,
sizeof(bToken)
    },
        {CKA_PRIVATE,
0,    sizeof(bPrivate)
    },
        {CKA_ENCRYPT,
0,    sizeof(bEncrypt)
    },
        {CKA_VERIFY,
0,
sizeof(bSign)
    },
        {CKA_WRAP,
0,
sizeof(bWrap)
    },
{CKA_MODULUS,
0, sizeof(knownRSA1Modulus) },
{CKA_PUBLIC_EXPONENT,
0, sizeof(knownRSA1PubExponent) },
        {CKA_LABEL,
0,
sizeof(pbPublicRSAKeyLabel)
    }
    };
    CK_ATTRIBUTE
pPrivateKeyTemplate[] = {
        {CKA_CLASS,
&privateKey,
sizeof(privateKey) },
        {CKA_KEY_TYPE,
&rsaType,    sizeof(rsaType)
    },
        {CKA_TOKEN,
&bToken,
sizeof(bToken)
    },
        {CKA_SENSITIVE, &bSensitive,
sizeof(bSensitive) },
        {CKA_PRIVATE,
&bPrivate,
sizeof(bPrivate)
    },
        {CKA_DECRYPT,
&bEncrypt,
sizeof(bEncrypt)
    },
        {CKA_SIGN,
&bSign,
sizeof(bSign)
    },

```

```

//{CKA_SIGN_RECOVER,
&bTrue, sizeof(bTrue)    },
    {CKA_UNWRAP,
    &bWrap,
    sizeof(bWrap)
    },
{CKA_EXTRACTABLE, &bFalse, sizeof(bFalse)    },
{CKA_LABEL,      pLabel,
    sizeof(pLabel)
    }
};
//
Generate a DES3 Key
    SymKeyTemplate[0].pValue
= &SymKeyClass;
    SymKeyTemplate[1].pValue
= &keyType;
    SymKeyTemplate[2].pValue
= &bToken;
    SymKeyTemplate[3].pValue
= &bSensitive;
    SymKeyTemplate[4].pValue
= &bPrivate;
    SymKeyTemplate[5].pValue
= &bEncrypt;
    SymKeyTemplate[6].pValue
= &bDecrypt;
    SymKeyTemplate[7].pValue
= &bSign;
    SymKeyTemplate[8].pValue
= &bVerify;
    SymKeyTemplate[9].pValue
= &bWrap;
    SymKeyTemplate[10].pValue
= &bUnwrap;
    SymKeyTemplate[11].pValue
= &bDerive;
    SymKeyTemplate[12].pValue
= &usKeyLength;
    SymKeyTemplate[13].pValue
= pbPublicKeyLabel;
#ifdef EXTRACTABLE
    SymKeyTemplate[14].pValue
= &bExtract;
#endif //EXTRACTABLE
    mech.mechanism
= CKM_DES3_KEY_GEN;
    mech.pParameter
= 0;
    mech.usParameterLen
= 0;
    keyType
= CKK_DES3;
    usKeyLength
= 24;
    strcpy(
pbPublicKeyLabel, "Generated DES3 Key" );
    pPublicTemplate
= SymKeyTemplate;

```

```

        usPublicTemplateSize
= DIM(SymKeyTemplate);
    //
Adjust size of label (ALWAYS LAST ENTRY IN ARRAY)
    pPublicTemplate[usPublicTemplateSize-1].usValueLen
= strlen(
pbPublicKeyLabel );
    retCode
= C_GenerateKey(    hSessionHandle,
                    (CK_MECHANISM_PTR)&mech,
                    pPublicTemplate,
                    usPublicTemplateSize,
                    &hKey);

    if(retCode
== CKR_OK)
    {
        cout
<< pbPublicKeyLabel << ": " << hKey <<
endl;
    }
    else
    {
        cout
<< "\n" "Error 0x" << hex << retCode;
        cout
<< " generating the DES3 Key.\n";
        error
= -11;
        goto
exit_routine_6;
    }
    //
Encrypt the RSA Key
    mech.mechanism
= CKM_DES3_CBC;
    mech.pParameter
= iv;
    mech.usParameterLen
= sizeof(iv);
    pPlainData
= (char *) (pRsaKey);
    ulPlainDataLength
= sizeof(pRsaKey);
    //
Allocate memory for output buffer
    if(
retCode == CKR_OK )
    {
        pEncryptedData
= new char [ulPlainDataLength + 2048]; // Leave
// extra room for
// RSA Operations
        if(
!pEncryptedData )
        {
            retCode
= CKR_DEVICE_ERROR;
        }
    }
    //
Start encrypting

```

```

    if(
retCode == CKR_OK )
    {
        retCode
= C_EncryptInit(hSessionHandle, &mech, hKey);
    }
    //
Continue encrypting
    if(
retCode == CKR_OK )
    {
        CK_USHORT
usInDataLen,
                usOutDataLen
= (CK_USHORT) (ulPlainDataLength + 2048);
        CK_ULONG
ulBytesRemaining
= ulPlainDataLength;
        char
* pPlainTextPointer
= pPlainData;
        char
* pEncryptedDataPointer
= pEncryptedData;
        while
        (ulBytesRemaining > 0)
        {
            if
            (ulBytesRemaining > 0xfff0) // We are longer than a USHORT can handle
            {
                usInDataLen
= 0xfff0;
                ulBytesRemaining
-= usInDataLen;
            }
            else
            {
                usInDataLen
= (CK_USHORT) ulBytesRemaining;
                ulBytesRemaining
-= usInDataLen;
            }
            retCode
= C_EncryptUpdate( hSessionHandle,
                    (CK_BYTE_PTR)pPlainTextPointer,
                    usInDataLen,
                    (CK_BYTE_PTR)pEncryptedDataPointer,
                    &usOutDataLen
);
                pPlainTextPointer
+= usInDataLen;
                pEncryptedDataPointer
+= usOutDataLen;
                ulEncryptedDataLength
+= usOutDataLen;
            }
        }

    //
Finish encrypting

```

```

    if(
retCode == CKR_OK )
    {
        CK_USHORT
usOutDataLen;
        CK_BYTE_PTR
pOutData = (CK_BYTE_PTR)pEncryptedData;
        pOutData
+= ulEncryptedDataLength;
        retCode
= C_EncryptFinal(hSessionHandle, pOutData, &usOutDataLen);
        ulEncryptedDataLength
+= usOutDataLen;
    }
    else
    {
        cout
<< "\n" "Error 0x" << hex << retCode;
        cout
<< " somewhere in the encrypting.\n";
        if(
pEncryptedData )
        {
            delete
pEncryptedData;
        }
        error
= -12;
        goto
exit_routine_6;
    }
    mech.mechanism
=
CKM_DES3_CBC;
    mech.pParameter
=
(void*) "12345678"; // 8 byte IV
    mech.usParameterLen
= 8;
    pTemplate
= pPrivateKeyTemplate;
    usTemplateSize
= DIM(pPrivateKeyTemplate);
    pbWrappedKey
= pEncryptedData;
    ulWrappedKeySize
= ulEncryptedDataLength;
    if(
retCode == CKR_OK )
    {
        retCode
= C_UnwrapKey( hSessionHandle,
                &mech,
                hKey,
                (CK_BYTE_PTR)pbWrappedKey,
                (CK_USHORT)ulWrappedKeySize,
                pTemplate,
                usTemplateSize,
                &hUnWrappedKey);
    }
}

```

```

//
Report unwrapped key handle
    if(
retCode == CKR_OK )
    {
        cout
<< "\n Private key Unwrapped key is:" << hUnWrappedKey
<< "\n\n";
    }
    else
    {
        cout
<< "\n" "Error 0x" << hex << retCode;
        cout
<< " unwrapping.\n";
        if(
pEncryptedData )
        {
            delete
pEncryptedData;
        }
        error
= -13;
        goto
exit_routine_6;
    }
//
Release temporary memory
    if(
pEncryptedData )
    {
        delete
pEncryptedData;
    }
//
Create the Public Key that goes with the Private Key
    if(
retCode == CKR_OK )
    {
//
Unwrap it onto the token
pPublicRSAKeyTemplate[0].pValue
= &publicKey;
pPublicRSAKeyTemplate[1].pValue
= &rsaType;
pPublicRSAKeyTemplate[2].pValue
= &bToken;
pPublicRSAKeyTemplate[3].pValue
= &bPrivate;
pPublicRSAKeyTemplate[4].pValue
= &bEncrypt;
pPublicRSAKeyTemplate[5].pValue
= &bSign;
pPublicRSAKeyTemplate[6].pValue
= &bWrap;
pPublicRSAKeyTemplate[7].pValue
= knownRSA1Modulus;
pPublicRSAKeyTemplate[8].pValue
= knownRSA1PubExponent;

```



```

    pPublicKeyTemplate[9].pValue
= pbPublicKeyLabel;
    pTemplate
= pPublicKeyTemplate;
    usTemplateSize
= DIM(pPublicKeyTemplate);
    retCode
= C_CreateObject( hSessionHandle,
pTemplate,
    usTemplateSize,
    &hPublicKey);
    if(retCode
== CKR_OK)
    {
    cout
<< pbPublicKeyLabel << ": " << hPublicKey
<< endl;
    }
    else
    {
    cout
<< "\n" "Error 0x" << hex << retCode;
    cout
<< " creating the RSA Public Key.\n";
    error
= -14;
    goto
    exit_routine_6;
    }
}
if( retCode == CKR_OK )
{
CK_CHAR label[] = "RSA Key";
CK_ATTRIBUTE RSAFindPriTemplate[] =
{
CKA_LABEL, label, sizeof(label)
};
CK_ULONG numHandles;
CK_OBJECT_HANDLE handles[1000];
retCode = C_FindObjectsInit( hSessionHandle, RSAFindPriTemplate,
1 );
if(retCode != CKR_OK)
{
cout << "C_FindObjectsInit not returning OK ("
<< hex << retCode << ")\n\n";
goto exit_routine_6;
}
retCode =C_FindObjects( hSessionHandle , handles, 90,
&numHandles );
if(retCode != CKR_OK)
{
cout << "C_FindObjects not returning OK ("
<< hex <<
retCode << ")\n\n";
goto exit_routine_6;
}
cout << "Everything's GOOD\n\n";
for(int i=0; i < numHandles; i++)
{
cout << handles[i] << "\n";
}
}

```

```

}
}
//CJM-> END OF TEST CODE
//
Beginning of exit routines
exit_routine_6:
//
Logout
retCode
= C_Logout(hSessionHandle);
if(retCode
!= CKR_OK)
{
cout << "\n" "Error 0x" <<
hex << retCode << " logging out.";
}
exit_routine_5:
// Close the session
retCode
= C_CloseSession(hSessionHandle);
if(retCode != CKR_OK)
{
cout << "\n" "Error 0x" <<
hex << retCode << " closing session.";
}
exit_routine_4:
delete
pSlotList;
exit_routine_3:
#ifdef PKCS11_2_0
C_Finalize(0);
#else
C_Terminate();
#endif
exit_routine_2:
#ifdef STATIC
//
No longer need Chrystoki
CrystokiDisconnect();
#endif
exit_routine_1:
cout
<< "\nDone. (" << dec << error << ")\n";
cout.flush();
return
error;
}
CK_RV Pinlogin(CK_SESSION_HANDLE
hSession)
{

CK_RV retCode;
unsigned char buffer[MAX];
int count =0;
cout << "Please enter the USER password : "
<< endl;
//calling get PinString to mask input, variable "count"

//holds length of "buffer"(password)
//needed for Login call
count = getPinString(buffer);

```

```

//Login as user on token
in slot
retCode = C_Login(hSession, CKU_USER, buffer, count);
if(retCode != CKR_OK)
{
cout << "\n" "Error 0x" <<
hex << retCode;
cout
<< " logging in as user.";
exit(hSession);
return
-3;
}
cout << "logging into the token...";
cout << "\nlogged into token " << endl;
return retCode;
}
////////////////////////////////////////////////////////////////////////////////////////////////////////////////////////////////
// getPnString()
// =====
//
// This function retrieves a pin string from the user. It
// modifies the
// console mode before starting so that the characters the
// user types are
// not echoed, and a '*' character is displayed for each
// typed character
// instead.
//
// Backspace is supported, but we don't get any fancier than
// that.
////////////////////////////////////////////////////////////////////////////////////////////////////////////////////////////////
int getPnString(CK_CHAR_PTR pw)
{
int
len=0;
char
c=0;
//
Unfortunately, the method of turning off character echo is
// different for Windows and Unix platforms. So
we have to
// conditionally compile the appropriate section. Even
the basic
// password retrieval is slightly different, since
//
Windows and Unix use different character codes for the return key.
#ifdef WIN32
DWORD
mode;
//
This console mode stuff only applies to windows. We'll
have to
// do something else when it comes to unix.
if
(GetConsoleMode(GetStdHandle(STD_INPUT_HANDLE), &mode)) {
if
(SetConsoleMode(GetStdHandle(STD_INPUT_HANDLE), mode & (!ENABLE_ECHO_INPUT)))
{

```

```

        while
(c != '\r')
{
    //
wait for a character to be hit
    while
(!_kbhit()) {
        Sleep(100);
    }
    //
get it
    c
= _getch();
    //
check for carriage return
    if
(c != '\r') {
        //
check for backspace
        if
(c!='\b') {
            //
neither CR nor BS -- add it to the password string
            printf("*");
            *pw++
= c;
            len++;
        }
    else {
// handle backspace -- delete the last character &
// erase it from the screen
        if
(len > 0) {
            pw--;
            len--;
            printf("\b
\b");
        }
    }
}
    //
Add the zero-termination
    *pw
= '\0';
    SetConsoleMode(GetStdHandle(STD_INPUT_HANDLE),
mode);
    printf("\n");
}
}
#endif
return
len;
}

```

## Audit Logging

By default, the HSM logs select events. See "[Audit Logging](#)" on page 1 in the *Administration Guide* for more information.

The HSM creates a log secret unique to the HSM, computed during the first initialization after manufacture. The log secret resides in flash memory (permanent, non-volatile memory), and is used to create log records that are sent to a log file. Later, the log secret is used to prove that a log record originated from a legitimate HSM and has not been tampered with.

### Audit Log Records

A log record consists of two fields – the log message and the HMAC for the previous record. When the HSM creates a log record, it uses the log secret to compute the SHA256-HMAC of all data contained in that log message, plus the HMAC of the previous log entry. The HMAC is stored in HSM flash memory. The log message is then transmitted, along with the HMAC of the previous record, to the host. The host has a logging daemon to receive and store the log data on the host hard drive.

For the first log message ever returned from the HSM to the host there is no previous record and, therefore, no HMAC in flash. In this case, the previous HMAC is set to zero and the first HMAC is computed over the first log message concatenated with 32 zero-bytes. The first record in the log file then consists of the first log message plus 32 zero-bytes. The second record consists of the second message plus HMAC1 = HMAC (message1 || 0x0000). This results in the organization shown below.

MSG 1	HMAC 0
	...
MSG n-1	HMAC n-2
MSG n	HMAC n-1
...	
MSG n+m	HMAC n+m-1
MSG n+m+1	HMAC n+m
...	
MSG end	HMAC n+m-1
Recent HMAC in NVRAM	HMAC end

To verify a sequence of  $m$  log records which is a subset of the complete log, starting at index  $n$ , the host must submit the data illustrated above. The HSM calculates the HMAC for each record the same way as it did when the record was originally generated, and compares this HMAC to the value it received. If all of the calculated HMACs match the received HMACs, then the entire sequence verifies. If an HMAC doesn't match, then the



The log message is “session 1 Access 2147483651:22621 operation LUNA\_CREATE\_CONTAINER returned LUNA\_RET\_SM\_UNKNOWN\_TOSM\_STATE(0x00300014) (using PIN (entry=LUNA\_ENTRY\_DATA\_AREA))”.

In the message text, the “who” is the session identified by “session 1 Access 2147483651:22621” (the application is identified by the access ID major = 2147483651, minor = 22621).

The “what” is “LUNA\_CREATE\_CONTAINER”.

The operation status is “LUNA\_RET\_SM\_UNKNOWN\_TOSM\_STATE(0x00300014)”.

The HMAC of previous record is

“29C51014B6F131EC67CF48734101BBE301335C25F43EDF8828745C40755ABE25”.

The remainder is the raw data for this record as ASCII-HEX.

## Log External

An important element of the security audit logging feature is the Log External function. This SafeNet extension to PKCS #11 allows a user application to insert text of the user’s choice into the log record stream. The function call is **CA\_LogExternal ( )**. It can be used, for example, to insert an application name or the name of the user who is logged into the application and have the inserted text string protected as part of the audit log in the same way as records that have been generated by the HSM itself. It is recommended that applications use the **CA\_LogExternal ( )** function when the application starts to insert the application name and also to insert the user name each time an individual user logs into or out of the application. The function is called as:

```
CA_LogExternal(CK_SLOT_ID slotID, CK_SESSION_HANDLE hSession, CK_CHAR_PTR pData, CK_ULONG puldataLen);
```

where:

- > **slotID** is PKCS #11 slot containing the HSM or partition being addressed
- > **hSession** is the handle of the session with which the record is to be associated
- > **pData** is the pointer to the character array containing the external message
- > **puldataLen** is the length of the character array

Note that the input character array is limited to a maximum of 100 characters and it will be truncated at 100 characters if **puldataLen** > 100.

For applications that cannot add this function call, it is possible to use the LunaCM command-line function **audit log external** within a startup script to insert a text record at the time the application is started.

When a user logs in to the SafeNet Luna Network HSM `lunash:> session`, the **CA\_LogExternal ( )** function is automatically called to register the user name and access ID. Subsequent HSM operations can be tracked by the access ID.

You must configure the “log external” event category in order for the HSM to log the **CA\_LogExternal ( )** messages.

# CHAPTER 7: Java Interfaces

This chapter describes the Java interfaces to the PKCS#11 API. It contains the following topics:

- > ["SafeNet JSP Overview and Installation" below](#)
- > ["SafeNet JSP Configuration" on page 355](#)
- > ["The JCPROV PKCS#11 Java Wrapper" on page 359](#)
- > ["Java or JSP Errors" on page 366](#)
- > ["Re-Establishing a Connection Between Your Java Application and SafeNet Luna Network HSM" on page 367](#)
- > ["Recovering From the Loss of All HA Members" on page 367](#)
- > ["Using Java Keytool with SafeNet Luna Network HSM" on page 370](#)
- > ["JSP Dynamic Registration Sample" on page 376](#)

## SafeNet JSP Overview and Installation

---

The SafeNet JSP is part of an application program interface (API) that allows Java applications to make use of certain SafeNet products.

As with other APIs, some existing Java-based applications might have generic requirements and calls that can already work with SafeNet products. In other cases, it might be necessary for you or your vendor to create an application or to adapt one, using the JSP API.

You have the choice of:

- > using a previously integrated third-party application, known to work with this SafeNet product
- > performing your own integration with a Java-based application supplied by you or a third party, or
- > developing your own application using our Java API.

Develop your own Java apps using our included Software Development Kit, which includes SafeNet Java API usage notes for developers, as well as development support by SafeNet. A standard Java development environment is required, in addition to the API provided by SafeNet.

Please refer to the current-version SafeNet Luna Network HSM Customer Release Notes (CRN) for the most up-to-date list of supported platforms and APIs.

### JDK Compatibility

We formally test SafeNet Luna Network HSMs and our Java provider with SUN JDK for all platforms except AIX, and with IBM JDK for the AIX platform. We have not had problems with OpenJDK, although it has not been part of our formal test suite. The SafeNet JCE provider is compliant with the JCE specification, and should work with any JVM that implements the Java language specification.

Occasional problems have been encountered with respect to IBM JSSE.



GNU JDK shipped with most Linux systems has historically been incomplete and not suitable.

## Installation

To use the SafeNet JavaSP service providers four main components are needed.

### Java SDK 7/8/9

First, acquire and install the Java SDK or RTE (available from the Java site, not included with the SafeNet software). Java must be installed before the SafeNet software, as some of the Java files must be manipulated as described in the JSP portions of the Getting Started section of this Help. Note that the JVM 7, JVM 8, or JVM 9 is part of the Java SDK.

### Java Cryptographic JCE Policy files (optional)

If you intend to generate large key sizes, you will need two cryptographic JCE Policy files v 7/8/9 (available from the Java web site). The Getting Started section of this Help has instructions on what to do with the two files (`local_policy.jar` and `US_export_policy.jar`).

If you see errors like "Invalid Key size", that is usually an indication that the JCE is not properly installed.

### SafeNet Luna HSM Client

Follow the installation procedure for the SafeNet Luna HSM Client as described in the *Installation Guide*.

### SafeNet JavaSP

When installing the SafeNet Luna Client software, also choose the option to install SafeNet JSP. Instructions are provided in the platform-specific pages, including instructions for installing SafeNet JSP for each operating system (files to copy/replace, editing to perform, etc.) so that SafeNet Luna Network HSM and SafeNet JSP can work with the JRE.

**NOTE Java Provider (JSP)** - both GMC and GMAC are supported. "GmacAesDemo.java" provides a sample for using GMAC with Java.

Java Parameter Specification class `LunaGmacParameterSpec.java` defines default values recommended by the NIST specification.

### Notes about thread safe, session safe, and multi-threading

PKCS#11 (the standard, and Gemalto's implementation) requires that a session can be used only by a single thread at a time. That is, multiple threads cannot access the same session simultaneously. Threads can share a session; however the application must ensure that only one thread accesses the session at a time. It is simpler for an application to assign a unique session for each thread, but applications do not need to follow that pattern.

Our LunaProvider endeavors to be thread safe in the way it uses our PKCS#11 library. But customer Java applications must follow the threading model defined by Java. For example, Java Cipher objects (essentially all crypto-related objects) are not thread safe according to the JSP specification. Similar to PKCS#11 sessions, only one thread should use a cipher object at a time. Our LunaProvider requires that the Java application follows that JSP approach.

Therefore, it is very possible, and expected, to see sessions being used by multiple threads, all in legitimate and thread-safe ways according to both JSP and PKCS#11.

## Post-Installation Tasks

### Extractable Private and Secret Keys

By default, all generated private and secret keys have their CKA\_EXTRACTABLE attribute set to **0** (see ["Key Attribute Defaults" on page 320](#)). These keys are stored in the HSM hardware and cannot be extracted, only cloned to a partition on another HSM. This attribute cannot be modified later. If you want the ability to wrap private and/or secret keys and export them off the HSM, you must use one of the following two methods to set CKA\_EXTRACTABLE to **1** (TRUE) when the key is created:

#### Global configuration:

Configure **java.security** as follows to have JSP create all future private/secret keys with CKA\_EXTRACTABLE=1:

- > To make all private keys extractable, add the following line to **java.security**:  
**com.safenetinc.luna.provider.createExtractablePrivateKeys=true**
- > To make all secret keys extractable, add the following line to **java.security**:  
**com.safenetinc.luna.provider.createExtractableSecretKeys=true**

#### Local configuration:

Configure CKA\_EXTRACTABLE on a key-by-key basis by using the following methods in your Java application:

- > To make the next generated private key extractable using the **LunaSlotManager.setPrivateKeysExtractable()** method:

```
LunaSlotManager.getInstance().setPrivateKeysExtractable(true); // Set CKA_EXTRACTABLE=1 on
upcoming private keys
kpg = KeyPairGenerator.getInstance("RSA", "LunaProvider");
kpg.initialize(2048);
myPair = kpg.generateKeyPair();
LunaSlotManager.getInstance().setPrivateKeysExtractable(false); // Set CKA_EXTRACTABLE=0 on
upcoming private keys
```

**NOTE** To wrap and export private keys, the partition must have partition policy 1: Allow private key wrapping set to 1 (ON). See ["Keys In Hardware vs. Private Key Export" on page 1](#) in the *Administration Guide*.

- > To make the next generated secret key extractable using the **LunaSlotManager.setSecretKeysExtractable()** method:

```
LunaSlotManager.getInstance().setSecretKeysExtractable(true); // Set CKA_EXTRACTABLE=1 on
upcoming secret keys
kg = KeyGenerator.getInstance("AES");
kg.init(256);
aesKey = kg.generateKey();
LunaSlotManager.getInstance().setPrivateKeysExtractable(false); // Set CKA_EXTRACTABLE=0 on
upcoming secret keys
```

### Using SafeNet JCE/JCA with 64-bit Libraries

If you are using SafeNet JCE/JCA with the 64-bit libraries for SafeNet Luna Network HSM, you must include the "-d64" switch in the Java command-line.

For example: `java -d64 -jar jMultitoken.jar`

For most 64-bit platforms, 64-bit is supported. Some 64-bit platforms support the option of running in 32-bit mode), as a backward compatibility feature.

If you use the 64-bit installation and do not use the "- d64" command-line switch in your Java command lines, the system attempts (by default) to use the 32-bit library (which is not installed, because you installed 64-bit in this example...), and the result is an error message complaining about the kernel model.

### Using ECC Keys for TLS with Java 7

For optimal Java performance when using Elliptic Curve keys to perform TLS with Java 7, where those keys reside in the HSM, you must configure the SunEC security provider (`sun.security.ec.SunEC`) to be below the `LunaProvider` in your `java.security` file.

We suggest that you not attempt to resolve a performance issue by having the `LunaProvider` as the default because that would result in the symmetric keys also being used in the HSM which is not optimal for performance.

### A Security Note for Java Developers

The SafeNet JSP is a Java API that is intended to be used as an interface between customer-written or third-party Java applications and the SafeNet Luna Network HSM. Managing security issues associated with the overall operational environment in which the application is running, including the user interface, is the responsibility of the application.

A common example would be input and capture of user name and password. The application, or a set of organizational procedures, is responsible for making the access control decision regarding whether the user has the necessary permissions (at the organizational level) to access the HSM's services and then must provide protection for the password as it is entered, and erasure from memory after the operation is completed. The SafeNet JSP will control access to the HSM based on the correct password being input from the application via the `Login` method, but security outside the HSM is your responsibility.

### Non-standard ECDSA

The SafeNet provider maps the "ECDSA" signature algorithm to "NONEwithECDSA". The Java convention is to map it to "SHA1withECDSA". This is noted here in case you wish to use it in provider inter-operability testing. This mapping is noted in the Javadoc as well.

For comparison, "RSA" maps to "NONEwithRSA" while "DSA" maps to "SHA1withDSA".

## SafeNet JSP Configuration

SafeNet JSP consists of a single JCA/JCE service provider, that allows a Java-based application to use SafeNet Luna Network HSM products for secure cryptographic operations. Please refer to the Javadocs accompanying the toolkit, for the most current information regarding the SafeNet JSP packages and `LunaProvider` functionality.

## Installation

You must acquire a Java JDK or JRE separately and install it before installing the SafeNet JSP. See the QuickStart that came with your software package.

In order to use the LunaProvider you must place the jar file in your classpath. We recommend placing it in your <jre>/lib/ext folder. In addition the JNI component, which may be a .dll or .so file depending on your system architecture, should be placed in your library path.

## Java -- Encryption policy files for unlimited strength ciphers

Additionally, you might need to apply the unlimited strength ciphers policy. The unlimited strength ciphers policy files can be downloaded from Oracle.

The US\_export\_policy.jar and local\_policy.jar are to be copied to JAVA\_HOME/jre/lib/security (or the equivalent directory that applies to your setup).

```
[root@my-sa5client]# echo $JAVA_HOME
/usr/java/default
[root@my-sa5client]# cp -p local_policy.jar /usr/java/default/jre/lib/security/
[root@my-sa5client]# cp -p US_export_policy.jar /usr/java/default/jre/lib/security/
```

## SafeNet Java Security Provider

In general, you should use the standard JCA/JCE classes and methods to work with SafeNet Luna Network HSM. The following sections provide examples of when you may wish to use the special SafeNet methods.

### Class Hierarchy

All public classes in the SafeNet Java crypto provider are included in the com.safenetinc.luna package or subpackages of that package. Thus the full class names are (for example):

- > com.safenetinc.luna.LunaSlotManager
- > com.safenetinc.luna.provider.key.LunaKey

If your application is compliant with the JCA/JCE spec, you will generally not need to directly reference any SafeNet implementation classes. Use the interfaces defined in the java.security packages instead. The exception is if you need to perform an HSM-specific operation, such as modifying PKCS#11 attributes.

Throughout the rest of this document, the short form of the class names is used for convenience and readability. The full class names (of SafeNet or other classes) are used only where necessary to resolve ambiguity.

### Special Classes/Methods

The JCA/JCE interfaces were not designed with hardware security modules (HSMs) in mind and do not include methods for managing aspects of a hardware module. SafeNet JSP provides some additional functions in addition to the standard JCA/JCE API.

The LunaSlotManager class provides custom methods that allow some HSM-specific information to be retrieved. It also provides a way to log in to the HSM if your application cannot make use of the standard KeyStore interface. For details please check the Javadoc which comes with the product.

It is not always necessary to use the LunaSlotManager class. With proper use of the JCE API provided in SafeNet JSP, your code can be completely hardware-agnostic.

The LunaKey class implements the Key interface and provides all of the methods of that class along with custom methods for manipulating key objects on SafeNet hardware.

**NOTE** Sensitive attributes cannot be retrieved from keys stored on SafeNet hardware. Thus certain JCE-specified methods (such as PrivateKeyRSA.getPrivateExponent()) will throw an exception.

The LunaCertificateX509 class implements the X509Certificate methods along with custom methods for manipulating certificate objects on SafeNet hardware.

## Examples

The SafeNet JSP comes with several sample applications that show you how to use the Luna provider. The samples include detailed comments.

### To compile on windows without an IDE (administrator privileges may be required):

```
cd <SafeNet Luna Network HSM install>/jsp/samples
javac com\safenetinc\luna\sample\*.java
```

### To run:

```
java com.safenetinc.luna.sample.KeyStoreLunaDemo (or any other sample class in that package)
```

## Authenticating to the HSM

In order to make use of an HSM, it is necessary to activate the device through a login. Depending on the security level of the device, the login will require a plain-text password and/or a PED key.

The preferred method of logging in to the module is through the Java KeyStore interface. The store type is "Luna" and the password for the key store is the challenge for the partition specified.

KeyStore files for the Luna KeyStore must be created manually. The content of the KeyStore file differs if you wish to reference the partition by the slot number or label (preferred). Details of authenticating to the HSM via the KeyStore interface are explained in the Javadoc for LunaKeyStore and in the KeyStoreLunaDemo sample application.

Keys in a Luna KeyStore cannot have individual passwords. Only the KeyStore password is used. If your HSM requires PED keys to be presented for authentication and the partition is not already activated, loading the KeyStore will cause the PED to prompt you to present this key.

Other than the KeyStore interface your application may also make use of the LunaSlotManager class or by using a login state created outside of the application through a utility called 'salogin'. Use of salogin is strongly discouraged unless you have a very specific need.

## LunaKeyStoreMP is Deprecated

LunaKeyStoreMP is deprecated for SafeNet JSP, and may be discontinued in a future release.

LunaKeyStoreMP was used in previous releases to allow logical partitioning of the key space on HSMs that have only one partition. This allowed you to create a separate MP key store for each individual client that accessed the partition. Recent SafeNet releases, however, support multiple partitions, and dedicating a partition per client is a superior solution for management and security reasons.

**NOTE** LunaKeyStoreMP is retained for backwards compatibility reasons only. Do not use LunaKeyStoreMP when creating new applications.

## Logging Out

Logging out of the HSM is performed implicitly when the application is terminated normally. Logging out of the HSM while the application is running can be done with the LunaSlotManager class. Please note that any ephemeral (non-persistent) key material present on the HSM will be destroyed when the session is logged out. Because the link to the HSM will be severed, cryptographic objects that were created by the LunaProvider will no longer be usable. Attempting to use these objects after logging out will result in undefined behavior.

All key material which was persisted on the HSM (either through the KeyStore interface or using the proprietary Make Persistent method) will remain on the HSM after a logout and will be accessible again when the application logs back in to the HSM.

## Keytool

The SafeNet JSP may be used in combination with Java's keytool utility to store and use keys on a SafeNet Luna Network HSM, see ["Using Java Keytool with SafeNet Luna Network HSM" on page 370](#).

## Cleaning Up

Keys that are made persistent will continue to exist on the HSM until they are explicitly destroyed, or until the HSM is reinitialized. Persistent keys that are no longer needed can be explicitly destroyed to free resources on the HSM.

Keys may be removed using the Keytool, or programmatically through the KeyStore interface or other methods available through the API.

LunaSlotManager contains methods that report the number of objects that exist on the HSM. See the Javadoc for LunaSlotManager for more information.

## PKCS#11/JCA Interaction

Keys created using the SafeNet PKCS#11 API can be used with the SafeNet JSP; the inverse is also true.

## Certificate Chains

The PKCS#11 standard does not provide a certificate chain representation. When a Java certificate chain is stored on a SafeNet token, the certificates of the chain appear as individual objects when viewed through the PKCS#11 API. In order for the LunaProvider to properly identify PKCS#11-created certificates as part of a chain attached to a private key, the certificates must follow the labeling scheme described below.

## Java Aliases and PKCS#11 Labels

The PKCS#11 standard defines a large set of object attributes, including the object label. This label is analogous to the Object alias in a java KeyStore.

The SafeNet KeyStore key entry or a SafeNet KeyStore certificate entry will have a PKCS#11 object label exactly equal to the Java alias. Similarly, a key created through PKCS#11 will have a Java alias equal to the PKCS#11 label.

Because a java certificate chain cannot be represented as a single PKCS#11 object, the individual certificates in the chain will each appear as individual PKCS#11 objects. The labels of these PKCS#11 objects will be composed of the alias of the corresponding key entry, concatenated with "--certX", where 'X' is the index of the certificate in the java certificate chain.

For example, consider a token that has a number of objects created through the Java API. The objects consist of the following:

- > A key entry with alias "signing key", consisting of a private key and a certificate chain of length 2
- > A trusted certificate entry with alias "root cert"
- > A secret key with alias "session key"

If all objects on the token were viewed through a PKCS#11 interface, 5 objects would be seen:

- > A private key with label "signing key"
- > A certificate with label "signing key--cert0"
- > A certificate with label "signing key--cert1"
- > A certificate with label "root cert"
- > A secret key with label "session key"

**NOTE** PKCS#11 labels (strings of ascii characters) and Java aliases (of the java.lang.String type) are usually fully compatible, but problems can arise if non-printable characters are used. To maintain compatibility between Java and PKCS#11, avoid embedding non-printable or non-ascii characters in aliases or object labels.

### RSA Cipher

Previously, by default, the SafeNet JSP RSA cipher mode used raw RSA X.509 encryption, with no padding.

For improved security and compatibility, default padding for RSA cipher has been changed from NoPadding to PKCS1v1\_5.

## The JC PROV PKCS#11 Java Wrapper

This section describes how to install and use the JC PROV Java wrapper for the PKCS#11 API. It contains the following topics:

- > ["JC PROV Overview" on the next page](#)
- > ["Installing JC PROV" on the next page](#)
- > ["JC PROV Sample Programs" on page 361](#)
- > ["JC PROV Sample Classes" on page 362](#)
- > ["JC PROV API Documentation" on page 366](#)

## JCPROV Overview

JCPROV is a Java wrapper for the PKCS#11 API. JCPROV is designed to be as similar to the PKCS#11 API as the Java language allows, allowing developers who are familiar with the PKCS#11 API to rapidly develop Java-based programs that exercise the PKCS#11 API.

AES-GMAC and AES-GCM are supported in JCPROV. Use `CK_AES_CMAC_PARAMS.java` to define the GMAC operation. Implementation is the same as for PKCS#11.

### JDK compatibility

The JCPROV Java API is compatible with JDK 1.5.0 or higher.

### The JCPROV library

The JCPROV library is implemented in `jcprov.jar`, under the namespace `com.safenetinc.jcprov`. It is accompanied by a shared library that provides the native methods used to access the appropriate PKCS#11 library. The name of the shared library is platform dependent, as follows:

Operating system	Shared library
Windows (32 and 64 bit)	jcprov.dll
Linux	libjcprov.so
Solaris	libjcprov.so
AIX	libjcprov.so

## Installing JCPROV

Use the SafeNet Luna Client Installer to install the JCPROV software (runtime and SDK packages). The software is installed in the location specified in the following table:

Operating system	Installation location
Windows	C:\Program Files\safenet\lunaclient\jcprov
Linux	/usr/safenet/lunaclient/jcprov
Solaris	/opt/safenet/lunaclient/jcprov
AIX	/usr/safenet/lunaclient/jcprov

The installation includes a **samples** subdirectory ( ) and a **javadocs** subdirectory ( ).

### Changing the Java JNI libraries (AIX only)

The Java VM on AIX does not support mixed mode JNI libraries. Mixed mode libraries are shared libraries that provide both 32-bit and 64-bit interfaces. It is therefore essential that you select the correct JNI library to use with your Java VM.



**CAUTION!** When JC PROV is installed, links are automatically created to use the 32-bit versions of the JNI libraries. You need to update the links if you are using a 64-bit operating system.

### To configure the JNI library for use with a 32-bit Java VM:

1. Ensure that the `/usr/safenet/lunaclient/jcprov/lib/libjcprov.a` symbolic link points to a 32-bit version of the library (`libjcprov_32.a`), for example `/usr/safenet/lunaclient/jcprov/lib/libjcprov_32.a`.
2. Ensure that the `/usr/safenet/lunaclient/jcprov/lib/libjcryptoki.a` symbolic link points to a 32-bit version of the library (`libjcryptoki_32.a`), for example `/usr/safenet/lunaclient/jcprov/lib/libjcryptoki_32.a`.

### To configure the JNI library for use with a 64-bit Java VM:

1. Ensure that the `/usr/safenet/lunaclient/jcprov/lib/libjcprov.a` symbolic link points to a 64-bit version of the library (`libjcprov_64.a`), for example `/usr/safenet/lunaclient/jcprov/lib/libjcprov_64.a`.
2. Ensure that the `/usr/safenet/lunaclient/jcprov/lib/libjcryptoki.a` symbolic link points to a 64-bit version of the library (`libjcryptoki_64.a`), for example `/usr/safenet/lunaclient/jcprov/lib/libjcryptoki_64.a`.

## JC PROV Sample Programs

Several sample programs are included to help you become familiar with JC PROV. The binaries for the sample programs are included in the `jcprovsamples.jar` file. You must compile the binaries before you can use the sources provided.

### Compiling and running the JC PROV sample programs

**CAUTION!** You require JDK 1.5.0 or newer to compile the JC PROV sample programs.

It is recommended that you compile the samples in their installed locations, so that the path leading to the samples directory in the installation location will allow them to be executed as documented below.

#### Prerequisites

For best results, perform the following actions before attempting to compile the sample programs:

- > Add `jcprov.jar` to your **CLASSPATH** environment variable
- > Add a path to the **CLASSPATH** environment variable that allows JC PROV to use the `com.safenetinc.jcprov.sample` namespace. This is required since all of the applications are registered under this namespace.

### To compile the JC PROV sample programs on UNIX/Linux:

1. Set the **CLASSPATH** environment variable to point to `jcprov.jar` and the root path for the sample programs.  
`export CLASSPATH=<jcprov_installation_directory>/*`
2. Change directory to the sample programs path.  
`cd /usr/safenet/lunaclient/jcprov/samples/com/safenetinc/jcprov/sample`

3. Use the **javac** program to compile the examples.  
**javac GetInfo.java**
4. Use the **java** program to run the samples.  
**java com.safenetinc.jcprov.sample.GetInfo -slot 0 -info**

---

### To compile the JC PROV sample programs on Windows:

1. Set the **CLASSPATH** environment variable to point to **jcprov.jar** and the root path for the sample programs:  
C:\> **set "CLASSPATH= C:\Program Files\safenet\lunaclient\jcprov\jcprov.jar; C:\program files\safenet\jcprov\samples"**
2. Use the **javac** program to compile the examples:  
C:\Program Files\safenet\lunaclient\jcprov\samples> **javac GetInfo.java**
3. Use the **java** program to run the samples:  
C:\Program Files\safenet\lunaclient\jcprov\samples> **java com.safenetinc.jcprov.sample.GetInfo -info -slot 0**

## JC PROV Sample Classes

JC PROV provides sample classes in the <jcprov\_installation\_directory>/**samples** directory. These include:

- > ["DeleteKey" below](#)
- > ["EncDec" on the next page](#)
- > ["GenerateKey" on page 364](#)
- > ["GetInfo" on page 365](#)
- > ["Threading" on page 365](#)

Other samples contained in the **samples** directory may be more or less useful to you depending on what you need. Each relevant sample has a description of both its purpose and its parameters in the header section of its file.

### DeleteKey

Demonstrates the deletion of keys.

A generated key is required to use this script. To generate a key, use ["GenerateKey" on page 364](#) or refer to ["Using Java Keytool with SafeNet Luna Network HSM" on page 370](#)

### Usage

**java com.safenetinc.jcprov.sample.DeleteKey -keyType <keytype> -keyName <keyname> [-slot <slotId>] [-password <password>]**

## Parameters

Parameter	Description
<b>-keytype</b>	Specifies the type of key you want to delete. Enter this parameter followed by one of the following supported key types: <ul style="list-style-type: none"> <li>&gt; <b>des</b> - single DES key</li> <li>&gt; <b>des2</b> - double-length, triple-DES key</li> <li>&gt; <b>des3</b> - triple-length, triple-DES key</li> <li>&gt; <b>rsa</b> - RSA key pair</li> </ul>
<b>-keyName</b>	Specifies the name (label) of the key you want to delete. Enter this parameter followed by the name (label) of the key you want to delete.
<b>-slot</b>	Specifies the slot for the HSM or partition that contains the key you want to delete. Optionally enter this parameter followed by the slot identifier for the HSM or partition that contains the key you want to delete. If this parameter is not specified, the default slot is used. <b>Default:</b> 1
<b>-password</b>	Specifies the password for the slot. Optionally enter this parameter followed by the slot password to delete a private key.

## EncDec

Demonstrates encryption and decryption operations by encrypting and decrypting a string.

A generated key is required to use this script. To generate a key, use ["GenerateKey" on the next page](#) or refer to ["Using Java Keytool with SafeNet Luna Network HSM" on page 370](#)

### Usage

```
java com.safenetinc.jcprov.sample.EncDec -keyType <keytype> -keyName <keyname> [-slot <slotId>] [-password <password>]
```

## Parameters

Parameter	Description
<b>-keytype</b>	Specifies the type of key you want to use to perform the encryption/decryption operation. Enter this parameter followed by one of the following supported key types: <ul style="list-style-type: none"> <li>&gt; <b>des</b> - single DES key</li> <li>&gt; <b>des2</b> - double-length, triple-DES key</li> <li>&gt; <b>des3</b> - triple-length, triple-DES key</li> <li>&gt; <b>rsa</b> - RSA key pair</li> </ul>

Parameter	Description
<b>-keyName</b>	Specifies the name (label) of the key you want to use to perform the encryption/decryption operation. Enter this parameter followed by the name (label) of the key you want to use to perform the encryption/decryption operation.
<b>-slot</b>	Specifies the slot for the HSM or partition that contains the key you want to use to perform the encryption/decryption operation. Optionally enter this parameter followed by the slot identifier for the HSM or partition that contains the key you want to use to perform the encryption/decryption operation. If this parameter is not specified, the default slot is used. <b>Default: 1</b>
<b>-password</b>	Specifies the password for the slot. Optionally enter this parameter followed by the slot password to encrypt/decrypt a private key.

## GenerateKey

Demonstrates the generation of keys.

### Usage

```
java com.safenetinc.jcprov.sample.GenerateKey -keyType <keytype> -keyName <keyname> [-slot <slotId>] [-password <password>]
```

### Parameters

Parameter	Description
<b>-keytype</b>	Specifies the type of key you want to generate. Enter this parameter followed by one of the following supported key types: <ul style="list-style-type: none"> <li>&gt; <b>des</b> - single DES key</li> <li>&gt; <b>des2</b> - double-length, triple-DES key</li> <li>&gt; <b>des3</b> - triple-length, triple-DES key</li> <li>&gt; <b>rsa</b> - RSA key pair</li> </ul>
<b>-keyName</b>	Specifies the name (label) of the key you want to generate. Enter this parameter followed by the name (label) of the key you want to generate.
<b>-slot</b>	Specifies the slot for the HSM or partition where you want to generate the key. Optionally enter this parameter followed by the slot identifier for the HSM or partition where you want to generate the key. If this parameter is not specified, the default slot is used. <b>Default: 1</b>
<b>-password</b>	Specifies the password for the slot. Optionally enter this parameter followed by the slot password to generate a private key.

## GetInfo

Demonstrates the retrieval of slot and token information.

### Usage

```
java com.safenetinc.jcprov.sample.GetInfo {-info | -slot [<slotId>] | -token [<slotId>]}
```

### Parameters

Parameter	Description
<b>-info</b>	Retrieve general information.
<b>-slot</b>	Retrieve slot information for the specified slot. Enter this parameter followed by the slot identifier for the slot you want to retrieve information from. If <slotId> is not specified, information is retrieved for all available slots.
<b>-token</b>	Retrieve token information for the HSM or partition in the specified slot. Enter this parameter followed by the slot identifier for the HSM or partition you want to retrieve information from. If <slotId> is not specified, information is retrieved for all available slots.

## Threading

This sample program demonstrates different ways to handle multi-threading.

This program initializes the Cryptoki library according to the specified locking model. Then a shared handle to the specified key is created. The specified number of threads is started, where each thread opens a session and then enters a loop which does a triple DES encryption operation using the shared key handle.

It is assumed that the key exists in slot 1, and is a Public Token object.

A generated key is required to use this script. To generate a key, use ["GenerateKey" on the previous page](#) or refer to ["Using Java Keytool with SafeNet Luna Network HSM" on page 370](#)

### Usage

```
java com.safenetinc.jcprov.sample.Threading -numThreads <numthreads> -keyName <keyname> -locking { none | os | functions } [-v]
```

### Parameters

Parameter	Description
<b>-numthreads</b>	Specifies the number of threads you want to start. Enter this parameter followed by an integer that specifies the number of threads you want to start.
<b>-keyName</b>	Specifies the triple-DES key to use for the encryption operation. Enter this parameter followed by the name (label) of the key to use for the encryption operation.

Parameter	Description
<b>-locking</b>	<p>Specifies the locking model used when initializing the Cryptoki library. Enter this parameter followed by one of the following locking models:</p> <ul style="list-style-type: none"> <li>&gt; <b>none</b> - do not use locking when initializing the Cryptoki library. If you choose this option, some threads should report failures.</li> <li>&gt; <b>os</b> - use the native operating system mechanisms to perform locking.</li> <li>&gt; <b>functions</b> - use Java functions to perform locking</li> </ul>
<b>-v</b>	<p>Specifies the password for the slot. Optionally enter this parameter followed by the slot password to generate a private key.</p>

## JCPROV API Documentation

The JCPROV API is documented in a series of javadocs. The documentation is located in the `<jcprov_installation_directory>/javadocs` directory.

## Java or JSP Errors

In the process of using our JSP (Java Service Provider) or programming for Java clients, you might encounter a variety of errors generated by various levels of the system. In rare cases those might be actual problems with the system, but in the vast majority of cases the errors are the system (or the Client-side libraries) telling you that you (or your application) have done something "wrong". In other words, the error messages are guidance to ensure that your actions and your programs are giving the system what it needs (in the right order and format) to complete the tasks that you ask of it.

Keep in mind that there are several levels involved. The SafeNet appliance and its HSM keycard have both software and firmware built in. Among other things, the system software handles the system side of communication between you (either as administrator or as Client) and the HSM on the appliance. In general, a client-side program (or programmer) would not encounter error messages directly from the system. If an error condition arises on the system, the most likely visibility would be error messages in the system logs - viewed by the appliance administrator - or else client-side messages based upon the interaction of the client-side software (ours and yours) with the appliance.

On the client side, the JSP and any Java programs that you use would be overlaid on, and using, the SafeNet library, which is an extended version of PKCS#11, customized to make use of our HSM (the standard itself and the cryptoki library are oriented toward in-software implementation of cryptographic functions, with some generic support of generic HSM functions, leaving room for each HSM supplier to support their own special functions by extending the standard). PKCS#11 is an RSA Laboratories cryptographic standard, and our libraries are a C-language implementation of that standard. You can view all that is known about PKCS #11 error conditions and messages at the [RSA website](#).

See "[Library Codes](#)" on [page 1](#) for a summary of error codes and their meanings, which includes the SafeNet extensions to the PKCS#11 standard that are specific to our HSM. Note that "error codes" do not usually indicate a problem with the appliance or HSM - they indicate an exception condition has been encountered, possibly because you (or your application) stopped/canceled a requested action before it could complete, provided incorrect or incomplete or wrongly-formatted input data, and so on, or possibly because a network connection has been disrupted, power has failed, or any of a variety of situations has been detected.

The JSP and your Java programming are overlaid on top of the PKCS#11 and SafeNet libraries. An error reported by a Java application might refer to a problem at the Java or JSP level, or the error might have been passed through from a lower level.

If you receive a cryptic error that looks something like:

```
Exception in thread "main"  
com.safenetinc.crypto.LunaCryptokiException: function 'C_Initialize' returns 0x30
```

then this error has been passed through from a lower layer and is not a Java or JSP error. You should look in the Error Codes page (link above) or in the PKCS#11 standard for the meaning of any error in a similar format.

In general, we wrap cryptoki exception codes. Most exceptions thrown by the JSP are in accordance with the specification. Check the Javadoc for the API call that threw the exception.

- > LunaException is used to report a LunaProvider-specific exception.
- > LunaCryptokiException reports errors returned by the HSM. Those might be wrapped in other Exceptions.

## Re-Establishing a Connection Between Your Java Application and SafeNet Luna Network HSM

Thales Group provides Java code samples for performing various application functions. For the proper method for performing a reconnect between a Java application and the SafeNet Luna Network HSM in the event of a disconnect, see **MiscReconnectDemo.java** in the Samples folder.

## Recovering From the Loss of All HA Members

The reinitialize method of the **LunaSlotManager** class takes the role of the PKCS#11 functions **C\_Finalize** and **C\_Initialize**. It is intended to be used when a complete loss of communication happens with all the members of your High Availability (HA) group.

This section describes the situations in which you should use this method, the effect this method has on a running application, and how to use this method safely. It is assumed that the auto-recovery features of the HA group are enabled.

You should read this section if you are developing an application that uses the LunaProvider in an environment that leverages an HA group of SafeNet Luna Network HSM appliances, so that you can safely recover an entire HA group.

### When to Use the reinitialize Method

When using the high-availability (HA) features of SafeNet Luna Network HSM, the auto-recovery feature will resolve situations where connectivity is lost to a subset of members for a brief time. However, if you lose connection to all members then the connection cannot be automatically recovered. Finalizing the library and initializing it again is the only way to recover other than restarting the application.

## Why the Method Must Be Used

In an HA group, we rely on having at least one member present in order to maintain state. If all of the members have been lost, then we cannot make any determination of which member has a known good state. Also, when a connection to a member is lost, the authenticated state is lost. When an individual member returns, we can use the authenticated state from another member to authenticate to the one that has returned. When all members are lost, then the authenticated state is lost on all members.

## What Happens on the HSM

The Network Trust Link Service (NTLS) on the HSM appliance is responsible for cleaning up any cryptographic resources, such as session objects, and cryptographic operation contexts when a connection to the client is lost. This happens when the socket closes.

### Effect on Running Applications

All resources created within the LunaProvider must be treated as junk after the library is finalized. Sessions will no longer be valid, session objects will point to non-existent objects or worse to a wrong object, and **Signature/Cipher/Mac/etc** objects will have invalid data.

Even **LunaKey** objects, which represent persistent objects, may contain invalid data. When the virtual slot is constructed in the library, the virtual object table is built from the objects present on each individual member. There is no guarantee that objects will have the same handle from one initialization to the next. This is true from the moment the connection to the group is severed. All these resources must be released before calling the reinitialize method. Beyond causing undesirable behavior when used, if these objects are garbage collected after cryptographic operations resume, they can result in the deletion of new objects or sessions.

### Using the Method Safely

The first indication that all communications may have been lost with the group is a **LunaException** reporting an error code of **0x30** (Device Error). Other possible error codes that can indicate this status are **0xE0** (Token not present) and **0xB3** (Session Handle invalid). The **LunaException** class does not provide the error code as a discrete value and you will have to parse the message string to determine this value.

At this point, you should validate that the group has been lost. The **com.safenetinc.luna.LunaHAStatus** object is best suited for this. Your application should know the slot number of the HA slot that you are using because it may not be able to query this information from the label when the slot is missing.

### Example

```
LunaHAStatus status = new LunaHAStatus(haSlotNumber);
```

You can query the object for detailed information or just use the **isOK()** method to determine if the group has been lost. The **isOK()** method will return true if all members are still present. If all members are gone, an exception will be thrown.

If no application is thrown, the application should be able to proceed operating, and any individual members of the HA group that have been lost will be recovered by the library. Further details on failed members can be queried through the **LunaHAStatus** object.

In many highly threaded applications, such as web applications, it is desirable to have a singleton, which is responsible for keeping track of the health of the HSM connection. This can be done by having worker threads report information to this singleton, by having a specific health check thread, or through a combination of the two.



Once the error state is discovered, all worker threads should be stopped or allowed to return an error. It may take up to 40 seconds from the time the group was lost for all threads to discover that there is an error. It can take 20 seconds for any given command to time out as a result of network failure. Once this happens, new commands will not be sent to that HSM, but a command may have just been sent and that command will have its own 20-second timeout. As mentioned above, in the section on application effects, all of the objects created or managed by the LunaProvider must be considered at this point to contain junk data. Operating after recovery with this junk data can cause undesired effects. This means all keys, signature, cipher, Mac, KeyGenerator, KeyPairGenerator, X509Certificate, and similar objects must be released to the garbage collector. Instances of most non-SPI (LunaAPI, LunaSlotManager, LunaTokenManager, etc.) objects do not pose a problem, but any instances of LunaSession held in the application during the course of the reinitialize can cause problems if they are returned to the session pool after the reinitialization takes place.

Cryptographic processing in the application should be halted until connection with the HSMs is back to a known good state. It may be appropriate to hold operations in a queue for processing later or to return an Out of Service message.

Once the objects have been released and no further processing will occur, the application should attempt recovery of the connection. This is done through the **com.safenetinc.luna.LunaSlotManager.reinitialize** method. This method will first clear session objects held within the provider before finalizing the library. After the library is finalized, it will initialize it again by invoking the **C\_Initialize** method. This method will establish a connection with all the HSMs if possible. The same **isOK()** method of **LunaHAStatus** can be used to determine if the group has been recovered successfully.

It is also important to only have a single thread call the **reinitialize** method. When multiple threads try to unload or load the library at the same time, errors can occur.

## Using Java Keytool with SafeNet Luna Network HSM

This page describes how to use the Java KeyTool application with the LunaProvider.

### Limitations

The following limitations apply:

- > You cannot use the `importkeystore` command to migrate keys from a Luna KeyStore to another KeyStore.
- > Private keys cannot be extracted from the KeyStore unless you have the Key Export model of the HSM.
- > By default secret keys created with the LunaProvider are non-extractable.

The example below uses a KeyStore file containing only the line “slot:0”. This tells the Luna KeyStore to use the token in slot 0.

For information on creating keys through Key Generator or Key Factory classes please see the LunaProvider Javadoc or the JCA/JCE API documentation.

Keys (with self signed certificates) can be generated using the `keytool` by specifying a valid Luna KeyStore file and specifying the KeyStore type as “Luna”. The password presented to authenticate to the KeyStore is the challenge password of the partition.

### Example

```
keytool -genkeypair -alias myKey -keyalg RSA -sigalg SHA256withRSA -keystore keystore.luna -
storetype Luna
Enter keystore password:
What is your first and last name?
[Unknown]: test
What is the name of your organizational unit?
[Unknown]: codesigning
What is the name of your organization?
[Unknown]: SafeNet Inc
What is the name of your City or Locality?
[Unknown]: Ottawa
What is the name of your State or Province?
[Unknown]: ON
What is the two-letter country code for this unit?
[Unknown]: CA
Is CN=test, OU=codesigning, O=SafeNet Inc, L=Ottawa, ST=ON, C=CA correct?
[no]: yes
Enter key password for <myKey>
(RETURN if same as keystore password):
```

## Keytool Usage and Examples

The LunaProvider is unable to determine which PKCS#11 slot to use without providing a keystore file. This file can be manually created to specify the desired slot by either the slot number or partition label. The naming of the files is not important - only the contents.

The `keytool` examples below refer to a keystore file named `bylabel.keystore`. Its content is just one line:

```
tokenlabel:a-partition-name
```

where `a-partition-name` is the name of the partition you want the Java client to use.

Here is the (one line) content of a keystore file that specifies the partition by slot number:

```
slot:0
```

where 1 is the slot number of the partition you want the Java client to use.

To test that the Java configuration is correct, execute:

```
my-lunaclient:~/luna-keystores$ keytool -list -v -storetype Luna -keystore bylabel.keystore
```

The system requests the password of the partition and shows its contents.

Here is a sample command to create an RSA 2048 bit key with SHA256withRSA self-signed certificate. This example uses java 6, other versions might be slightly different.

```
keytool -genkeypair -alias keyLabel -keyalg RSA -keysize 2048 -sigalg SHA256withRSA -storetype Luna -keystore bylabel.keystore -validity 365
```

```
Enter keystore password:
What is your first and last name?
 [Unknown]: mike
What is the name of your organizational unit?
 [Unknown]: appseng
What is the name of your organization?
 [Unknown]: safenet
What is the name of your City or Locality?
 [Unknown]: ottawa
What is the name of your State or Province?
 [Unknown]: on
What is the two-letter country code for this unit?
 [Unknown]: ca
Is CN=mike, OU=appseng, O=safenet, L=ottawa, ST=on, C=ca correct?
 [no]: yes
Enter key password for <keyLabel>
 (RETURN if same as keystore password):
```

With the Luna provider there is no concept of a key password and anything entered is ignored.

The following is a more elaborate sequence of keytool usage where the final goal is to have the private key generated in the HSM through keytool “linked” to its certificate.

## Import CA certificate

It is mandatory to import the CA certificate – keytool verifies the chain before importing a client certificate:

```
my-lunaclient:~/luna-keystores$ keytool -importcert -storetype Luna -keystore bylabel.keystore -alias root-ugoca -file Ugo_CA.crt
```

It is not required to import this certificate in the Java default cacerts keystore.

## Generate private key

Generate the private key. It is not important that the sigalg specified matches the one used by the CA. You can also have OU, O, L, ST, and C different from the ones in the CA certificate.

```
my-lunaclient:~/luna-keystores$ keytool -genkeypair -alias java-client2-key -keyalg RSA -keysize 2048 -sigalg SHA256withRSA -storetype Luna -keystore bylabel.keystore
Enter keystore password:
What is your first and last name?
 [Unknown]: java-client2
What is the name of your organizational unit?
```

```
[Unknown]: SE
What is the name of your organization?
[Unknown]: SFNT
What is the name of your City or Locality?
[Unknown]: bgy
What is the name of your State or Province?
[Unknown]: bg
What is the two-letter country code for this unit?
[Unknown]: IT
Is CN=java-client2, OU=SE, O=SFNT, L=bgy, ST=bg, C=IT correct?
[no]: yes
Enter key password for <java-client2-key>
(RETURN if same as keystore password):
```

### Verify that the private key is in the partition:

```
my-lunaclient:~/luna-keystores$ keytool -list -v -storetype Luna -keystore bylabel.keystore
Enter keystore password:
Keystore type: LUNA
Keystore provider: LunaProvider
Your keystore contains 2 entries
Alias name: root-ugoca
Creation date: Oct 4, 2012
Entry type: trustedCertEntry
Owner: EMAILADDRESS=ugo@computer.org, CN=Ugo CA, OU=SE, O=SFNT, L=bgy, ST=bg, C=IT
Issuer: EMAILADDRESS=ugo@computer.org, CN=Ugo CA, OU=SE, O=SFNT, L=bgy, ST=bg, C=IT
Serial number: 1
Valid from: Thu Oct 04 09:02:00 CEST 2012 until: Tue Oct 04 09:02:00 CEST 2022
Certificate fingerprints:
    MD5:  A2:15:4F:94:70:2B:D2:F7:C0:96:B1:47:F2:1D:03:E9
    SHA1:  B3:4A:68:0A:8D:12:39:86:11:CE:EF:22:1B:D1:DE:8D:E9:19:2B:F4
    Signature algorithm name: SHA256withRSA
    Version: 3
*****
*****
Alias name: java-client2-key
Creation date: Oct 4, 2012
Entry type: PrivateKeyEntry
Certificate chain length: 1
Certificate[1]:
Owner: CN=java-client2, OU=SE, O=SFNT, L=bgy, ST=bg, C=IT
Issuer: CN=java-client2, OU=SE, O=SFNT, L=bgy, ST=bg, C=IT
Serial number: 506d42dd
Valid from: Thu Oct 04 10:03:41 CEST 2012 until: Wed Jan 02 09:03:41 CET 2013
Certificate fingerprints:
    MD5:  7A:37:72:6B:8A:05:B6:49:91:70:0F:C4:04:1F:69:D9
    SHA1:  05:CD:9F:A5:37:0B:A6:A3:65:24:56:40:5E:29:2D:95:2D:53:8F:5F
    Signature algorithm name: SHA256withRSA
    Version: 3
```

## Create the CSR

Create the CSR to be submitted to the CA.

```
my-lunaclient:~/luna-keystores$ keytool -certreq -alias java-client2-key -file client2-ugoca.csr -
storetype Luna -keystore bylabel.keystore
Enter keystore password:
```

Now have the CSR signed by the CA. Have the issued certificate exported to include the certificate chain. Without the chain, keytool fails with the error:

```
java.lang.Exception: Failed to establish chain from reply
```

If you do not have the chain, you can use the steps in the section below to build the chain yourself.

To translate a PKCS#7 exported certificate from DER format to PEM format use the following:

```
my-lunaclient $ openssl pkcs7 -inform der -in Luna_Key.p7b -outform pem -out Luna_Key-pem.p7b
```

Microsoft CA exports certificates with chain only in PKCS#7 PEM encoded format.

## Import client certificate

Now import the client certificate:

```
user@myserver:~/luna-keystores$ keytool -importcert -storetype Luna -keystore bylabel.keystore -
alias java-client2-key -file java-client2.crt
Enter keystore password:
Certificate reply was installed in keystore
```

Ensure that it is linked to the private key generated previously – the chain length is not 1 (Certificate chain length: 2)

```
user@myserver:~/luna-keystores$ keytool -list -v -storetype Luna -keystore bylabel.keystore
Enter keystore password:
Keystore type: LUNA
Keystore provider: LunaProvider
Your keystore contains 2 entries
Alias name: root-ugoca
Creation date: Oct 4, 2012
Entry type: trustedCertEntry
Owner: EMAILADDRESS=ugo@computer.org, CN=Ugo CA, OU=SE, O=SFNT, L=bggy, ST=bg, C=IT
Issuer: EMAILADDRESS=ugo@computer.org, CN=Ugo CA, OU=SE, O=SFNT, L=bggy, ST=bg, C=IT
Serial number: 1
Valid from: Thu Oct 04 09:02:00 CEST 2012 until: Tue Oct 04 09:02:00 CEST 2022
Certificate fingerprints:
    MD5:  A2:15:4F:94:70:2B:D2:F7:C0:96:B1:47:F2:1D:03:E9
    SHA1:  B3:4A:68:0A:8D:12:39:86:11:CE:EF:22:1B:D1:DE:8D:E9:19:2B:F4
    Signature algorithm name: SHA256withRSA
    Version: 3
*****
*****
Alias name: java-client2-key
Creation date: Oct 4, 2012
Entry type: PrivateKeyEntry
Certificate chain length: 2
Certificate[1]:
Owner: CN=java-client2, OU=SE, O=SFNT, L=bggy, ST=bg, C=IT
Issuer: EMAILADDRESS=ugo@computer.org, CN=Ugo CA, OU=SE, O=SFNT, L=bggy, ST=bg, C=IT
Serial number: 5
Valid from: Thu Oct 04 10:07:00 CEST 2012 until: Fri Oct 04 10:07:00 CEST 2013
Certificate fingerprints:
    MD5:  4B:F0:9E:BC:EB:6A:88:2B:87:3A:76:35:7C:DE:4B:B4
    SHA1:  F1:0C:BC:E3:A1:97:E4:8B:24:2D:44:43:7A:EA:71:52:B3:C3:20:D7
    Signature algorithm name: SHA256withRSA
    Version: 3
Certificate[2]:
Owner: EMAILADDRESS=ugo@computer.org, CN=Ugo CA, OU=SE, O=SFNT, L=bggy, ST=bg, C=IT
Issuer: EMAILADDRESS=ugo@computer.org, CN=Ugo CA, OU=SE, O=SFNT, L=bggy, ST=bg, C=IT
Serial number: 1
Valid from: Thu Oct 04 09:02:00 CEST 2012 until: Tue Oct 04 09:02:00 CEST 2022
Certificate fingerprints:
    MD5:  A2:15:4F:94:70:2B:D2:F7:C0:96:B1:47:F2:1D:03:E9
```

```
SHA1: B3:4A:68:0A:8D:12:39:86:11:CE:EF:22:1B:D1:DE:8D:E9:19:2B:F4
Signature algorithm name: SHA256withRSA
Version: 3
```

## How to build a certificate with chain ...

When you receive the client certificate without the chain, it is possible to build a PKCS#7 certificate that includes the chain (and then feed it to `keytool -importcert`). In short, the “single” certificates without the chain can be “stacked” together by manually editing a PEM cert file; this PEM cert file can then be translated into a PKCS#7 cert. How? Like this:

1. Prerequisites. Have all the certs in .crt format. The cert in this format is represented as an ASCII file starting with the line

```
-----BEGIN CERTIFICATE-----
```

and ending with

```
-----END CERTIFICATE-----
```

For example, if the client cert is issued by a subCA and the subCA is signed by a root CA, you will have 3 cert files – the client cert, the subCA cert, and the root CA cert. If the certs are not in .crt format, `openssl` can be used to transform the format that you have into .crt format. See notes below.

2. Open a new text file, calling it, for example, `cert-with-chain.crt`. Insert into this file the content of the certificates in the chains. For the above example, you must first insert the client cert, then the subCA cert, then the root CA cert. The content of the file would then resemble the following:

```
-----BEGIN CERTIFICATE-----
    <-- client cert goes here
-----END CERTIFICATE-----
-----BEGIN CERTIFICATE-----
    <-- subCA cert goes here
-----END CERTIFICATE-----
-----BEGIN CERTIFICATE-----
    <-- root CA cert goes here
-----END CERTIFICATE-----
```

3. Use the following `openssl` command to convert the new certificate with chain, that you just created above, to a PKCS#7 certificate with chain:

```
my-sa $ openssl crl2pkcs7 -nocrl -certfile HSM_Luna-manual-chain.crt -out HSM_Luna-manual-
chain.p7b -certfile root_CA.crt
```

4. Keytool is then able to import this .p7b certificate into the Luna keystore and correctly validate the chain.

## Additional minor notes

1. Command to add a CA to the default CA cert store “cacerts”:

```
root@myserver:~# keytool -importcert -trustcacerts -alias root-ugoca -file /home/ugo/luna-
keystores/Ugo_CA.crt -keystore /etc/java-6-sun/security/cacerts
```

2. Use the following `openssl` command to convert a PKCS#7 certificate DER-encoded into a PKCS#7 PEM-encoded certificate:

```
user@myserver:~/tmp/$ openssl pkcs7 -inform der -in java-client2.p7b -out java-client2-pem.p7b
```

3. Use the following `openssl` command to convert a PKCS#7 DER-encoded certificate into a .crt PEM certificate:

```
user@myserver:~/tmp/$ openssl pkcs7 -print_certs -inform der -in Ugo_CA.p7b -out Ugo_CA-p7-2-  
cert.crt
```

**4. Use the following openssl command to convert a PEM certificate with chain to a PKCS#7 with chain:**

```
user@myserver:~/tmp/$ openssl crl2pkcs7 -nocrl -certfile HSM_Luna-manual-chain.crt -out HSM_  
Luna-manual-chain.p7b -certfile Ugo_CA.crt
```

---

## JSP Dynamic Registration Sample

---

You may prefer to dynamically register the SafeNet provider in order to avoid possible negative impacts on other applications running on the same machine. Using dynamic registration also allows you to keep installation as straightforward as possible for your customers.

This sample code shows an example of dynamic registration with SafeNet's SafeNet provider. The SafeNet provider is registered in position 2, ensuring that the "SUN" provider is still the default. If you want the SafeNet provider to be used when no provider is explicitly specified, it should be registered at position 1.

### Sample Code

```
try {
    com.safenetinc.luna.LunaSlotManager.getInstance().login("<HSM Partition Password>");
    java.security.Provider provider = new com.safenetinc.luna.provider.LunaProvider();
    // removing the provider is only necessary if it is already registered
    // and you want to change its position
    java.security.Security.removeProvider(provider.getName());
    java.security.Security.insertProviderAt(provider, 2);
    com.safenetinc.luna.LunaSlotManager.getInstance().logout();
} catch (Exception e) {
    System.out.println("Exception caught during loading of the providers: "
        + e.getMessage());
}
```



# CHAPTER 8: Microsoft Interfaces

This chapter describes the Microsoft interfaces to the PKCS#11 API. It contains the following topics:

- > ["The SafeNet CSP Registration Tool and Utilities" below](#)
- > ["KSP for CNG" on page 383](#)
- > ["SafeNet CSP Calls and Functions" on page 389](#)

## The SafeNet CSP Registration Tool and Utilities

This section describes how to use the SafeNet CSP registration tool and related utilities to configure the SafeNet Luna Network HSM client to use a SafeNet Luna Network HSM with Microsoft Certificate Services. You must be the Administrator or a member of the Administrators group to run the SafeNet CSP tools.

The SafeNet CSP can be used by any application that acquires the context of the SafeNet CSP. All users who login and use the applications that acquired the context have access to the SafeNet CSP. After you register the SafeNet Luna Network HSM partitions with SafeNet CSP, your CSP and KSP code should work in the same manner whether our HSM (crypto provider) is selected, or the default provider is used.

**NOTE** The SafeNet CSP is an optional installation. It is installed by default in <luna\_client\_install\_dir>/CSP. If the CSP is not installed, re-run the installer.

### The Keymap Utility

Use the **keymap** utility if you have previously been using another provider (with its keys in the SafeNet Luna Network HSM) and wish to migrate to MS CSP keeping your established keys. The keymap utility simply creates on the SafeNet Luna Network HSM the data object that MS CSP expects, which in turn makes your existing keys available to MS CSP. See <luna\_client\_install\_dir>/CSP/keymap.exe.

#### Example

```
C:\artifacts\sa64client_installer>C:\git\crypto\CSP\keymap\output\SA64client\win64-cl-x86-dbg\bin\keymap.exe
```

```
LunaCSP Key Association (64-bit) v7.2.0-344. Copyright (c) 2018 SafeNet. All rights reserved.
```

```
Initializing the library...Detecting available slots...OK.
```

```
List of available slots:  
Slot# 1.  
Slot# 2.  
Slot# 3.  
Slot# 4.  
Slot# 5.  
Slot# 6.  
Slot# 7.
```

Slot# 8.

Opening a session on one of the available slots.

Enter slot ID on which to open a session, valid range: [1 to 8] or 0 to quit: 4

Opening a session on slot 4...

Enter challenge for partition:\*\*\*\*\*

OK

```

1      Browse Objects
2      Create Key Container
3      View Key Container
4      Associate Keys With Container
5      Do Nothing
99     Destroy Key Container
0      Exit
Choice: 1

```

Available KeyContainer objects on the token.

Available RSA Public Key objects on the token.

Handle: 180                   Label: Multitoken RSA 1024-bit Public Key for Wrap

Available RSA Private Key objects on the token.

Handle: 181                   Label: Multitoken RSA 1024-bit Private Key for Unwrap

```

1      Browse Objects
2      Create Key Container
3      View Key Container
4      Associate Keys With Container
5      Do Nothing
99     Destroy Key Container
0      Exit
Choice: 0

```

OK.

Application Exiting.

C:\artifacts\sa64client\_installer>

## The ms2Luna Utility

Use the **ms2Luna** utility if you already have MS CSP in use with software key storage and you now wish to continue with your keys held on the SafeNet Luna Network HSM. See <luna\_client\_install\_dir>/**CSP/ms2luna.exe**.

## The CSP Registration Tool

You can use the CSP registration tool (<luna\_client\_install\_dir>/**CSP/register.exe**) to perform the following functions:

- > Register HSM partitions for use with the SafeNet CSP. The password for each HSM Partition is secured such that only the user for which the password was secured is able to un-secure it. See ["Registering Partitions" on the next page](#)

- > Register which non-RSA cryptographic algorithms you want performed in software only. See "[Registering the Cryptographic Algorithms to be Performed in Software](#)" on page 381
- > Enable key counting in KSP/CSP. See "[Enabling Key Counting](#)" on page 382.
- > Register the provider library with the Windows OS to make it available for applications.

### Command Syntax

**register.exe** [/partition | /algorithms | /library | /usagelimit] [/highavailability] [/strongprotect] [/cryptouser] [/?]

Parameter	Shortcut	Description
<b>/partition</b>	<b>/p</b>	Register a partition and its encrypted challenge. You are prompted through the required steps to select and register a SafeNet Luna Network HSM partition. This is the default option. If you type <b>register</b> with no additional parameters, then <b>/partition</b> is assumed. For example, if you type <b>register /highavail</b> or <b>register /strongprotect</b> , then <b>/partition</b> is invoked and the additional option that you selected (i.e., <b>/highavail</b> or <b>/strongprotect</b> ) is run along with it. That is, typing <b>register /highavail</b> is the same as typing <b>register /partition /highavail</b> .
<b>/highavail</b>	<b>/h</b>	Register only high availability (HA) partitions.
<b>/strongprotect</b>	<b>/s</b>	Strongly protect the challenge for registered partition
<b>/algorithms</b>	<b>/a</b>	Register the desired software ONLY algorithms
<b>/library</b>	<b>/l</b>	Register CSP library and signature in the registry
<b>/usagelimit</b>	<b>/u</b>	Register CSP RSA key maximum usage limit
<b>/cryptouser</b>	<b>/c</b>	Use CSP as Crypto User

**NOTE** Before using the 32-bit CSP provider, it is necessary to register the library with Windows. To do this, complete the 32-bit client setup, then run the 32-bit register.exe with the **/library** option, as shown:

```
C:\Program Files\SafeNet\LunaClient\win32\CSP>register.exe /library
register v7.2.0
Success registering SOFTWARE\Microsoft\Cryptography\Defaults\Provider\Luna enhanced RSA and AES
provider for Microsoft Windows !
Success registering SOFTWARE\Microsoft\Cryptography\Defaults\Provider\Luna Cryptographic
Services for Microsoft Windows !
Success registering SOFTWARE\Microsoft\Cryptography\Defaults\Provider\Luna SChannel
Cryptographic Services for Microsoft Windows !
```

### Registering Partitions

The syntax used to register partitions depends on whether the partitions use high availability (HA) or not, as detailed in the following procedures.

### To register a standard HSM partition:

1. In the install directory for CSP enter the register command and respond to the prompts:

```
C:\Program Files\SafeNetLunaClient\CSP> register
```

For example:

```
*****
SafeNet Luna CSP, Partition Registration
Protect the HSM's challenge for the selected partitions.
NOTE:
This is a WEAK protection of the challenge!
After you have configured all applications that will use
the Luna CSP, and run them once, you MUST run:
register /partition /strongprotect *
to strongly protect the registered challenges!
*****
This procedure is a destructive procedure and will completely replace
any previous settings!
Do you wish to continue?: [y/n]
Do you want to register the partition named 'nes'? [y/n]:
Please enter the SafeNet Luna Network HSM challenge for the partition 'nes' :
Success registering the ENCRYPTED challenge for partition 'nes'.
Only the Luna CSP will be able to use this data!
Registered 1 partition(s) for use by the Luna CSP!
```

All available Partitions are presented for you to register or not.

2. Install and/or configure your application(s).
3. Run each of your applications once to use SafeNet CSP.
4. Enter the following command to strongly protect the registered challenges:

```
register /partition /strongprotect *
```

**CAUTION!** You must run **register /strongprotect** to ensure the protection of the HSM partition passwords.

**NOTE** Once you run the **/strongprotect** option, only those users that existed previous to the **/strongprotect** command are allowed to use the SafeNet CSP. If the **/strongprotect** option is not used, then any/all users can use the SafeNet CSP.

5. If you are using a 64-bit CSP provider, skip this step as it is automatically done for you.

Enter the following command to reconnect to the library:

```
register.exe /library
```

6. Run all applications as usual.

### To register an HA partition:

When registering an HA Partition for use, follow these steps.

1. Enter the following command and respond to the prompts:

```
C:\Program Files\SafeNet\LunaClient\CSP> register /highavail
```

**NOTE** Use the **/highavail** option only if you have HA set up for your SafeNet Luna Network HSMs.

2. For example:

```
*****
SafeNet Luna CSP, Partition Registration
Protect the HSM's challenge for the selected partitions.
NOTE:
This is a WEAK protection of the challenge!
After you have configured all applications that will use
the Luna CSP, and run them once, you MUST run:
  register /partition /strongprotect *
to strongly protect the registered challenges!
*****
This procedure is a destructive procedure and will completely replace
any previous settings!
Do you wish to continue?: [y/n]
Do you want to register the partition named 'nes'? [y/n]:
Please enter the SafeNet Luna Network HSM challenge for the partition 'nes' :
Success registering the ENCRYPTED challenge for partition 'nes'.
Only the Luna CSP will be able to use this data!
Registered 1 partition(s) for use by the Luna CSP!
```

**NOTE** If you are using HA, then only the HA virtual partition is presented for registering.

3. Install and/or configure your application(s).
4. Run each of your applications once to use SafeNet CSP.
5. Enter the following command to strongly protect the registered challenges:

**register /partition /strongprotect \***

**CAUTION!** You must run **register /strongprotect** to ensure the protection of the HSM partition passwords.

**NOTE** Once you run the **/strongprotect** option, only those users that existed previous to the **/strongprotect** command are allowed to use the SafeNet CSP. If the **/strongprotect** option is not used, then any/all users can use the SafeNet CSP.

6. If you are using a 64-bit CSP provider, skip this step as it is automatically done for you.  
Enter the following command to reconnect to the library:

**register.exe /library**

7. Run all applications as usual.

### Registering the Cryptographic Algorithms to be Performed in Software

Certain operations (symmetric), such as the hash operation may be performed faster in software than on the SafeNet Luna Network HSM. The **register /algorithms** command allows you to choose which algorithms to de-register from the SafeNet Luna Network HSM. The trade-off is a gain in speed, at the cost of some security

(exposing the operation in software). Signing and other asymmetric operations are always done on the HSM.

### To register algorithms for software-only use:

1. In the install directory for CSP enter the register /algorithms command and respond to the prompts:

```
C:\Program Files\SafeNet\LunaClient\CSP> register /algorithms
```

2. You are prompted for yes or no responses about which algorithms are to be registered for software-only use. For example:

```
*****
SafeNet Luna CSP, Algorithm Registration

Register algorithms to be done in software by the Microsoft CSP(s).
BY DEFAULT, ALL ALGORITHMS ARE DONE IN HARDWARE BY THE SafeNet Luna Network HSM.
ONLY NON RSA ALGORITHMS MAY BE CONFIGURED FOR SOFTWARE.
RSA PUBLIC/PRIVATE ALGORITHMS WILL ALWAYS BE IN HARDWARE.
*****
Do you want algorithm 'CALG_RC2', done in software?(y/n):
Do you want algorithm 'CALG_RC4', done in software?(y/n):
Do you want algorithm 'CALG_RC5', done in software?(y/n):
Do you want algorithm 'CALG_DES', done in software?(y/n):
Do you want algorithm 'CALG_3DES_112', done in software?(y/n):
Do you want algorithm 'CALG_3DES', done in software?(y/n):
Do you want algorithm 'CALG_MD2', done in software?(y/n):
Do you want algorithm 'CALG_MD5', done in software?(y/n):
Do you want algorithm 'CALG_SHA', done in software?(y/n):
Do you want algorithm 'CALG_MAC', done in software?(y/n):
Do you want algorithm 'CALG_HMAC', done in software?(y/n):
Success registering software only algorithms:
CALG_RC2,CALG_RC4,CALG_RC5,...!
```

If you chose **no** for all prompts, then all algorithms revert to hardware and the following is displayed:

```
All algorithms have been de-registered and will now only be done in hardware!
```

### Enabling Key Counting

Key counting allows you to specify the maximum number of times that a key can be used. It sets the upper limit from 0 to MAX(UInt32).

### To enable key counting:

In the install directory for the CSP, enter the following command and respond to the prompts. Enter the key usage limit, or enter 0 to turn off the feature:

```
C:\Program Files\SafeNet\LunaClient\CSP> register /usagelimit
```

For example:

```
C:\Program Files\SafeNet\LunaClient\CSP>register /usagelimit
register v1.0.1
```

```
Enter the key usage limit: 2000
```

```
Successfully configured the key usage limit to 2000 uses.
```

## KSP for CNG

CNG (Cryptography Next Generation) is Microsoft's cryptographic application programming environment (API) replacing the older Windows cryptoAPI (CAPI). CNG adds new algorithms along with additional flexibility and functionality.

SafeNet provides CSP for applications running in older Windows crypto environments (running CAPI), and KSP for newer Windows clients (running CNG). Consult Microsoft documentation to determine which one is appropriate for your client operating system.

KSP must be installed on any computer that is intended to act via CNG as a Client of the HSM, running crypto operations in hardware. You need KSP to integrate SafeNet cryptoki with CNG and to use the newer functions and algorithms in Microsoft IIS.

After you register the SafeNet Luna Network HSM partitions with SafeNet KSP, your KSP code should work in the same manner whether our HSM (crypto provider) is selected, or the default provider is used.

**NOTE** Be aware when working in a mixed environment or updating applications that previously used CAPI and the SafeNet CSP - the new algorithms supported by CNG (such as SHA512 and ECDSA) in Certificate Services are not recognized by systems that use CAPI. If Certificate Services is configured to use any of these new Algorithms then the signed certificates can be installed only on systems that are aware of these new algorithms. Any of the systems that use CAPI will not be able to use this feature. The installation of certificate will fail.

This section contains directions for the following procedures:

- > ["Installing KSP" below](#)
- > ["Configuring KSP with GUI" on the next page](#)
- > ["Configuring KSP via the Command Line" on page 387](#)
- > ["Enabling Key Counting" on page 389](#)

### Installing KSP

KSP is installed using the SafeNet Luna Client installer. Note that it is not installed by default and must be explicitly selected when you install the SafeNet Luna Client. You can also install KSP after you install the SafeNet Luna Client by re-running the installer.

The KSP installer installs the following utilities in the C:\Program Files\SafeNet\LunaClient\KSP folder:

Utility name	Description
KspConfig.exe	A GUI utility used to configure KSP.
kspcmd.exe	A command-line utility used to configure KSP.
ksputil.exe	A command-line utility used to make keys available to other clients, such as in a clustering configuration.

Utility name	Description
ms2Luna.exe	A command-line utility used to migrate software-based keys to a SafeNet Luna Network HSM.

## Configuring KSP with GUI

After installing KSP, use the KSP configuration wizard to register your HSM Partitions for use with CNG. The KSP configuration tool secures the Password for each HSM Partition such that only the user for which the password was secured is able to un-secure it.


Briefly, the important points are:

- > Register the cryptoki to be used.
- > Register the slot-to-be-used to the local admin (which allows the admin to interact with the slot).
- > Register the slot-to-be-used to the local system (which allows the operating system to interact with the slot).

**NOTE** Only the Administrator or a member of the Administrators group can run "KspConfig.exe". The SafeNet KSP can be used by any application that acquires the context of the SafeNet KSP. All users who login and use the applications that acquired the context have access to the SafeNet KSP.


### To configure KSP with the GUI:

1. Go to C:\Program Files\SafeNet\LunaClient\KSP. Launch KspConfig.exe (the KSP configuration wizard).
2. In the left-hand pane (tree view) double-click "Register Or View Security Library"

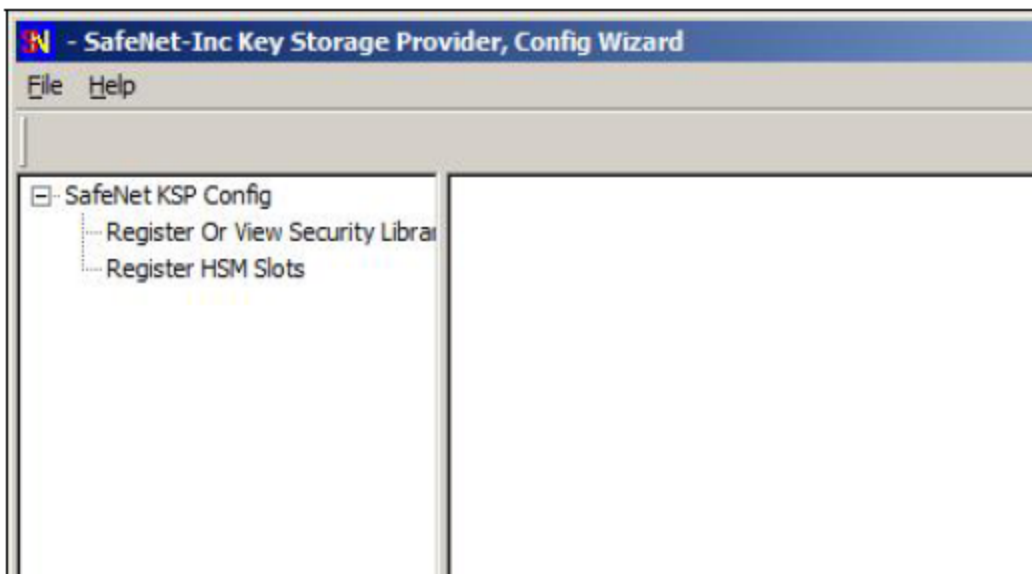


3. In the right-hand pane, browse to the library C:\Program Files\SafeNet\LunaClient\cryptoki.dll and click **Register**.
4. When the success message appears, click **OK**.



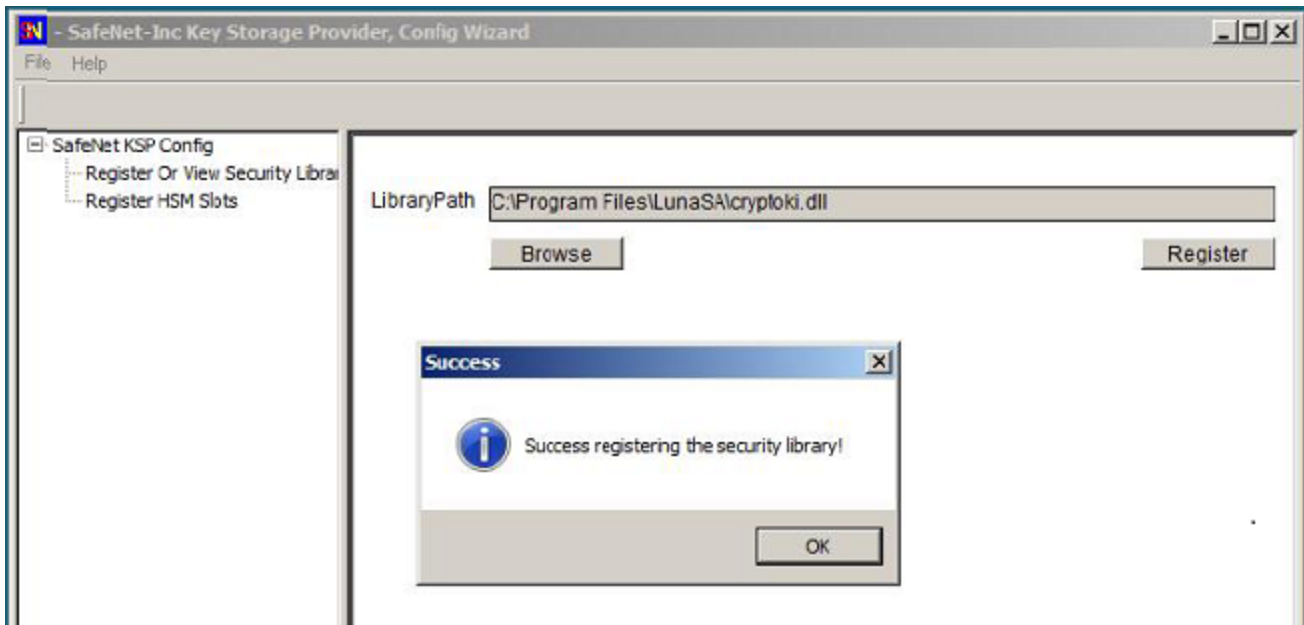


- Return to the left-hand pane and double-click "Register HSM Slots", and click [Next]. In general, we recommend that you register by slot label, rather than slot number, if you are using an HA configuration.

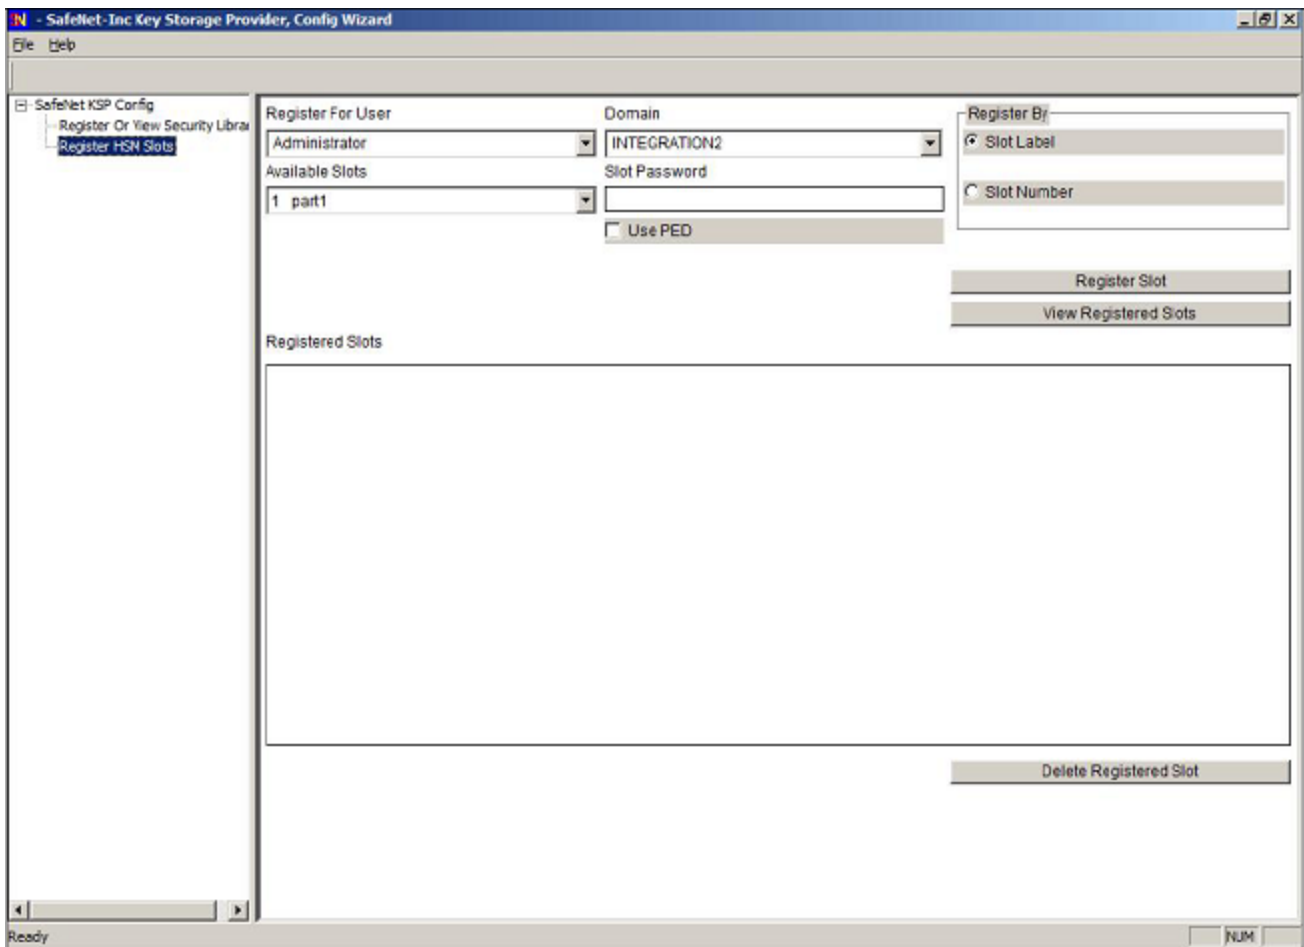


6. In the "Slot Password" field, type in the password for the indicated slot. To the right of the window, click the **Register Slot** button to register the slot for Domain/User. A success message appears.

Note that the "Register for User" field should be Administrator (or the admin equivalent account that will be managing this setup) and "Domain" should match the domain or local computer with which you are logged in.

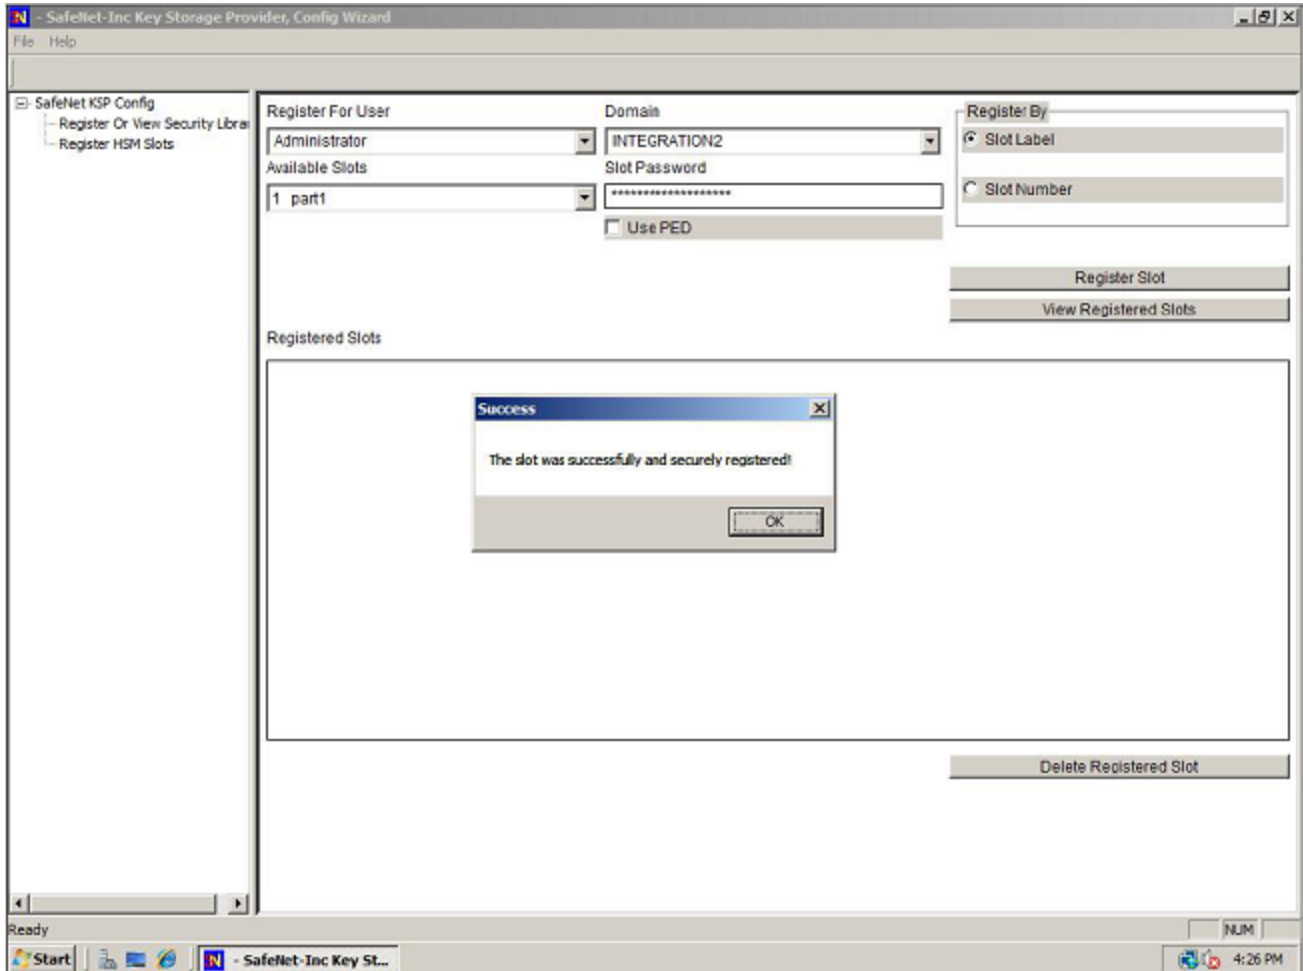

7. Return to the "Domain" pull-down list select "SYSTEM" under "Register for User" and select "NT AUTHORITY" under "Domain", supply the password for the slot being registered, and again click **Register Slot** to complete the KSP configuration.

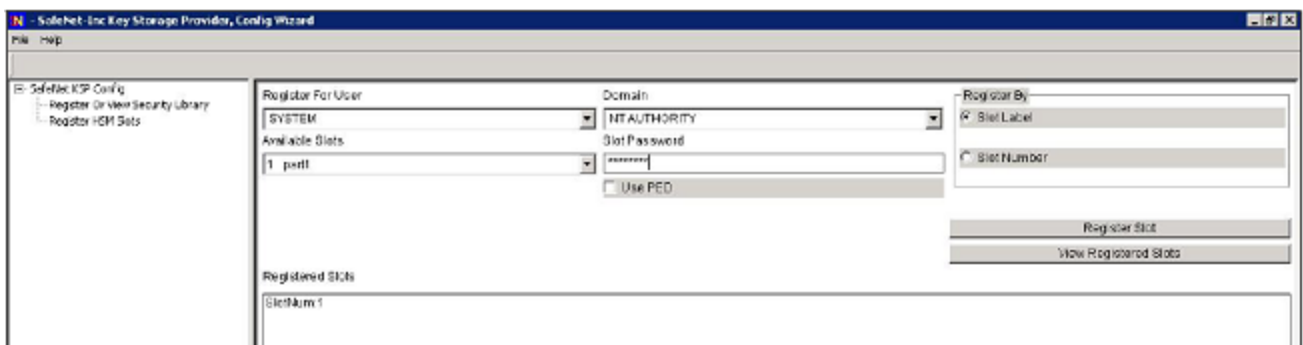

8. Once you have the slots registered, you can begin connecting with your client application to perform crypto operations in your HSM Partitions (or HA virtual slots). If a SafeNet-tested Integration procedure for your application is not available for download from the SafeNet website, contact SafeNet Customer Support.

## Configuring KSP via the Command Line

On headless or Core platforms with no graphical interface, use the following method to configure and register KSP.

In the SAFENET folder, the 'kspcmd' utility is used to manually register the users along with their domain

- > "Administrator" user with the appropriate domain. In this example the domain is "WIN-VHH3R3QOVVSQ"
- > "SYSTEM" user with the "NT-AUTHORITY" domain

### To configure KSP via the command line:

1. Open a 'CMD' window and browse to the "C:\Program Files\SafeNet\LunaClient" folder.

```
C:\Program Files\SafeNet\LunaClient>lunacm.exe
LunaCM v7.1.0-380. Copyright (c) 2006-2017 SafeNet.
Available HSMs:
Slot Id ->          0
Label ->           Par7.1
Serial Number ->   1213475834431
Model ->          LunaSA 7.1.0
Firmware Version -> 7.1.0
Configuration ->   Luna User Partition With SO (PW) Signing With Cloning Mode
Slot Description -> Net Token Slot
Current Slot Id: 0
```

2. Browse to "C:\Program Files\SafeNet\LunaClient\KSP" for 64-bit Client. 'kspcmd' utility is used to register KSP via command line.
3. Register the PKCS library as configured in crystoki.ini .

```
C:\Program Files\SafeNet\LunaClient\KSP>kspcmd.exe library "C:\Program
Files\SafeNet\LunaClient\cryptoki.dll"
This Servers Host Name is: WIN-VHH3R3QOVVSQ and the logged on user is: Administrator@WIN-
VHH3R3QOVVSQ
Success registering the security library!
```

4. Run this command to register the user " Administrator " with domain " WIN-VHH3R3QOVVSQ " .

```
C:\Program Files\SafeNet\LunaClient\KSP>kspcmd.exe p /s Par7.1 /u Administrator /d WIN-
VHH3R3QOVVSQ
This Servers Host Name is: WIN-VHH3R3QOVVSQ and the logged on user is: Administrator@WIN-
VHH3R3QOVVSQ
Enter challenge for slot '0' <Just hit Enter when using PED>:*****
The slot Par7.1 was successfully and securely registered for user Administrator at domain WIN-
VHH3R3QOVVSQ!
```

5. Run this command to register the user "SYSTEM" with domain "NT-AUTHORITY" .

```
C:\Program Files\SafeNet\LunaClient\KSP>kspcmd.exe p /s Par7.1 /u SYSTEM /d NT_AUTHORITY
This Servers Host Name is: WIN-VHH3R3QOVVSQ and the logged on user is: Administrator@WIN-
VHH3R3QOVVSQ
Enter challenge for slot '0' <Just hit Enter when using PED>:*****
```

The slot Par7.1 was successfully and securely registered for user SYSTEM at domain NT\_AUTHORITY!  
 You have now successfully registered SYSTEM with NT-AUTHORITY

**6.** To verify that the library and domain has been registered :

- a. Open the registry.
- b. Browse to HKEY\_LOCAL\_MACHINE\SOFTWARE\Safenet\SafeNetKSP\CurrentConfig  
 You should have entry CryptokiLibrary = "C:\Program Files\SafeNet\LunaClient\cryptoki.dll"
- c. Browse to HKEY\_LOCAL\_MACHINE / SOFTWARE / Safenet / SafeNetKSP / Slots.  
 You should have entries called "Administrator@WIN-VHH3R3QOVSSQ" and "SYSTEM@NT-AUTHORITY"

## Troubleshooting

When you open the KspConfig program, if it fails to display a list of available slots, then it might be that you have not properly set up your SafeNet Luna Network HSM.

Open a Windows Command Prompt window, change directory to the "C:\Program Files\SafeNet\LunaClient\" directory, and use the "lunacm" command-line utility to see and modify the status of the HSM and HSM Partitions.

## Algorithms Supported

Here, for comparison, are the algorithms supported by our CSP and KSP APIs.

### Algorithms supported by the SafeNet CSP

CALG\_RSA\_SIGN  
 CALG\_RSA\_KEYX  
 CALG\_RC2  
 CALG\_RC4  
 CALG\_RC5  
 CALG\_DES  
 CALG\_3DES\_112  
 CALG\_3DES  
 CALG\_MD2  
 CALG\_MD5  
 CALG\_SHA  
 CALG\_SHA\_256  
 CALG\_SHA\_384  
 CALG\_SHA\_512  
 CALG\_MAC  
 CALG\_HMAC

**Algorithms supported by the SafeNet KSP**

NCRYPT\_RSA\_ALGORITHM

NCRYPT\_DSA\_ALGORITHM

NCRYPT\_ECDSA\_P256\_ALGORITHM

NCRYPT\_ECDSA\_P384\_ALGORITHM

NCRYPT\_ECDSA\_P521\_ALGORITHM

NCRYPT\_ECDH\_P256\_ALGORITHM

NCRYPT\_ECDH\_P384\_ALGORITHM

NCRYPT\_ECDH\_P521\_ALGORITHM

NCRYPT\_DH\_ALGORITHM

NCRYPT\_RSA\_ALGORITHM

## Enabling Key Counting

Key counting allows you to specify the maximum number of times that a key can be used. It sets the upper limit from 0 to MAX(UInt32).

**To enable key counting:**

1. Enter the following command and respond to the prompts. Enter the key usage limit, or enter 0 to turn off the feature:

```
C:\Program Files\SafeNet\LunaClient\KSP> kspcmd usagelimit <usage_limit_number>
```

For example:

```
C:\Program Files\SafeNet\LunaClient\KSP>kspcmd usageLimit 2000
This Servers Host Name is: LUNA_CLIENT and the logged on user is: admin@LUNA_CLIENT
```

```
Enter the key usage limit: 2000
```

```
Successfully configured the key usage limit to 2000 uses.
```


```
C:\Program Files\SafeNet\LunaClient\KSP>kspcmd u
This Servers Host Name is: LUNA_CLIENT and the logged on user is: admin@LUNA_CLIENT
```

```
Warning, max key usage is already set to 2000.
Changing this will not modify previously created keys!
Only keys created subsequent to making this change will be affected!
Do you wish to continue?[y/n]:
```

## SafeNet CSP Calls and Functions

For integration with Microsoft Certificate Services and other applications, the LunaCSP.dll library accepts Crypt calls and gives access to token functions (via CP calls) as listed in this section. Key pairs and certificates are generated, stored and used on the SafeNet Luna Network HSM.

The diagram below depicts the relationship of the SafeNet components to the other layers in the certificate system.

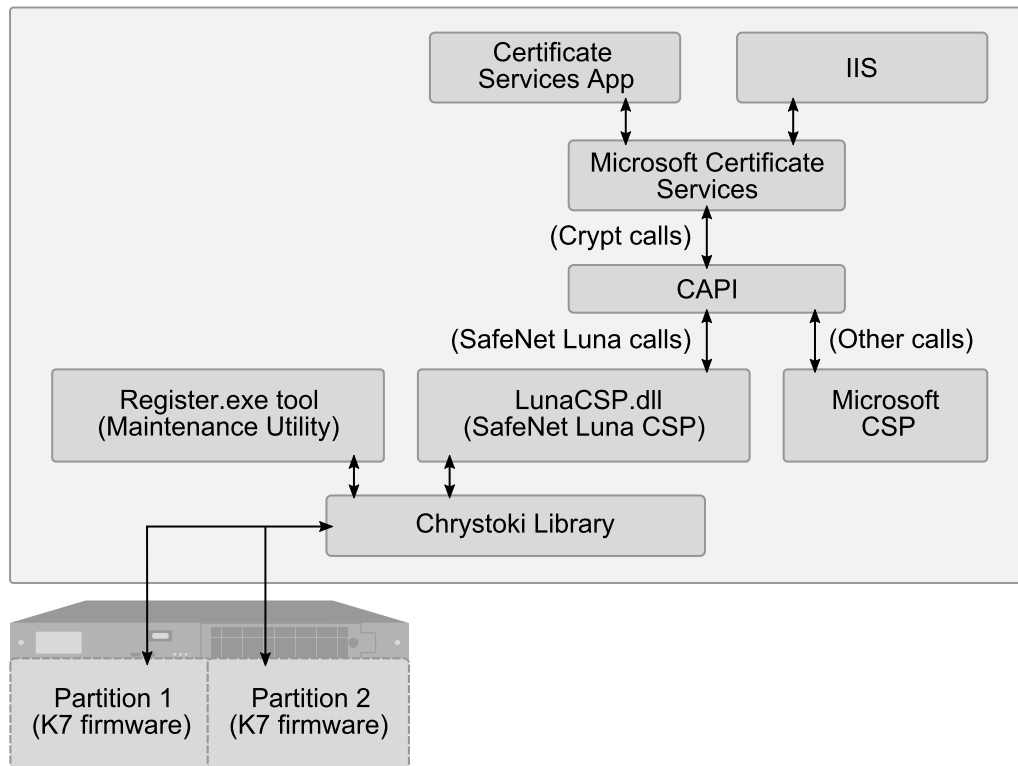**Figure 1: SafeNet CSP architecture**

Note, in the diagram, that the SafeNet CSP routes relevant calls through the statically linked Crystoki library to the HSM via CP calls. Other calls from the application layer – those not directed at the token/HSM, and not matching the SafeNet CSP supported functions (see next section) – are passed to the Microsoft CSP.

## Programming for SafeNet Luna Network HSM with SafeNet CSP

The SafeNet CSP DLL exports the following functions, each one corresponding to an equivalent (and similarly named) Crypt call from the application layer:

- > CPAcquireContext
- > CPGetProvParam
- > CPSetProvParam
- > CPReleaseContext
- > CPDeriveKey
- > CPDestroyKey
- > CPDuplicateKey
- > CPExportKey
- > CPGenKey
- > CPGenRandom
- > CPGetKeyParam
- > CPGetUserKey

- > CPlmportKey
- > CPSetKeyParam
- > CPDecrypt
- > CPEncrypt
- > CPCreateHash
- > CPDestroyHash
- > CPGetHashParam
- > CPHashData
- > CPHashSessionKey
- > CPSetHashParam
- > CPSignHash
- > CPVerifySignature

**NOTE** The CPVerifySignature function is able to verify signatures of up to 2048 bits, regardless of the size of the signatures produced by CPSignHash. This ensures that the CSP is able to validate all compatible certificates, even those signed with large keys.

The MSDN (Microsoft Developers Network) web site provides syntax and descriptions of the corresponding Crypt calls that invoke the functions in the above list.

## Algorithms

SafeNet CSP supports the following algorithms:

- > CALG\_RSA\_SIGN [RSA Signature] [256 - 4096 bits]. The CSP uses the RSA Public-Key Cipher for digital signatures.
- > CALG\_RSA\_KEYX [RSA Key Exchange] [256- 4096 bits] The CSP must use the RSA Public-Key Cipher key exchange. The exchange key pair can be used both to exchange session keys and to verify digital signatures.
- > CALG\_RC2 [RSA Data Securities RC2 (block cipher)] [8 - 1024 bits].
- > CALG\_RC4 [RSA Data Securities RC4 (stream cipher)] [8 - 2048 bits].
- > CALG\_RC5 [RSA Data Securities RC5 (block cipher)] [8 - 2048 bits].
- > CALG\_DES [Data Encryption Standard (block cipher)] [56 bits].
- > CALG\_3DES\_112 [Double DES (block cipher)] [112 bits].
- > CALG\_3DES [Triple DES (block cipher)] [168 bits].
- > CALG\_MAC [Message Authentication Code] (with RC2 only).
- > CALG\_HMAC [Hash-based MAC].
- > CALG\_MD2 [Message Digest 2 (MD2)] [128 bits].
- > CALG\_MD5 [Message Digest 5 (MD5)] [128 bits].
- > CALG\_SHA [Secure Hash Algorithm (SHA-1)] [160 bits].

- > CALG\_SHA224 [Secure Hash Algorithm (SHA-2)] [224 bits].
- > CALG\_SHA256 [Secure Hash Algorithm (SHA-2)] [256 bits].
- > CALG\_SHA384 [Secure Hash Algorithm (SHA-2)] [384 bits].
- > CALG\_SHA512 [Secure Hash Algorithm (SHA-2)] [512 bits].

**NOTE** If you intend to perform key exchanges between the SafeNet CSP and the Microsoft CSP with RC2 keys, the attribute `KP_EFFECTIVE_KEYLEN` must be set to 128 bits. For RC2 and RC4, the salt value of the keys must be transferred by making a call to get the salt value of the original key and to set the salt value of an imported key. This is done with the `CryptGetKeyParam( KP_SALT)` and `CryptSetKeyParam( KP_SALT)` functions respectively.